




Parts Manual

SGCO 3000

TK 53717-4-PM (Rev. 2.20)

SGCO 3000

 TK 53717-2.20

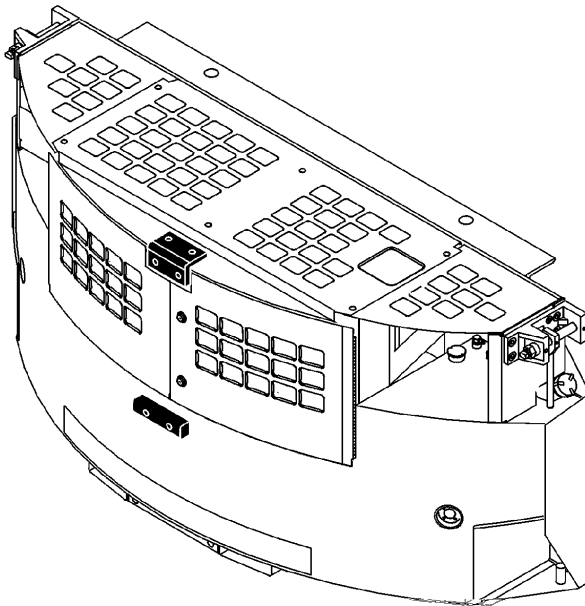

Printed (October 2, 2012)

Copyright © 2007 - Thermo King Corp. - Minneapolis, MN U.S.A.
Electronically printed in U.S.A.

General Information

Tables of Contents

This Parts Manual contains a numerical table of contents listing each assembly name, its associated Grid number and page number. The numerical table of contents is arranged numerically by Grid number. There are references in a parts list referring to other Grid numbers, the numerical table of contents is arranged to facilitate finding the referenced illustrations. At the rear of this parts manual are two indexes, a numerical and alphabetical. The indexes contain all of the part numbers and descriptions which appear in this manual.

Assemblies and Subassemblies

When parts are indented in the description list, they are preceded with a bullet (•). This indicates that the part(s) is available separately or included in an assembly.

GRID NO. 67D6

SWITCH PANEL ASSEMBLY

REF	PART#	DESCRIPTION	QTY
	45-1239	PANEL - assy, switch	1
1	99-1960	• PANEL	1
	99-6280	• • NAMEPLATE - panel	1
2	33-743	• GASKET	1

For example: the switch panel nameplate (99-6280) is available separately, available as part of the switch panel (99-1960) and with the panel assembly (45-1239).

ABBREVIATIONS


The following abbreviations appear in parts manuals

A AC alternating current A/R as required accum accumulator adj adjusting al aluminum alt. alternator A or amp ampere assy assembly	E (continued) evap evaporator exch exchanger exp expansion ext external F F Fahrenheit fill fillister fi fuel injection fl flare fpt female pipe thread ft feet ftg fitting	O os oversized od outside diameter
B bd board brg bearing brkr breaker brkt bracket	H hex hexagon hh hexagon head hd head hp horsepower hsg housing	P pcb printed circuit board pkg package ph phase pos positive psi pounds per square inch
C C Celsius cw clockwise ccw counter-clockwise cam camshaft compr compressor cond condenser conn connecting, connector cyl cylinder	I id inside diameter in inch (2.54 centimeters) incl includes inj injection int internal int th internal tooth	R rad radiator rcvr receiver ref reference reg regulator req required rpm revolutions per minute
D def defrost deg degree dehyd dehydrator dia diameter DC direct current disch discharge diff differential	L liq liquid lg long	S sec second sld solder soc hd socket head sol solenoid spl special sq square ss stainless steel std standard stl steel suct suction sw switch
E EMI Extended Maintenance Interval EEC European Economic Community eng engine	M mm millimeter mpt male pipe thread mod modulating N neg negative No number NS not supplied NSS not sold separately	T term terminal temp temperature thk thick U us undersize V vib vibrasorber W W watt w/ with w/o without

SGCO 3000


Contents

Name	Grid	Page
SGCO 3000 REFERENCE SHEET	.12U34.	.3
UNIT MOUNTING BRACKET	.105C8.	.77
CONNECTORS - DEUTSCH IN-LINE	.112D9.	.63
CAP & CHAIN ASSEMBLY	.119E11.	.51
FUEL TANK GROUP (SGCO)	.130G3.	.43
FUEL PUMP ASSEMBLY (TK486/486E, TK482/482E & TK486V)	.142F8.	.33
MUFFLER GROUP	.158B9.	.47
STRUCTURAL COMPONENTS (REAR VIEW)	.158C5.	.75
NAMEPLATES	.158H4.	.81
WATER PUMP ASSEMBLY (TK486V)	.204F0.	.25
GEAR CASE GROUP (TK486V)	.204F2.	.11
FLYWHEEL HOUSING GROUP (TK486V)	.204F3.	.13
OIL SUMP GROUP (TK486V)	.204F4.	.15
CYLINDER HEAD & VALVE COVER (TK486V)	.204F5.	.7
CRANKSHAFT & PISTON GROUP (TK486V)	.204F6.	.17
INTAKE & EXHAUST MANIFOLD (TK486V)	.204F7.	.19
CAMSHAFT & DRIVE GEAR GROUP (TK486V)	.204F8.	.21
OIL FILTER & PUMP GROUP (TK486V)	.204F9.	.23
FUEL INJECTION GROUP (TK486V)	.204G1.	.27
FUEL INJECTION PUMP GROUP (TK486V, 2200 RPM)	.204G2.	.29
STARTER ASSEMBLY 12 VOLT (TK486V)	.204G3.	.37
GASKET SET (TK486V)	.204G4.	.39
FUEL INJECTION NOZZLE (TK486V)	.204G5.	.35
NAMEPLATES	.208C5.	.79
AIR CLEANER GROUP	.208C6.	.45
BELTS, PULLEY & FAN	.208C7.	.53
BATTERY & CABLE GROUP	.208C9.	.67
ENGINE MOUNTING	.209C3.	.55
ENGINE ELECTRICAL COMPONENTS	.209C4.	.57
ALTERNATOR GROUP	.222D1.	.69
CONTROL BOX SG+ 3000	.222G7.	.59
FUEL FILTER & HOSES	.222G8.	.41
STRUCTURAL COMPONENTS	.223C4.	.71
ENGINE COOLING SYSTEM	.223G8.	.49
DOWNLOAD CABLES	.226E2.	.61
CYLINDER BLOCK GROUP (TK486V)	.236E0.	.5

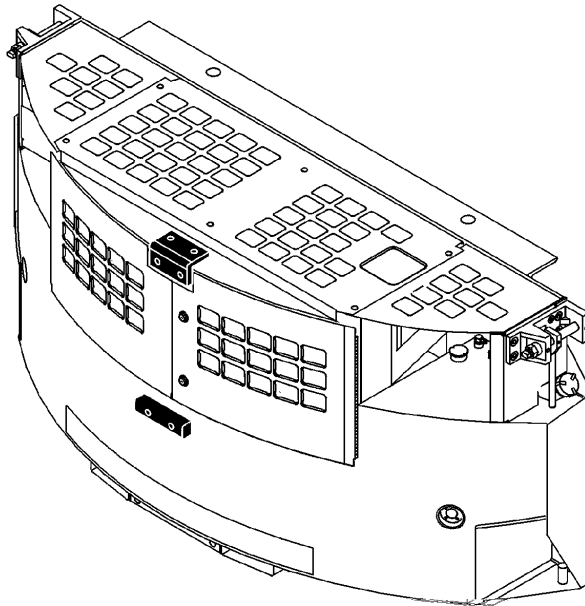 





B/M	DESCRIPTION	Date
718202	SGCO 3000	1/09
062341	SGCO 3000	1/09
062002	Battery	3/07
062007	Controller SG+ 3000	3/07
062015	Large Document Holder	3/07
062017	One Piece Top Panel	3/07
062024	Tamper Evident Fuel Cap	3/07
062036	Anti-Theft Option	3/07
062045	Nameplates - HAMBURG SUD	3/07
062048	Nameplates - CNIU	3/07
062049	Electric Fuel Heater	3/07
062055	Throttle Solenoid ECOPower	8/10
062075	Fuel Strainer	5/09
062097	Throttle Solenoid ECOPower +	8/10
062246	Nameplates - APL/APMG	3/07
062255	Nameplates - TAL	3/07
062256	Nameplates - FLEXI-VAN	3/07
062257	Nameplates - OOCL	3/07
062277	Nameplates - CROWLEY	3/07
062278	Nameplates - TRITON	3/07
062282	Nameplates - GENSTAR	3/07
062294	230V	3/07
062312	Clip-On Header Pin Option	3/07
062316	Nameplates - HMM	3/07
062321	Nameplates - HAPAG	3/07
062323	Nameplates - YMLG	3/07

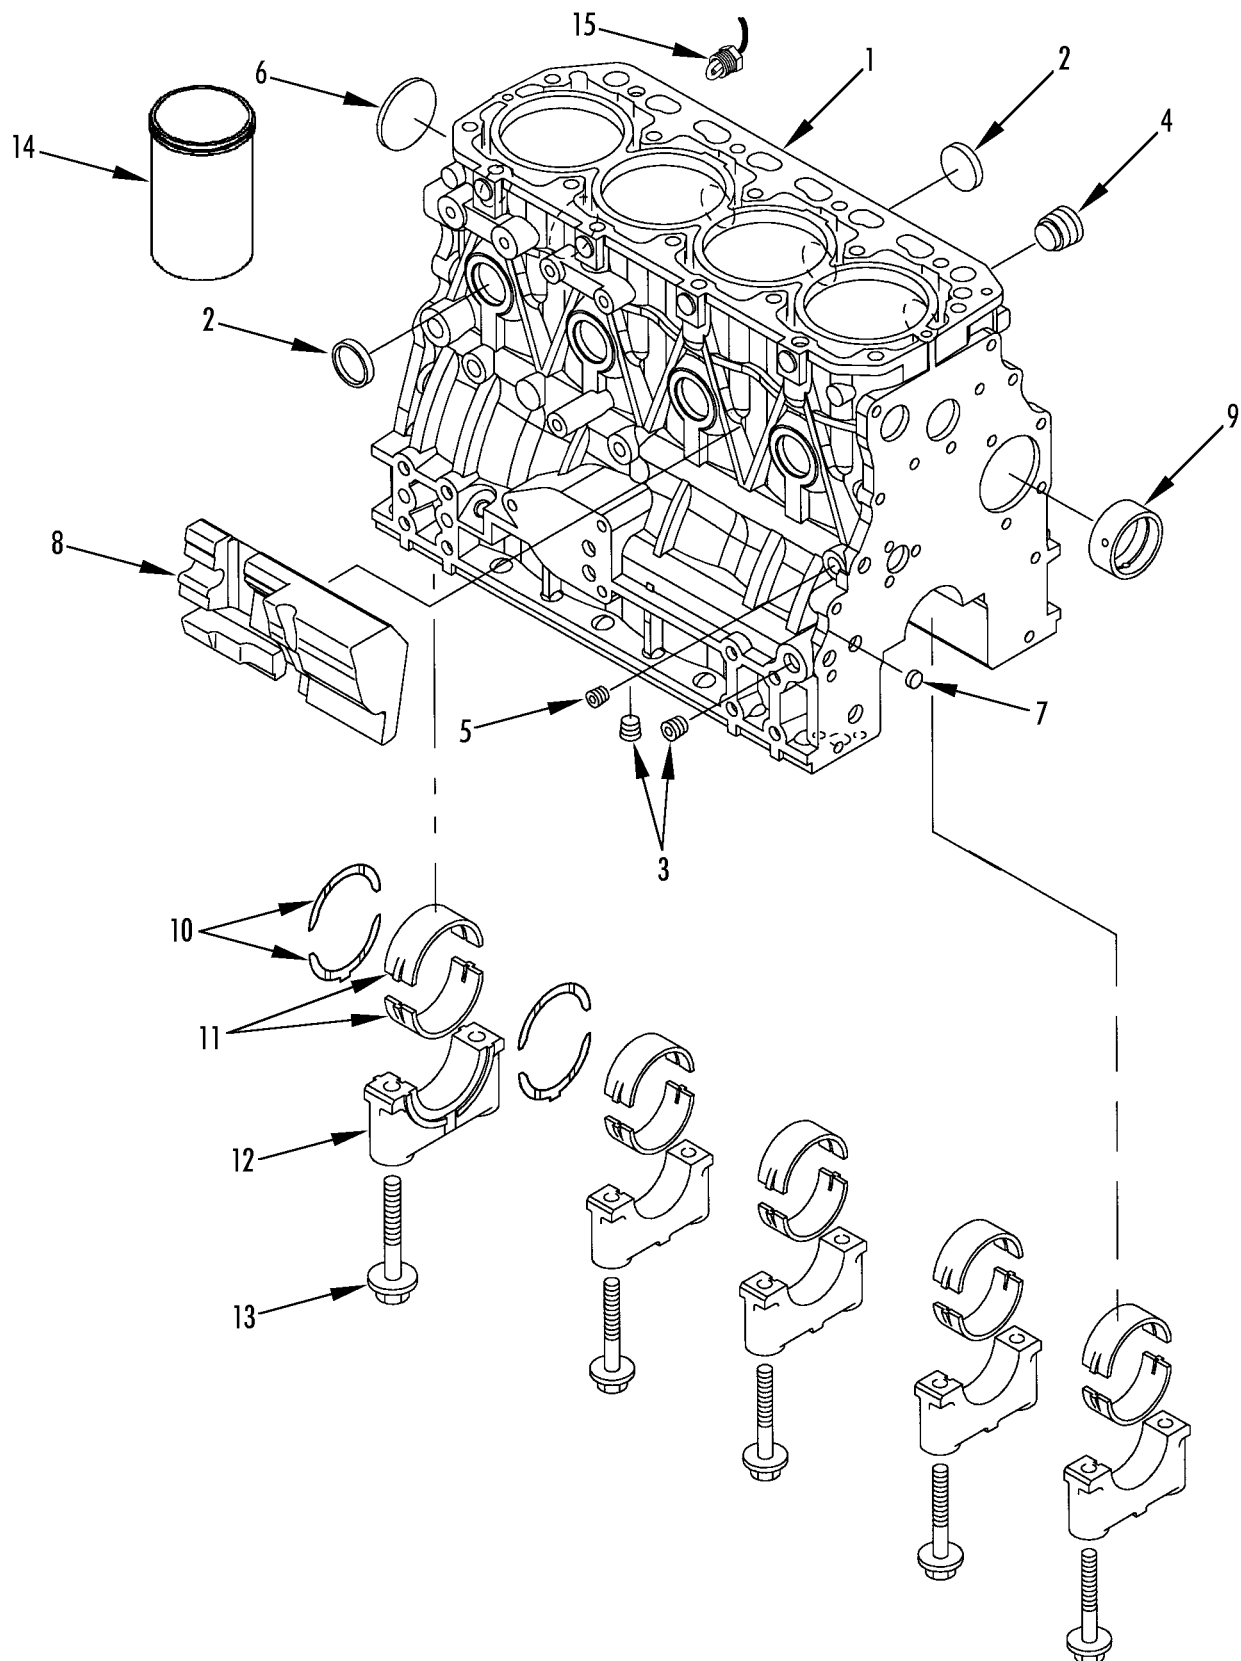 




REF	PART#	DESCRIPTION	QTY
	101-379	ENGINE (TK486V, 12V, 2200 rpm)	1
1	NSS	• BLOCK - cylinder	1
2	11-5499	• PLUG - frost (30 mm)	8
3	55-6176	• PLUG - pipe (1/4)	3
4	55-6229	• PLUG	1
5	55-4593	• PLUG - pipe (1/8)	1
6	51-1145	• PLUG - frost (50 mm)	1
7	11-6555	• PLUG - frost (12 mm)	2
8	13-318	• SPACER	1
9	13-926	• BUSHING - camshaft	1
10	13-927	• BEARING - thrust (std)	2
	13-928	• BEARING - thrust (0.25 mm os)	2
11	13-920	• BEARING - main	5
	13-921	• BEARING - main (0.25 mm us)	5
12	NSS	• CAP - bearing	4
13	55-8852	• BOLT - bearing cap	10
14	11-8919	LINER - service	4
15	41-2317	HEATER - frost plug	1

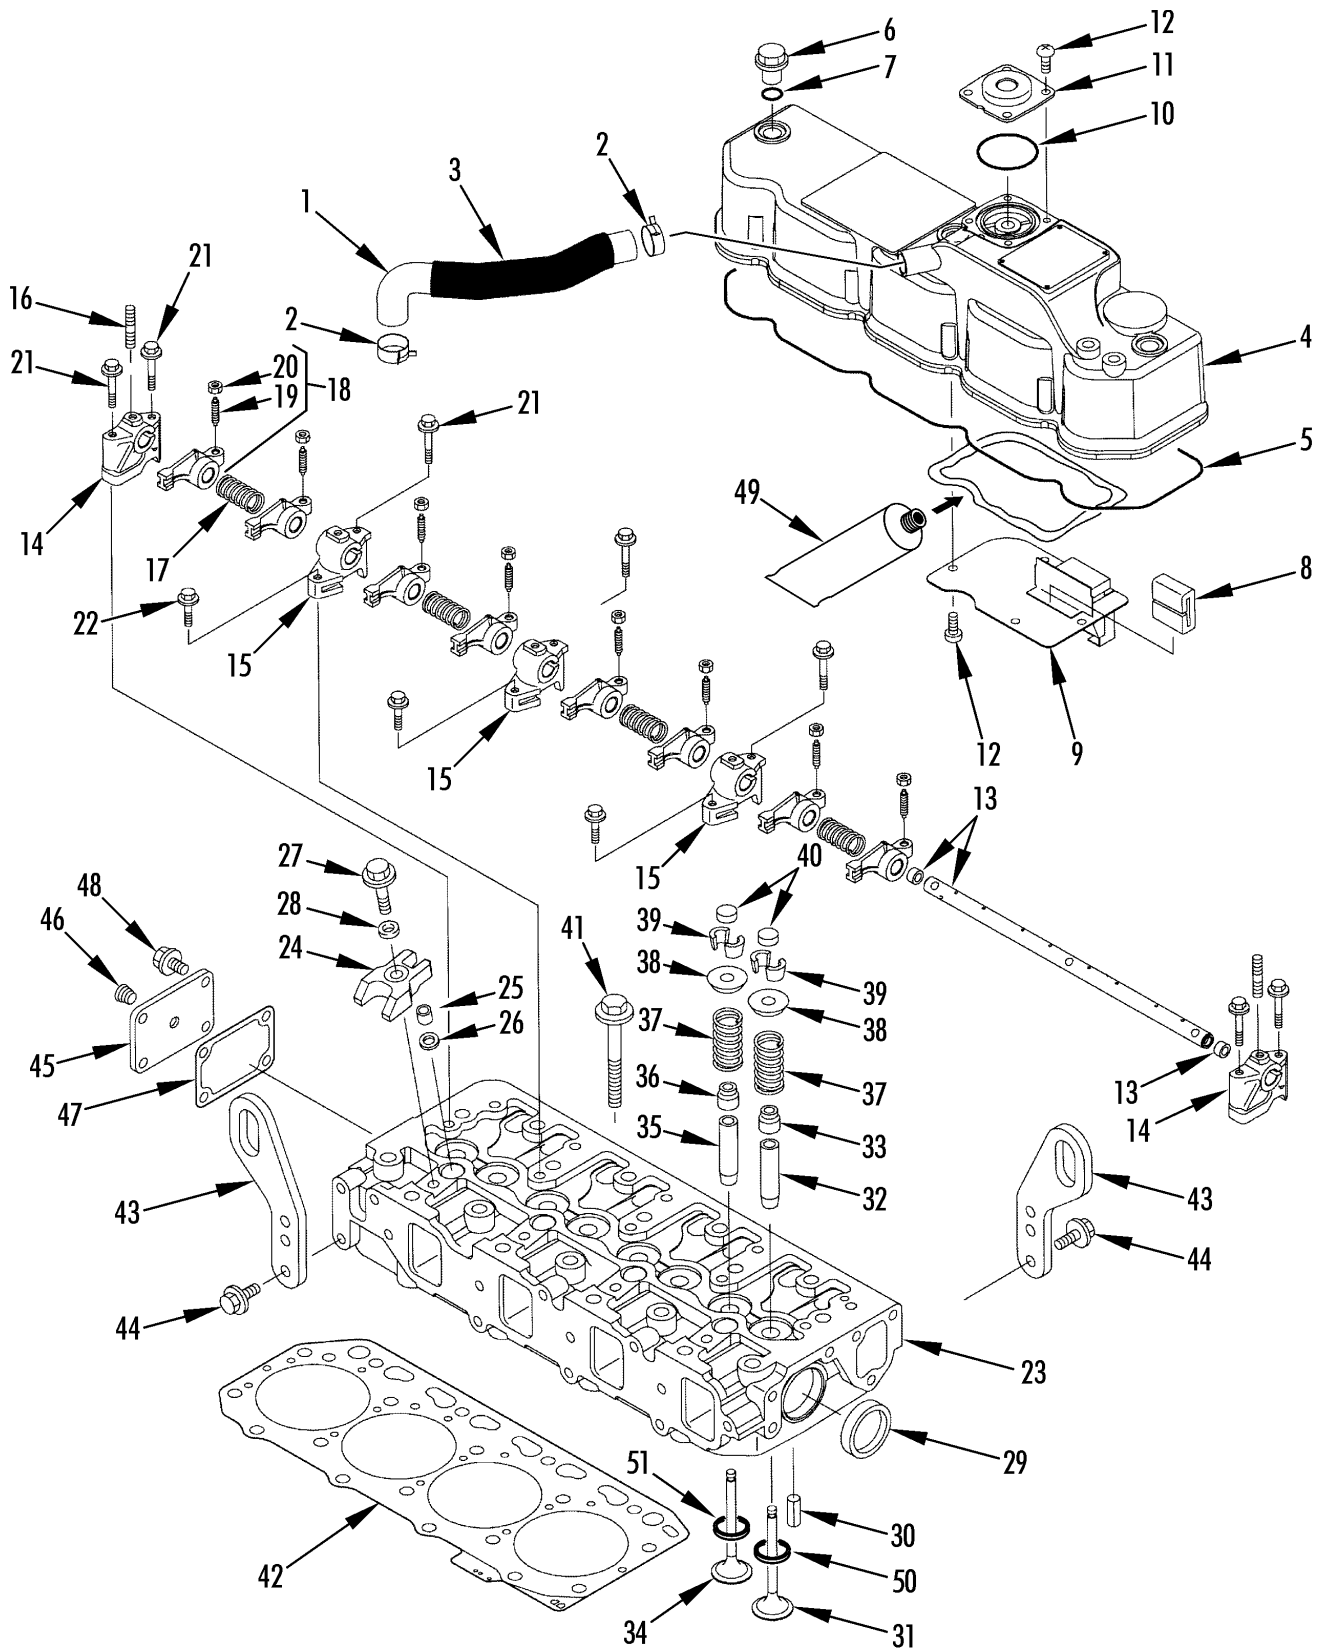 

 


REF	PART#	DESCRIPTION	QTY
1	13-344	PIPE - breather	1
2	55-8442	• CLAMP - hose (24)	2
3	91-3542	TUBE - sponge (insulation, cut to 11.0 in lg)	1
4	13-337	COVER - valve	1
5	13-340	• GASKET - valve cover	1
6	11-5103	• KNOB - valve cover	3
7	33-3512	• O-RING - cover	3
8	11-8671	• BAFFLE - breather	1
9	13-338	• PLATE - baffle	1
10	33-2762	• O-RING	1
11	13-339	• COVER - breather	1
12	51-598	• SCREW - cover	8
13	13-332	SHAFT - rocker arm	1
	13-335	• SHAFT - rocker arm	1
14	13-333	• SUPPORT - rocker arm	2
15	13-334	• SUPPORT - rocker arm	3
16	55-6245	• STUD - valve cover	3
17	11-6704	• SPRING	4
18	13-336	• ARM - rocker	8
19	55-8859	•• SCREW - valve adjust	8
20	55-8860	•• NUT	8
21	55-6193	SCREW - support (50 mm)	7
22	55-6246	SCREW - support (25 mm)	3
23	12-870	HEAD - cylinder	1
24	13-342	• RETAINER - nozzle	4
25	13-341	• PROTECTOR - nozzle	4
26	11-6707	• GASKET - copper (nozzle seat)	4
27	55-6191	• SCREW - nozzle retainer	4
28	51-1151	• WASHER	4
29	11-6567	• PLUG - frost (40 mm)	1
30	55-5803	• PIN - spring	2
31	13-932	• VALVE - intake	4
32	11-8928	• GUIDE - valve (intake)	4
33	11-8935	• SEAL - valve stem (intake)	4
34	13-659	• VALVE - exhaust	4
35	11-8929	• GUIDE - valve (exhaust)	4
36	11-8934	• SEAL - valve stem (exhaust, marked w/ yellow stripe)	4
37	11-8932	• SPRING - valve	8

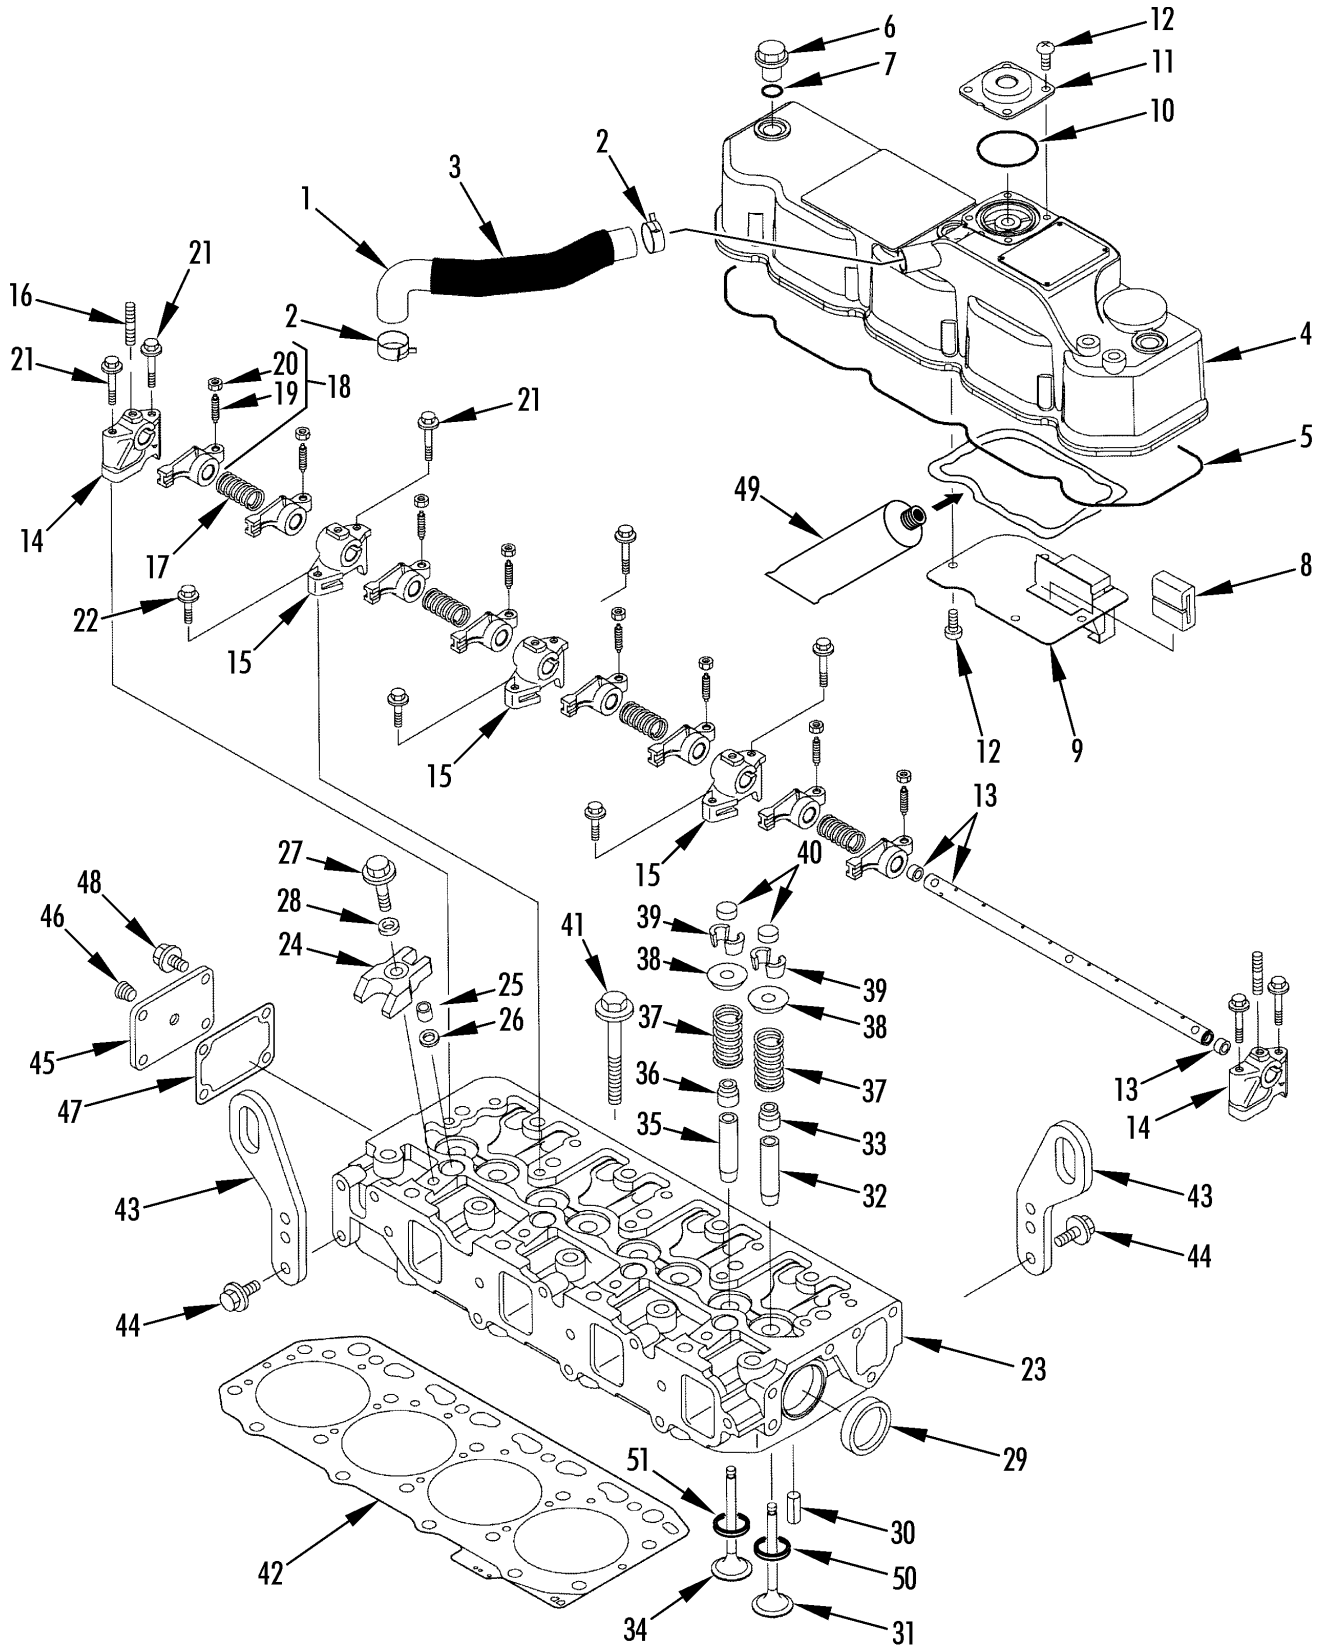 




REF	PART#	DESCRIPTION	QTY
38	11-8933	• RETAINER - spring	8
39	55-8858	• KEEPER - valve	8
40	11-8936	• CAP - valve	8
41	55-8853	SCREW - cylinder head	18
42	33-4122	GASKET - cylinder head (SB-210/130/230)	1
	33-4515	GASKET - cylinder head (SB-310/330)	1
43	13-126	LIFTER - engine	2
44	55-5801	SCREW - lifter	4
45	11-8942	FLANGE	1
46	55-5763	• PLUG	1
47	33-2934	GASKET - flange	1
48	55-8441	SCREW - flange	4
49	203-348	GASKET - liquid	A/R
50	13-648	SEAT - valve (intake)	4
51	11-8927	SEAT - valve (exhaust)	4

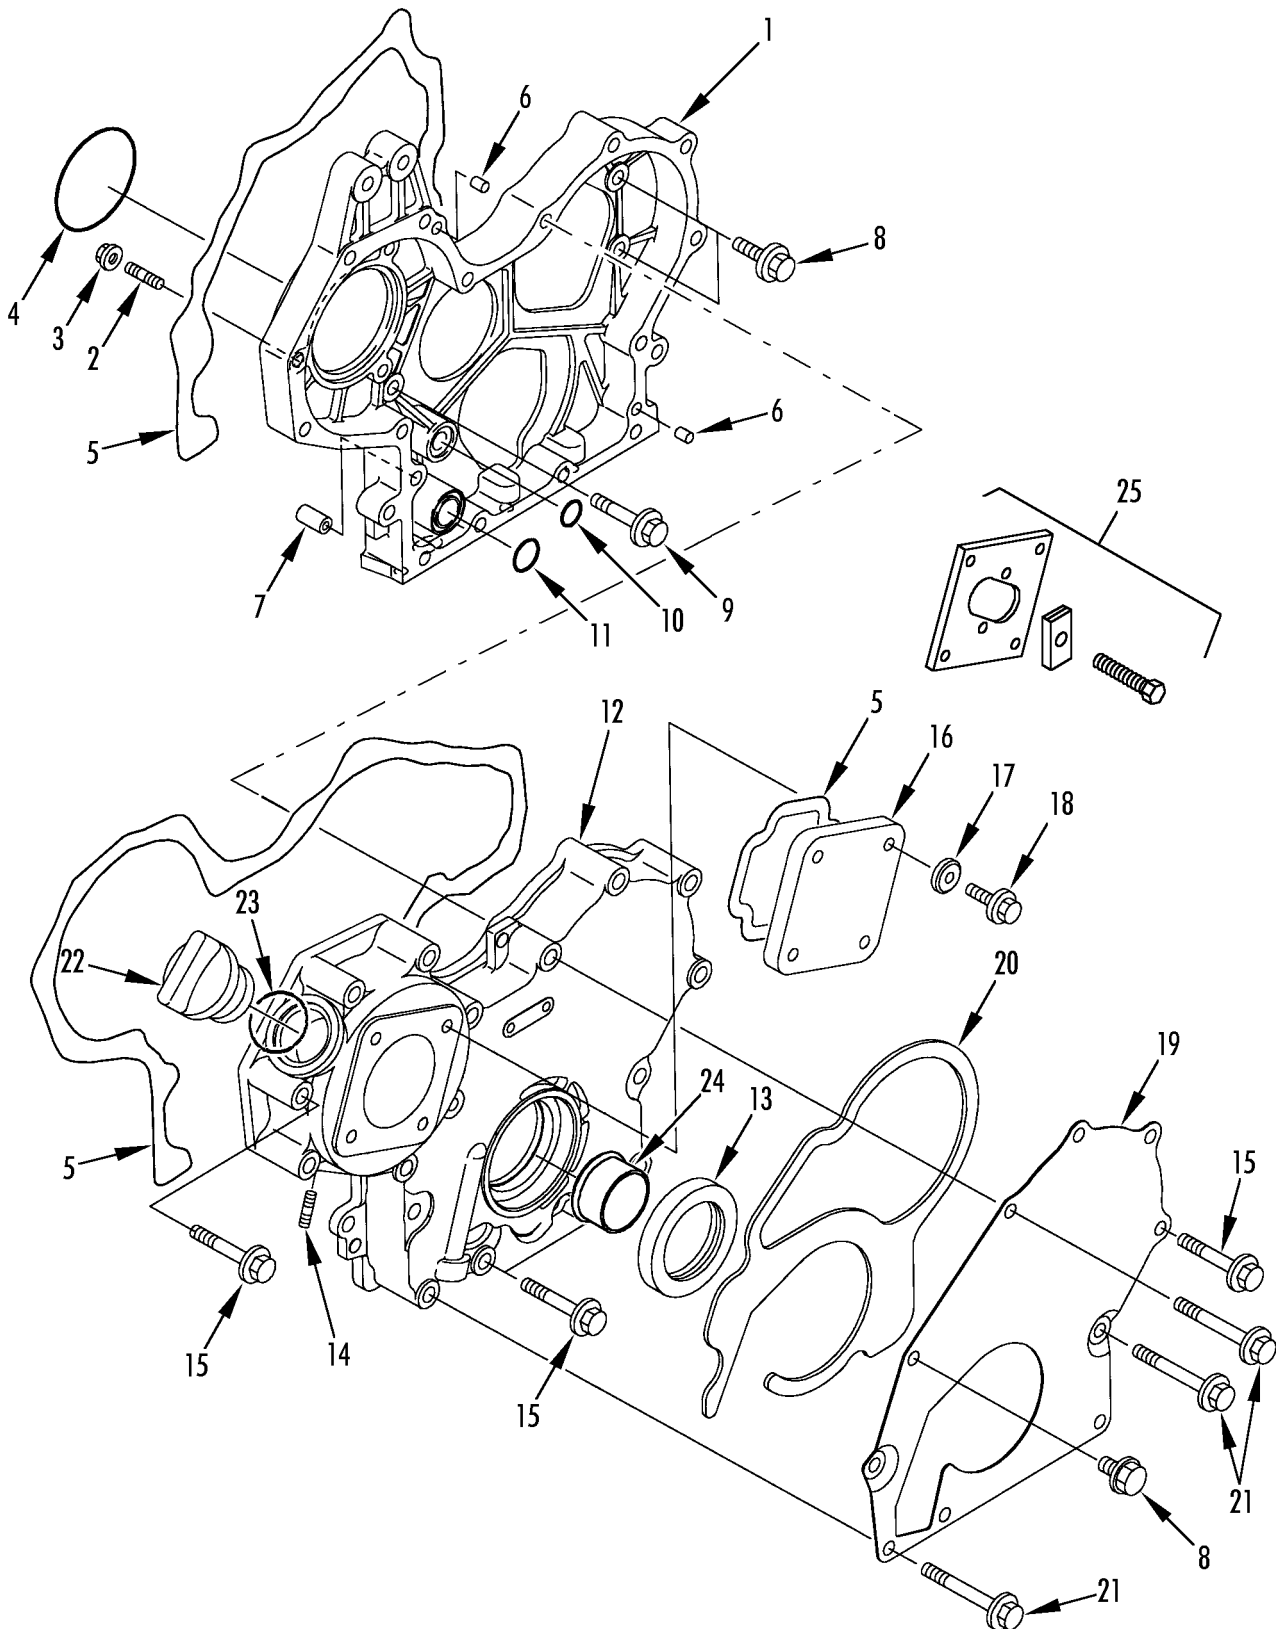 




REF	PART#	DESCRIPTION	QTY
1	13-319	CASE - gear	1
2	51-1146	STUD - injection pump	3
3	51-594	NUT	3
4	33-1953	O-RING - injection pump	1
5	203-348	GASKET - adhesive	A/R
6	55-5816	PIN - dowel	1
7	55-6234	PIN - dowel	2
8	55-8441	SCREW - case (16 mm)	3
9	55-5809	SCREW - case (45 mm)	1
10	33-3821	O-RING - gear case (16 mm)	1
11	33-4089	O-RING - gear case (20 mm)	1
12	13-322	COVER - gear case	1
13	33-4088	• SEAL - oil	1
14	55-6367	• STUD - fuel pump	3
15	55-6236	SCREW - cover (55 mm)	8
16	11-5082	COVER	1
17	55-4622	WASHER - sealing	4
18	55-8854	SCREW - cover (12 mm)	4
19	13-321	COVER - sound shield	1
20	33-4087	GASKET - cover	1
21	55-6237	SCREW - cover (85 mm)	7
22	11-5091	CAP - oil fill	1
23	33-1954	O-RING - cap	1
24	11-9592	SPEEDI SLEEVE - front seal	1
25	204-1011	TOOL - injection pump gear remover	1

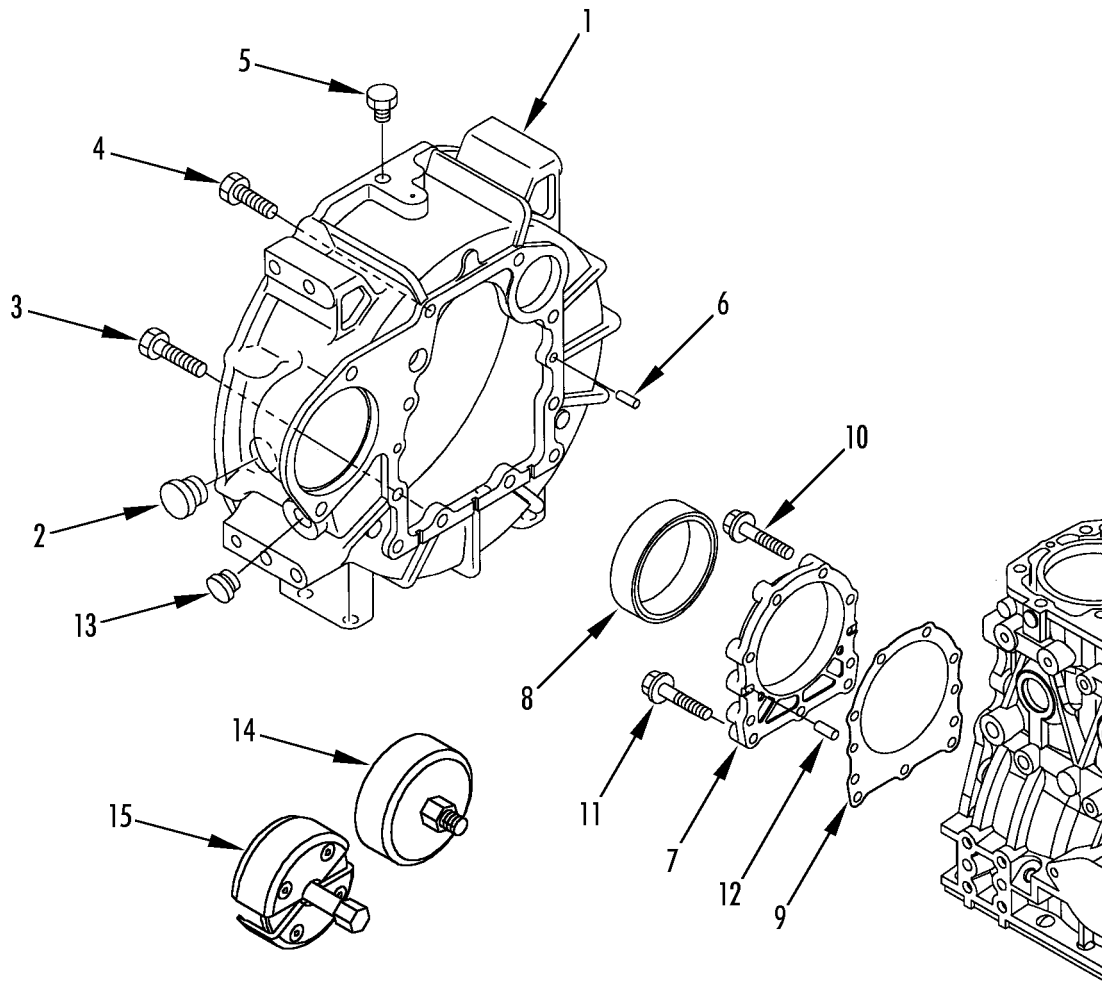 




REF	PART#	DESCRIPTION	QTY
1	12-867	HOUSING - flywheel	1
2	11-6031	PLUG - access hole	1
3	55-8856	SCREW - housing (30 mm)	4
4	55-6537	SCREW - housing (25 mm)	6
5	55-8855	SCREW - plug (M12 x 16)	1
6	55-5816	PIN - dowel	2
7	11-8924	CASE - oil seal	1
8	33-2974	SEAL - oil (axial)	1
9	33-2969	GASKET - oil seal case	1
10	51-1149	SCREW - case (30 mm)	6
11	55-6191	SCREW - case (35 mm)	3
12	55-5816	PIN - dowel	2
13	51-1162	SCREW - housing	1
14	204-952	TOOL - seal installer	1
15	204-994	TOOL - seal remover	1

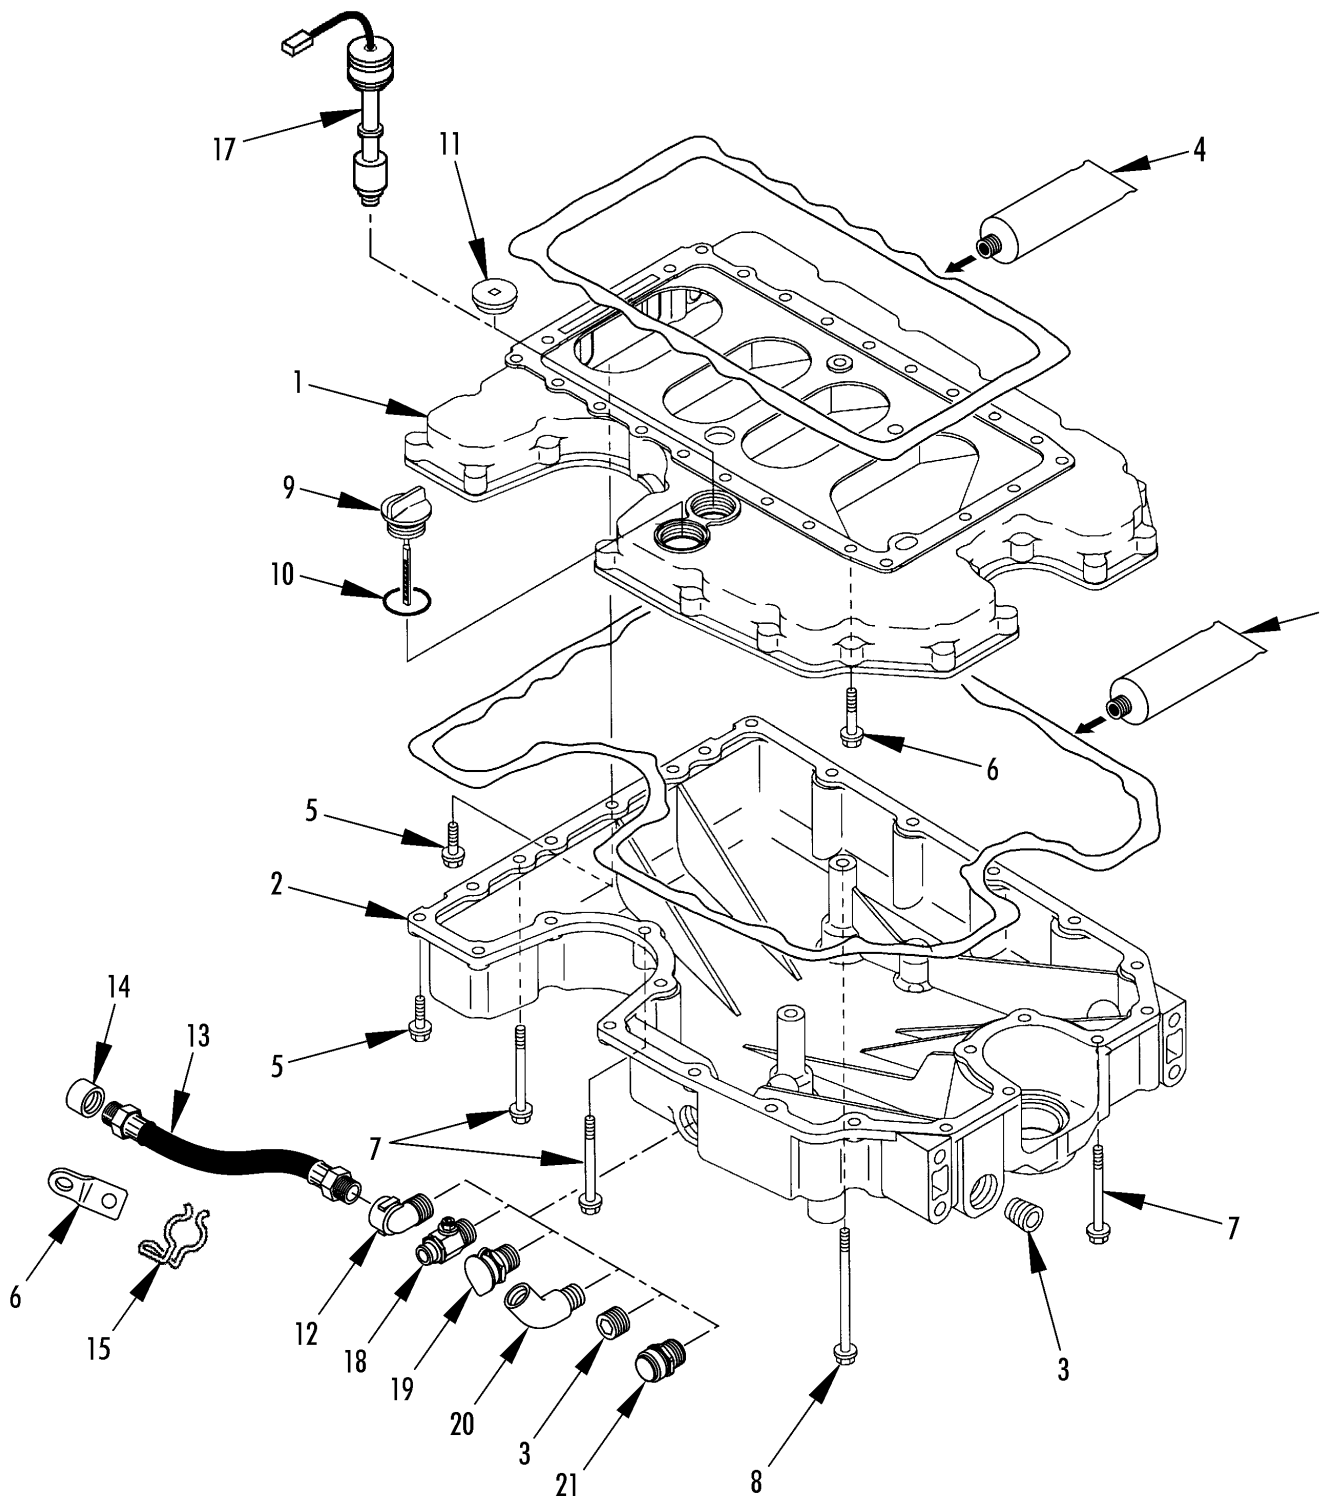 




REF	PART#	DESCRIPTION	QTY
1	12-868	SUMP - oil (upper)	1
2	12-869	SUMP - oil (lower)	1
3	55-8437	• PLUG - drain	2
4	203-348	GASKET - adhesive (RTV silicone)	A/R
5	55-6246	SCREW - oil base (25 mm)	15
6	55-5809	SCREW - oil base (45 mm)	19
7	55-6237	SCREW - oil base (85 mm)	12
8	51-1150	SCREW - oil base (120 mm)	1
9	11-8667	DIPSTICK	1
10	33-4090	O-RING - dipstick	1
11	11-8923	CAP (units w/o oil level switch, push-in type)	1
12	55-9167	ELBOW - hose (90 degree)	1
13	11-8984	HOSE - oil drain (10 in long)	1
	11-5911	HOSE - oil drain (17 in long)	1
14	55-5081	CAP - hose	1
15	91-4823	CLIP - hose	1
	55-1587	SCREW - clip	1
	55-2086	FLATWASHER	1
	55-4953	NUT	1
16	91-7191	BRACKET - clip	1
17	41-4470	SWITCH - oil level (threaded type)	1
	33-4160	• O-RING - switch	1
18	11-9338	VALVE - oil drain	1
19	11-9448	FITTING - oil drain (ESOC)	1
20	55-3744	ELBOW - hose (45 degree)	1
21	13-1063	FITTING - oil drain w/cap	1

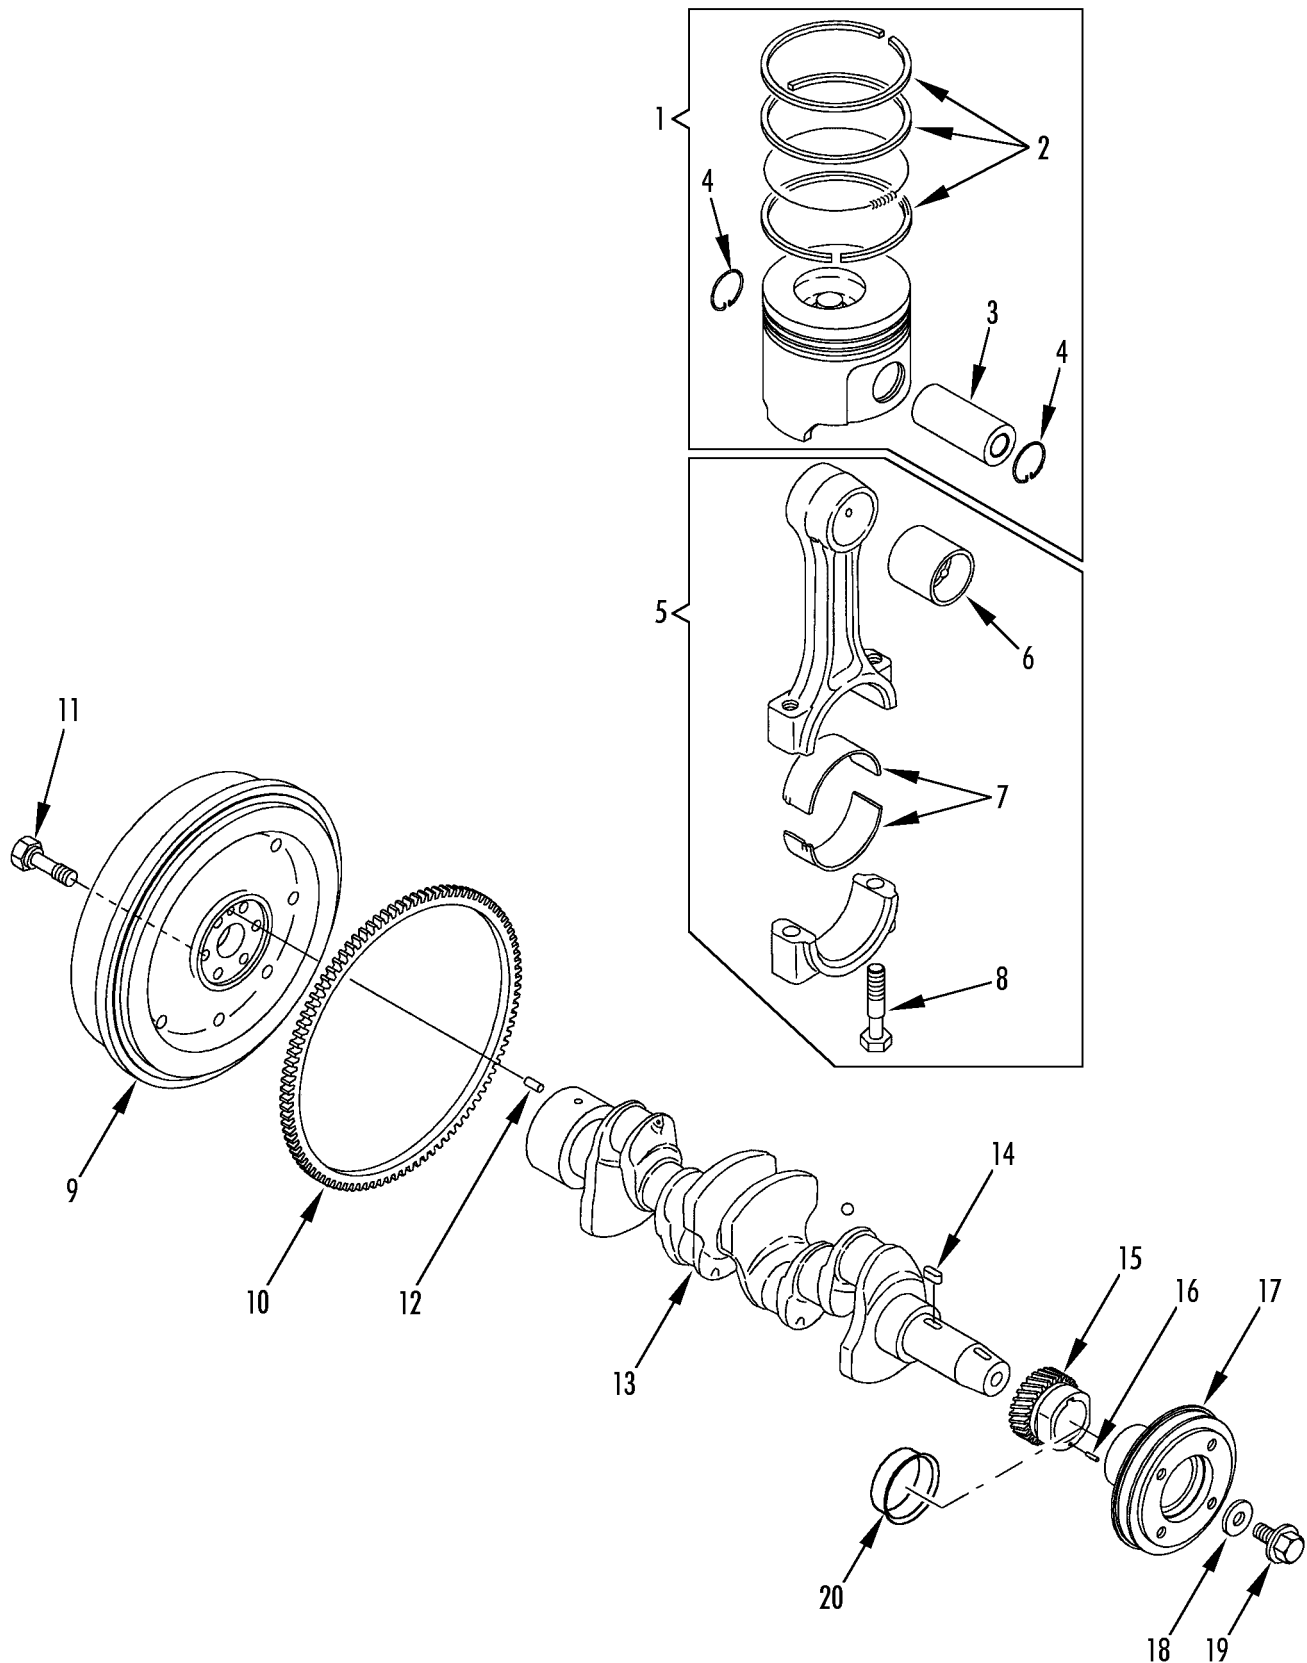 




REF	PART#	DESCRIPTION	QTY
1	13-1064	PISTON (std, incl 2-4)	4
	13-1065	PISTON (w/ ring, 0.25 mm os)	4
	13-1066	PISTON (w/ ring, 0.50 mm os)	4
2	13-355	RING SET (std)	2
	13-461	RING SET (0.25 mm os)	4
	13-455	RING SET (0.50 mm os)	4
3	11-8950	PIN - piston	4
4	11-8951	CIRCLIP	8
5	11-8952	ROD - connecting	4
6	11-8953	BUSHING - piston pin	4
7	13-924	BEARING - connecting rod (std)	4
	13-925	BEARING - connecting rod (0.25 mm us)	4
8	55-8865	BOLT - connecting rod	8
9	12-750	FLYWHEEL	1
10	11-8947	• GEAR - ring (before 11/08)	1
	13-1138	• GEAR - ring (11/08 & after)	1
11	55-8864	BOLT - flywheel	6
12	55-5816	PIN - dowel	1
13	13-351	CRANKSHAFT	1
14	11-6719	• KEY - gear	1
15	13-352	GEAR - crankshaft	1
16	55-4668	PIN - spring	1
17	13-353	PULLEY - crankshaft	1
18	55-6249	WASHER	1
19	55-6250	BOLT - v-pulley	1
20	11-9592	SPEEDI SLEEVE - front seal	1

 NOTE: NOTE: Engines before serial number EA00749, use gear ring 11-8947. Engines with serial number EA00749 and after, use gear ring 13-1138.

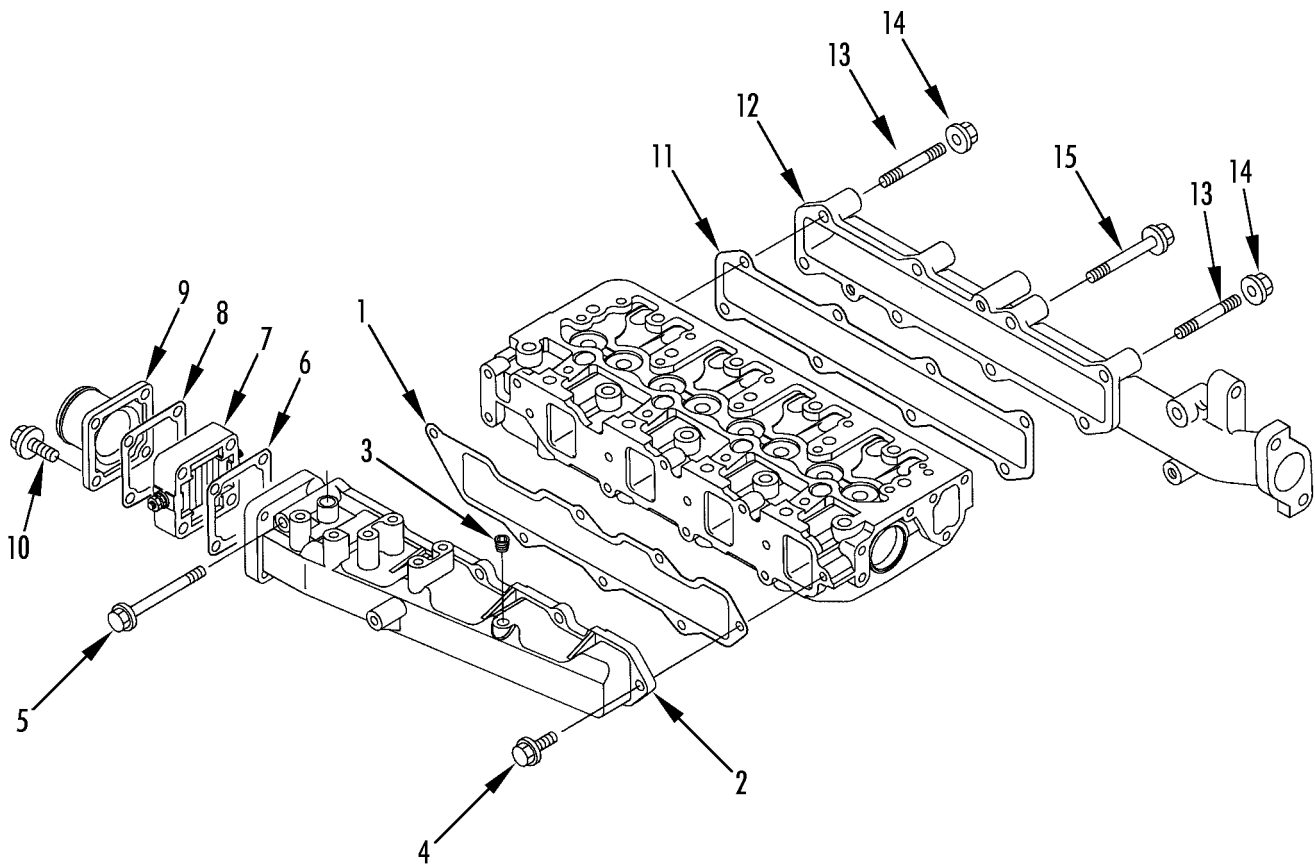




REF	PART#	DESCRIPTION	QTY
1	33-2936	GASKET - intake manifold	1
2	13-343	MANIFOLD - intake	1
3	55-5763	• PLUG	1
4	55-6188	SCREW - intake manifold (20 mm)	6
5	55-8717	SCREW - intake manifold (80 mm)	1
6	33-2765	GASKET - air heater	1
7	41-2147	HEATER - air	1
8	33-2764	GASKET - inlet	1
9	11-9266	INLET - intake manifold	1
10	55-6191	SCREW - inlet (35 mm)	4
11	33-2937	GASKET - exhaust manifold	1
12	11-8944	MANIFOLD - exhaust	1
13	51-1153	STUD - exhaust manifold	2
14	51-594	NUT	2
15	51-1152	SCREW - exhaust manifold (40 mm)	7

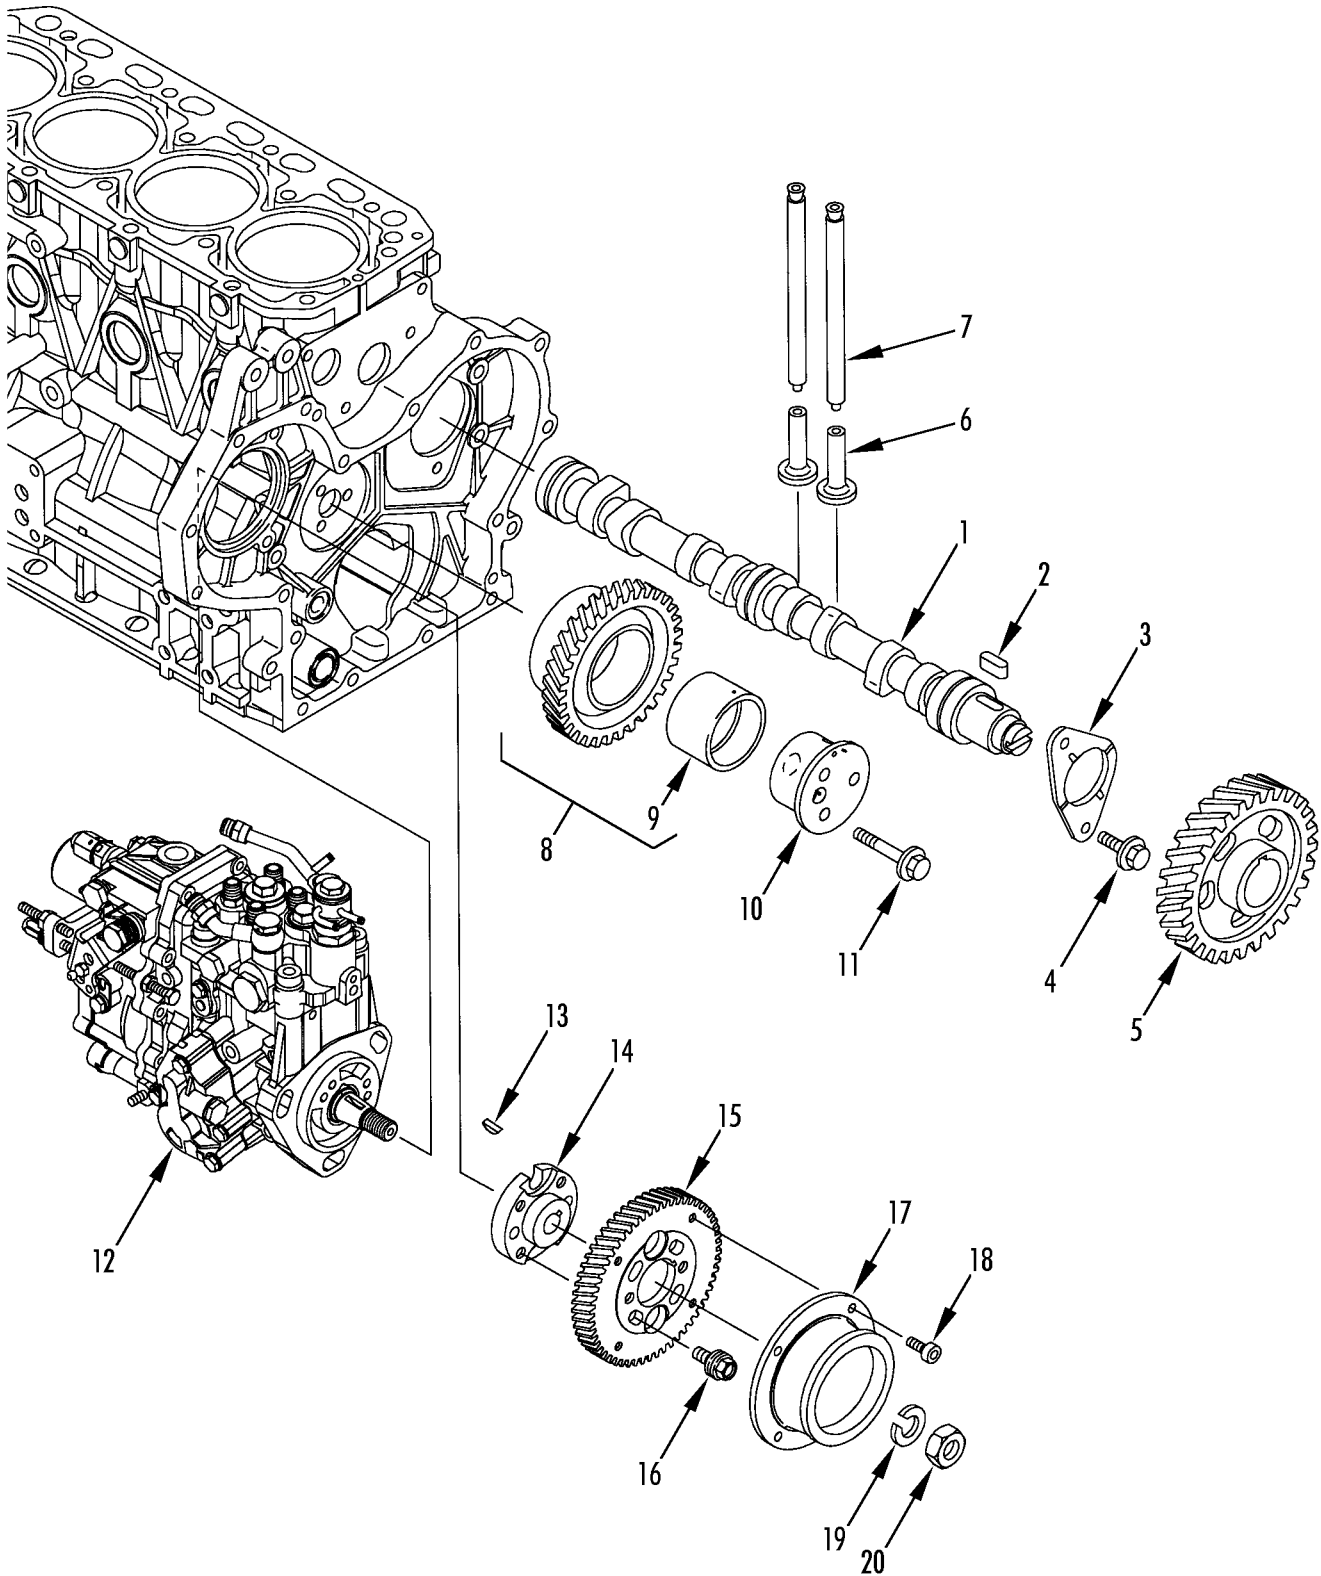 




REF	PART#	DESCRIPTION	QTY
1	11-9261	CAMSHAFT (incl items 2 thru 5)	1
2	11-6719	• KEY - gear	1
3	NSS	• BEARING - thrust	1
4	55-5801	• BOLT - plate	2
5	NSS	• GEAR - camshaft	1
6	11-6717	TAPPET	8
7	11-8945	ROD - push	8
8	13-930	GEAR (w/ bushing)	1
9	13-348	• BUSHING - idler gear	1
10	13-345	SHAFT - idler gear	1
11	55-5772	SCREW - gear	2
12	101-362	PUMP - fuel injection (2200 rpm, see 204G1)	1
	101-354	PUMP - fuel injection (2600 rpm, see 205C5)	1
13	51-2009	KEY - gear	1
14	13-350	FLANGE	1
15	13-349	GEAR - injection pump	1
16	55-9222	SCREW - gear	4
17	13-346	CAM - feed pump	1
18	55-9223	SCREW - cam	4
19	51-1154	WASHER	1
20	51-1155	NUT	1

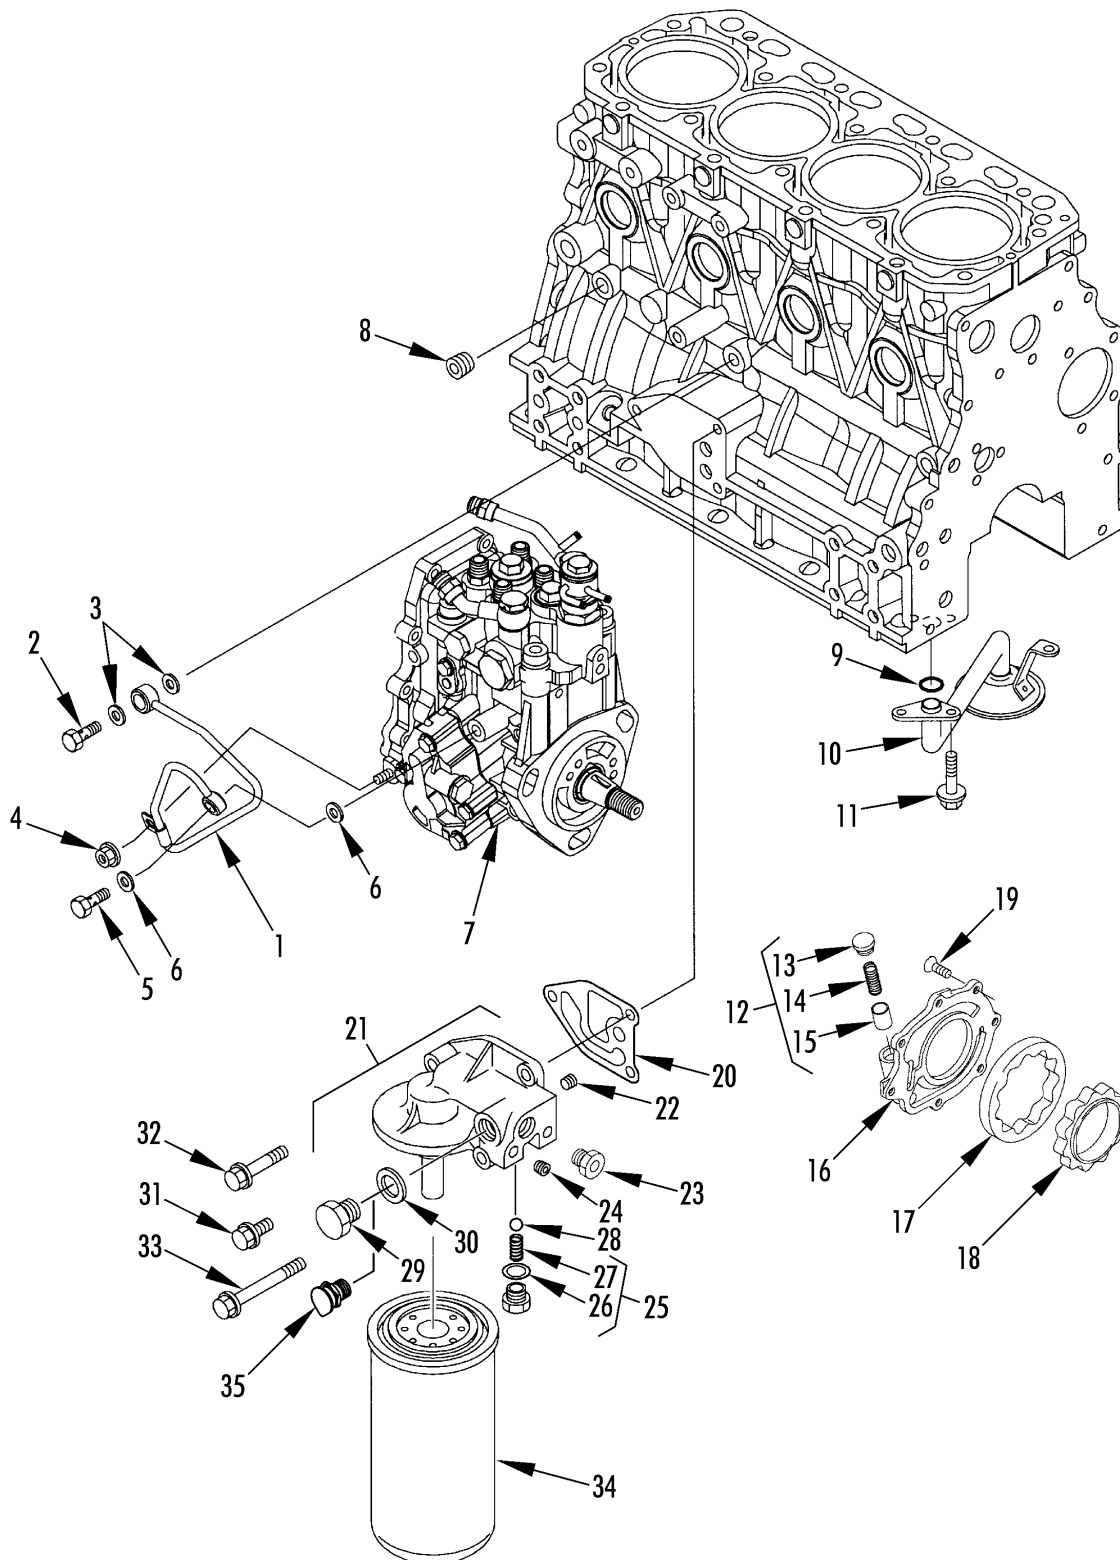 




REF	PART#	DESCRIPTION	QTY
1	13-357	PIPE - oil	1
2	55-4644	BOLT - eye	1
3	33-3833	SEAL - washer (10)	2
4	55-5792	NUT	1
5	51-1158	BOLT - eye	1
6	55-4622	WASHER - sealing (8)	2
7	101-362	PUMP - fuel injection (2200 rpm, see 204G1)	1
8	51-1159	PLUG	1
9	33-4089	O-RING - pipe	1
10	13-356	PIPE - oil pickup	1
11	55-8441	SCREW - pipe (16 mm)	2
12	13-323	COVER - oil pump	1
13	51-1147	• PLUG	1
14	13-325	• SPRING	1
15	13-324	• VALVE - check	1
16	13-326	• COVER - oil pump	1
17	13-328	ROTOR - outer	1
18	13-327	ROTOR - inner	1
19	51-592	SCREW - oil pump	7
20	33-2931	GASKET - oil filter bracket	1
21	11-9354	BRACKET - filter (incl 22 - 30)	1
22	11-8964	• ORIFICE	1
23	51-593	• PLUG (3/8)	1
24	55-5763	• PLUG (1/8)	2
25	11-8995	• VALVE - check	1
26	51-1157	•• WASHER - sealing (14)	1
27	11-8965	•• SPRING	1
28	55-8868	• BALL	1
29	51-1156	• PLUG	1
30	51-1157	• WASHER - sealing (14)	1
31	55-6188	SCREW - bracket (20 mm)	1
32	55-5809	SCREW - bracket (45 mm)	1
33	55-8869	SCREW - bracket (75 mm)	1
34	11-9182	FILTER - oil (EMI 3000)	1
35	11-9447	FITTING - oil inlet (ESOC)	1

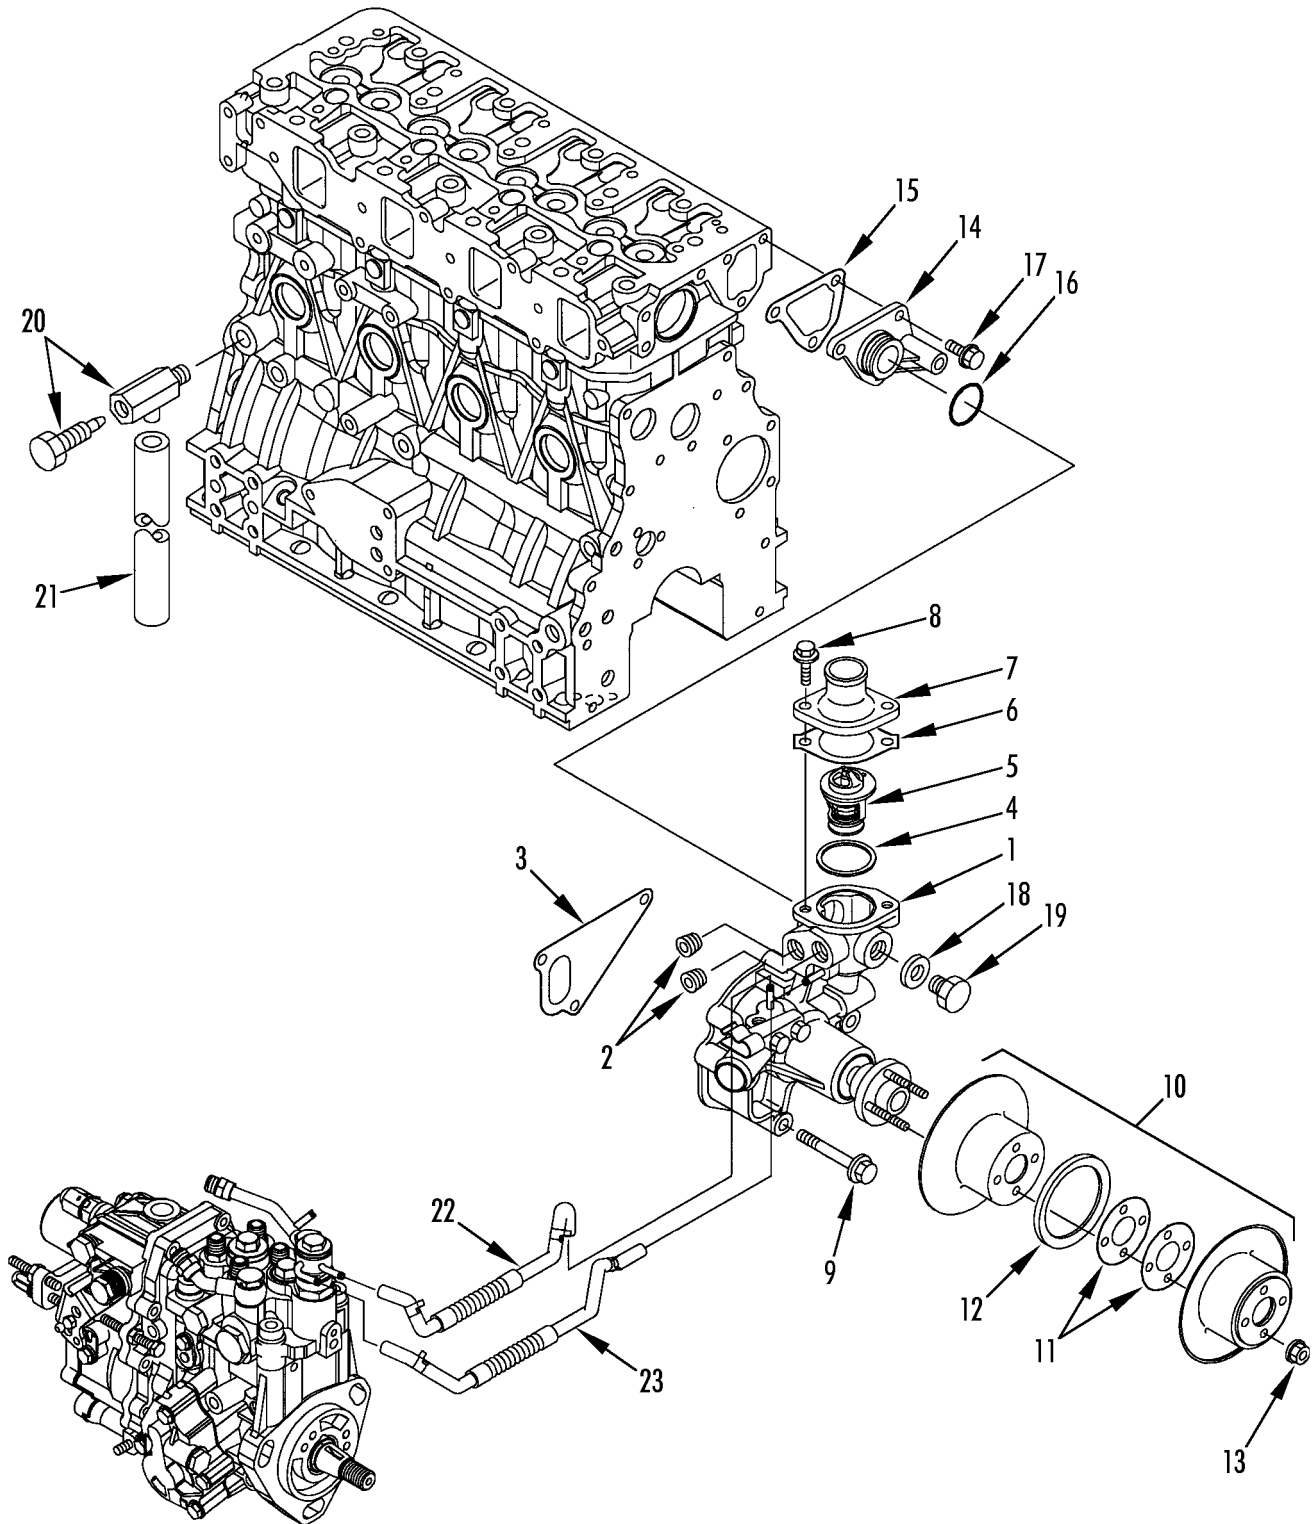 




REF	PART#	DESCRIPTION	QTY
1	13-509	PUMP - water (ELC compatible)	1
	813-509	PUMP - water (ELC compatible, remanufactured)	1
2	51-607	• PLUG	2
3	33-3096	•• GASKET - water pump	1
	30-295	GASKET SET (inc items 3, 4, 6, 16)	1
4	33-2768	GASKET	1
5	13-385	THERMOSTAT (160 F, 71 C)	1
6	33-2767	GASKET	1
7	11-8675	COVER - thermostat	1
8	55-6188	SCREW - thermostat	2
9	55-6248	SCREW - pump	3
10	13-358	PULLEY - water pump	1
11	77-1427	• SHIM (1 mm)	A/R
	77-2752	• SHIM (0.5 mm)	A/R
12	77-1428	• SPACER	1
13	55-5792	NUT	4
14	13-815	JOINT - pump	1
15	33-3097	GASKET - joint	1
16	33-3098	O-RING - joint	1
17	55-8441	SCREW - joint	3
18	33-1745	WASHER - sealing	1
19	11-9256	PLUG	1
20	55-5780	COCK - drain	1
21	13-360	HOSE - drain	1
22	13-363	HOSE - inj pump to water pump	1
23	13-514	HOSE - inj pump to water pump	1
	51-588	CLAMP - hose	4

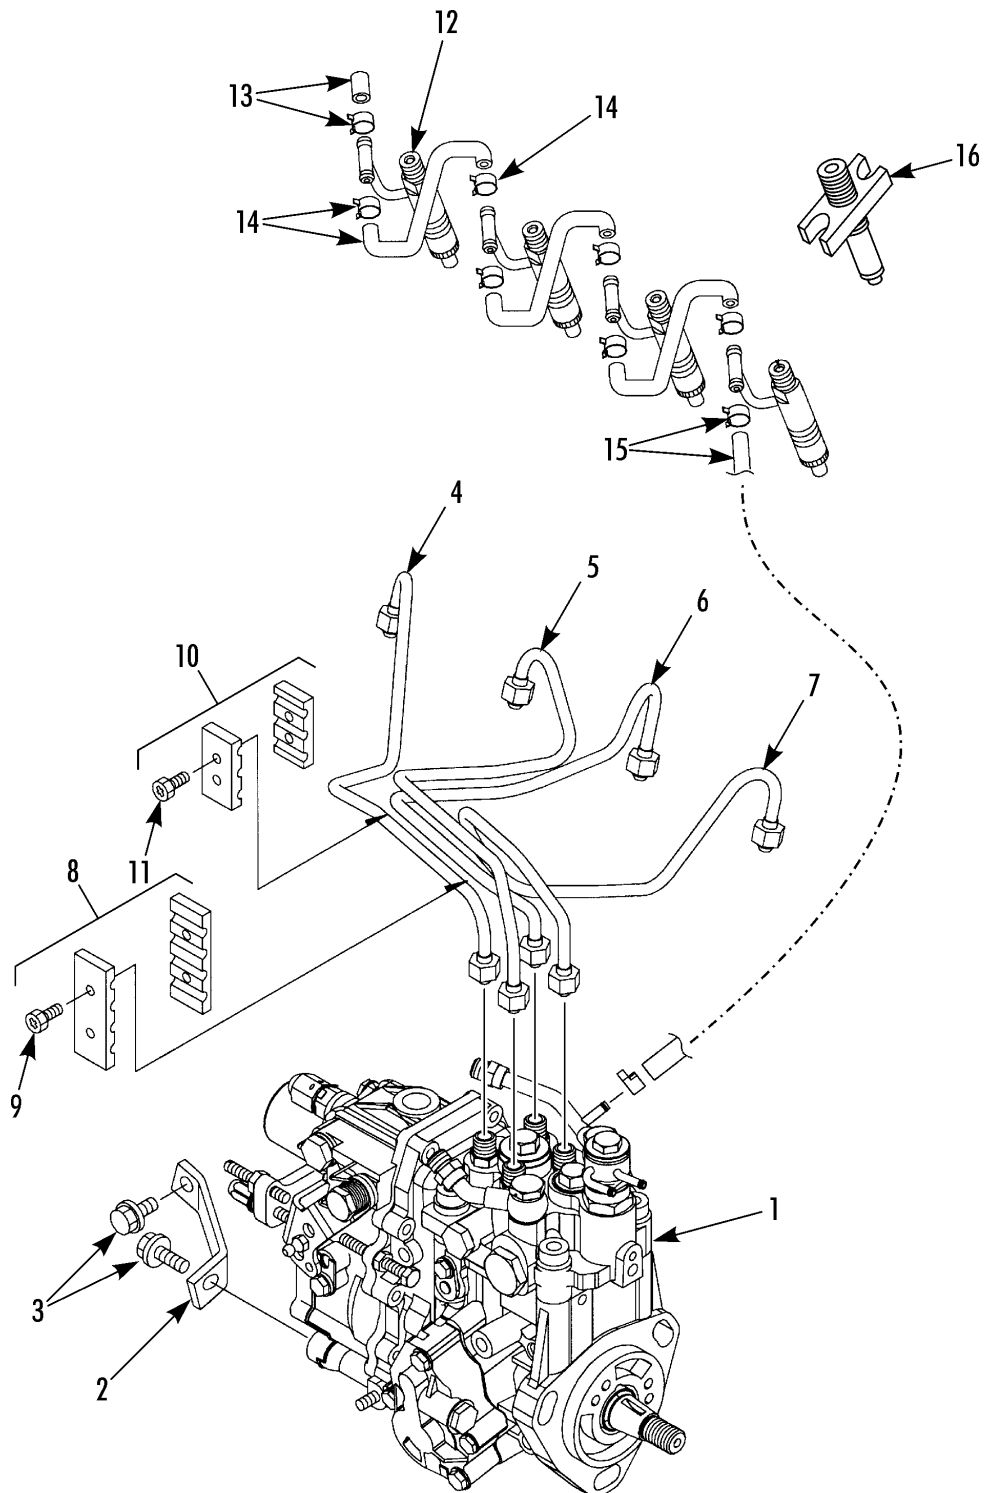 




REF	PART#	DESCRIPTION	QTY
1	101-362	PUMP - fuel injection (2200 rpm, see 204G2)	1
	101-354	PUMP - fuel injection (2600 rpm, see 205C5)	1
2	13-356	SUPPORT - pump	1
3	55-6188	SCREW - support	2
4	13-371	PIPE - fuel injection	1
5	13-391	PIPE - fuel injection	1
6	13-392	PIPE - fuel injection	1
7	13-393	PIPE - fuel injection	1
8	13-368	RETAINER - tube (4 tubes)	1
9	55-8626	SCREW - retainer	1
10	11-6109	RETAINER - tube (3 tubes)	1
11	55-8626	SCREW - retainer	1
12	13-388	NOZZLE - injection (2200 rpm engine, see 204G5)	4
	13-389	NOZZLE - injection (2600 rpm engine, see 205C10)	4
13	10-373	KIT - fuel return	1
14	13-310	• HOSE & CLAMPS (nozzle to nozzle)	3
15	13-451	• HOSE & CLAMPS (nozzle to pump)	1
16	13-342	RETAINER - nozzle (part of cylinder head, see 204F5)	4
17	55-6191	SCREW - retainer	4
18	51-1151	WASHER	4
19	204-1848	ADAPTER - compression tester	1
	11-9446	• VALVE (Schrader)	1
	55-1819	• SEAL - copper	1
	55-4607	• FLATWASHER	2
	204-542	TESTER - compression	1

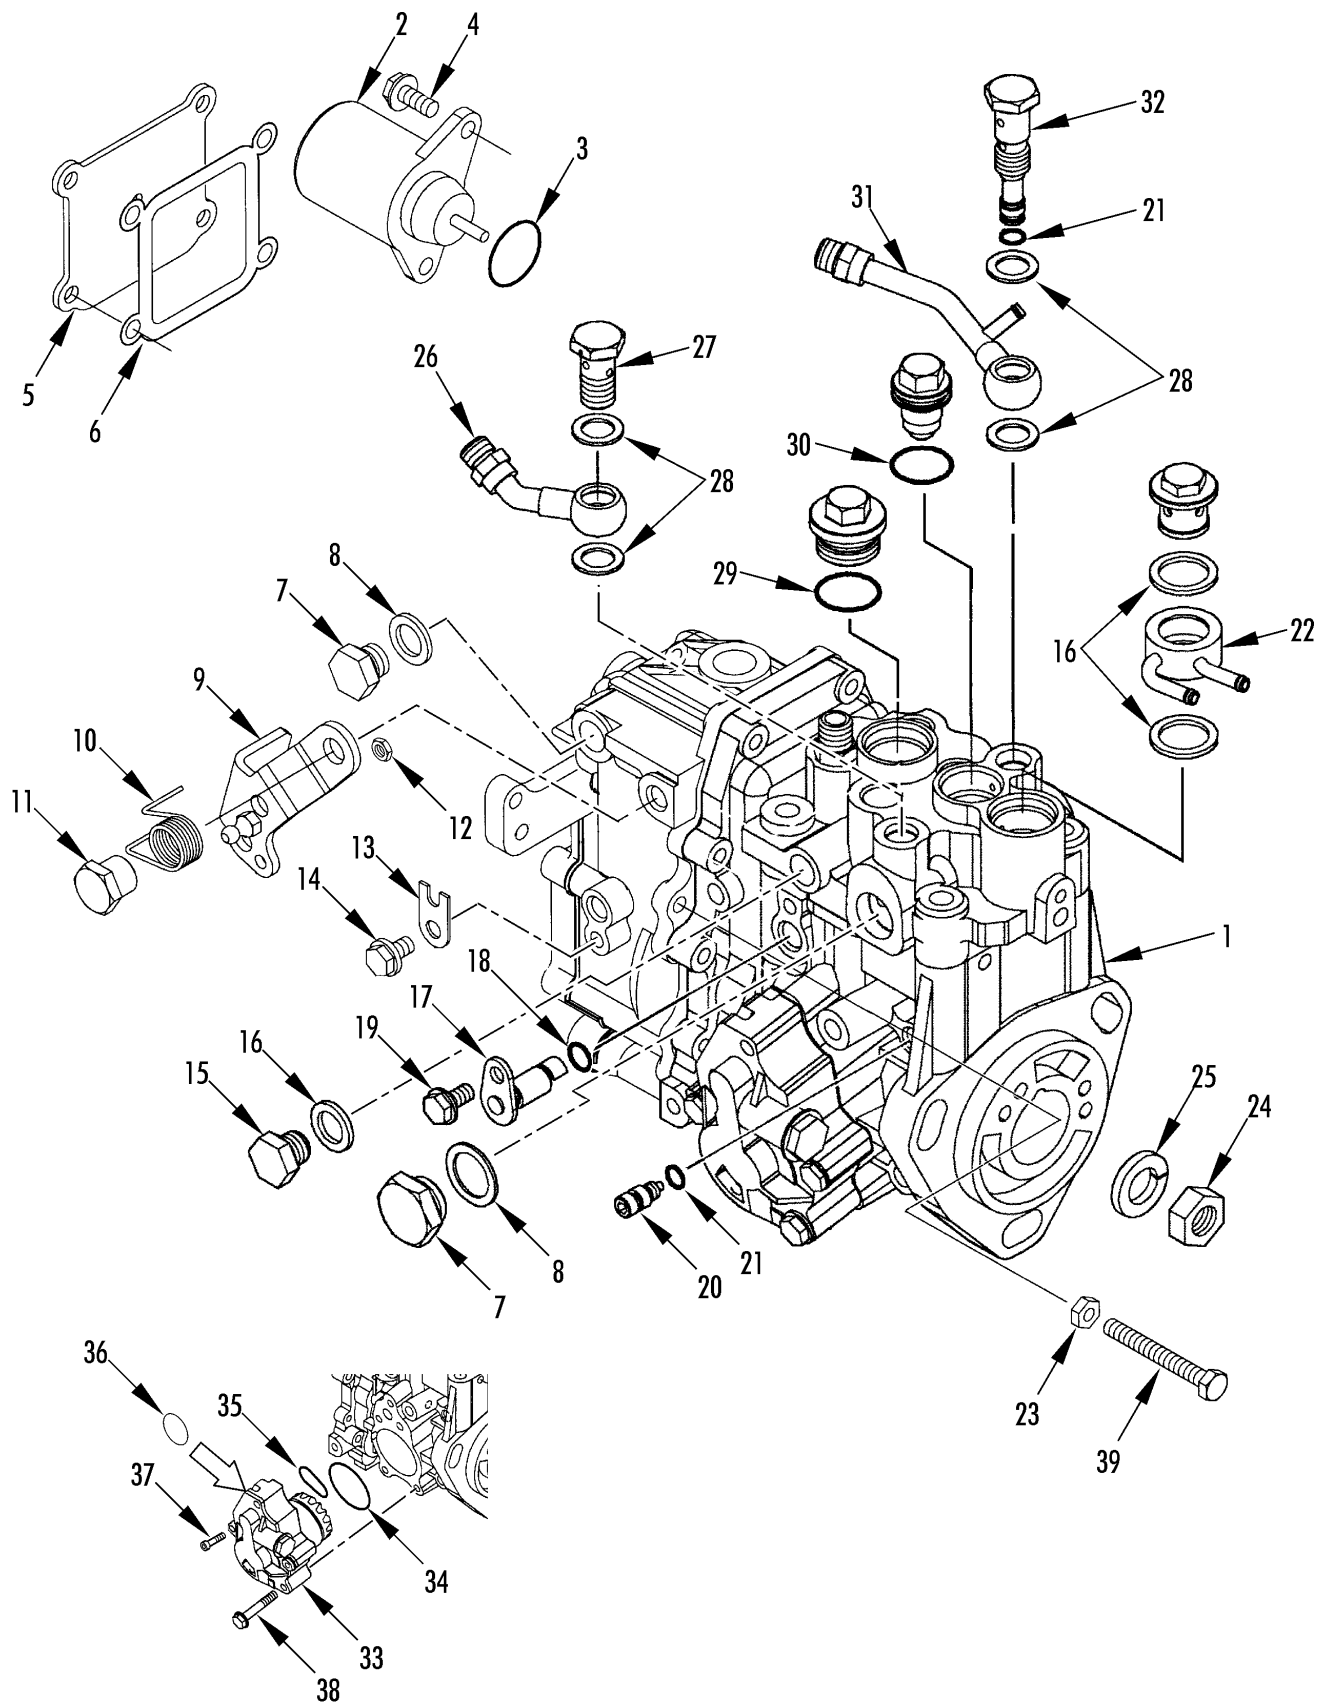 




REF	PART#	DESCRIPTION	QTY
1	101-362	PUMP - fuel injection (2200 rpm)	1
2	42-100	• SOLENOID - stop	1
3	33-2230	• O-RING - solenoid	1
4	55-8448	• SCREW - solenoid	2
5	13-440	• COVER - governor	1
6	33-4168	• GASKET - cover	1
7	55-6230	• PLUG (12 mm)	1
8	33-4169	• WASHER - sealing (12 mm)	1
9	12-925	• LEVER - control	1
10	13-442	• SPRING - lever	1
11	51-1205	• NUT - lever	1
12	51-1206	• NUT - ball joint	1
13	11-6125	• RETAINER - shaft	1
14	55-5822	• SCREW - retainer	1
15	51-1207	• PLUG	1
16	33-4170	• WASHER - sealing (18 mm)	1
17	13-444	• LIFTER	1
18	55-4676	• O-RING - lifter	1
19	55-5822	• SCREW - lifter	1
20	13-445	• STOPPER	1
21	33-4171	• O-RING - stopper & eye bolt	2
22	13-450	• JOINT - banjo (water)	1
23	55-5846	• NUT	1
24	51-1155	• NUT	1
25	51-1154	• LOCKWASHER	1
26	13-446	• JOINT - banjo (fuel in)	1
27	13-447	• BOLT - eye	1
28	55-8620	• WASHER - sealing (12 mm)	4
29	33-4172	• O-RING - plug	1
30	33-4173	• O-RING - plug	1
31	13-448	• JOINT - banjo (fuel out)	1
32	13-449	• BOLT - eye	1
33	13-511	• PUMP - feed	1
34	33-4190	•• O-RING - pump	1
35	33-4192	•• O-RING - pump	1
36	33-4193	•• O-RING - inner	1
37	55-6187	•• SCREW - pump (socket head)	2

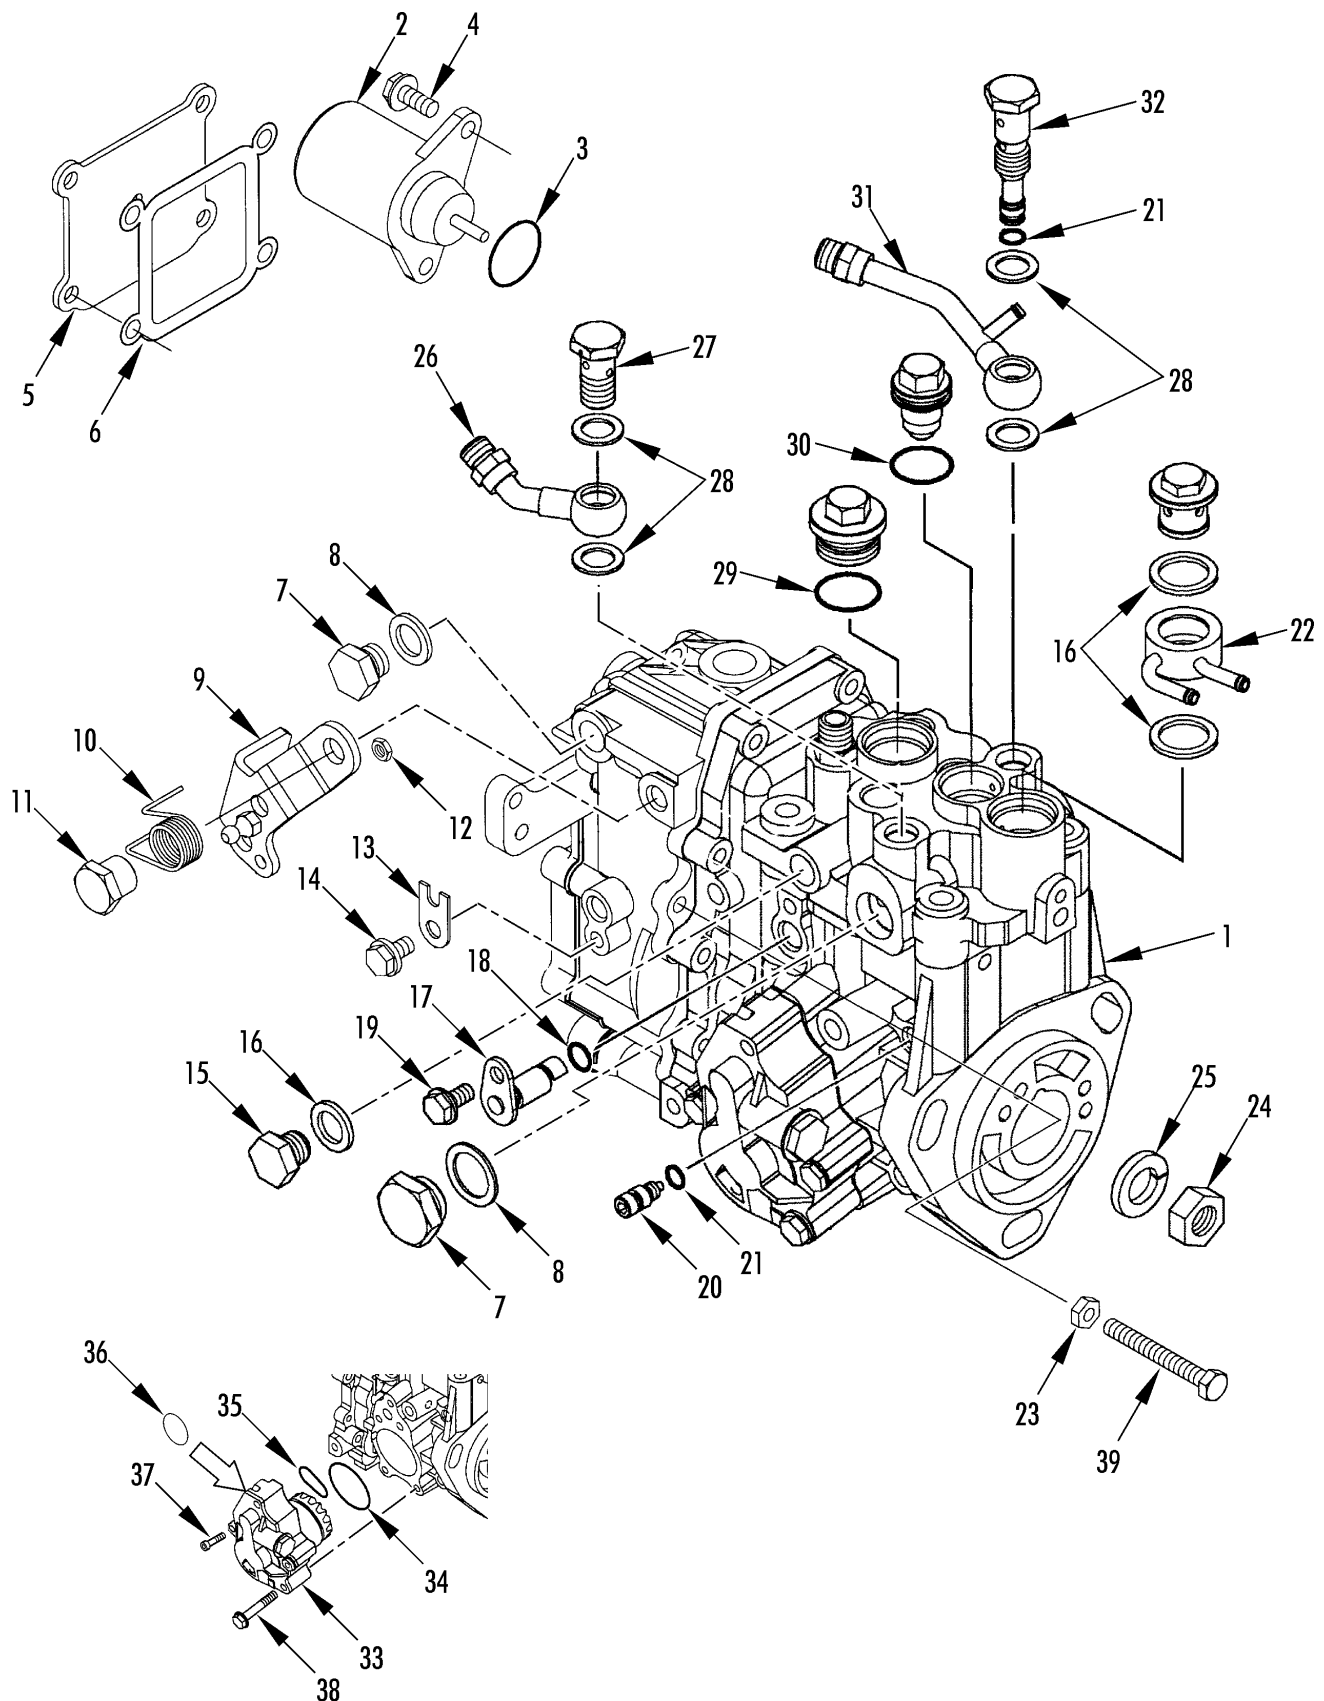 


Revised
3/4/12

 FUEL INJECTION PUMP GROUP (TK486V, 2200 RPM)




204G2


REF	PART#	DESCRIPTION	QTY
38	51-1269	•• SCREW - pump (hex head)	4
39	51-612	• SCREW - idler limit	1
	55-7802	SCREW - idler limit (Genset units)	1

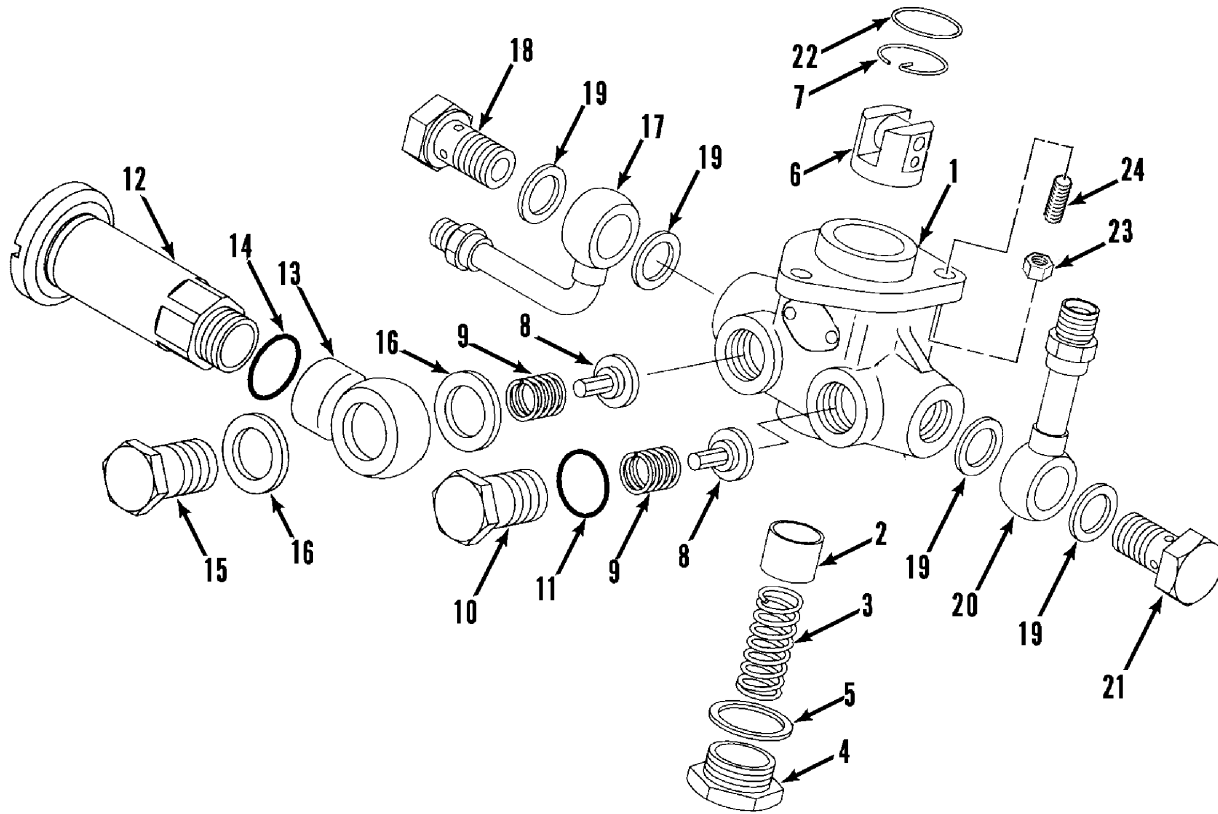 




REF	PART#	DESCRIPTION	QTY
1	11-7433	PUMP - fuel	1
2	11-8970	• PISTON	1
3	11-8971	• SPRING - piston	1
4	55-8871	• RETAINER	1
5	33-2940	• GASKET	1
6	11-8998	• TAPPET	1
7	55-8872	• PIN - snap	1
8	11-8972	• VALVE	2
9	11-8973	• SPRING	2
10	11-8974	• RETAINER - valve	1
11	33-2941	• O-RING	1
12	11-8680	• PUMP	1
13	11-8975	• JOINT - banjo	1
14	33-2771	• O-RING	1
15	11-8976	• BOLT - eye	1
16	11-8977	• GASKET	2
17	11-7499	• JOINT - banjo (elbow, before engine S/N L68462)	1
	13-128	• JOINT - banjo (elbow, engine S/N L68462 & after)	1
18	11-8681	• BOLT - eye (with filter)	1
	11-2854	•• SCREEN (brass, #30)	1
19	33-1749	• GASKET	4
20	13-127	• JOINT - banjo (straight, engine S/N L68462 & after)	1
	11-7707	• JOINT - banjo (straight, before engine S/N L68462)	1
21	11-8682	• BOLT - eye	1
22	33-2942	O-RING	1
23	55-4750	NUT	3
24	55-6367	STUD - fuel pump	3

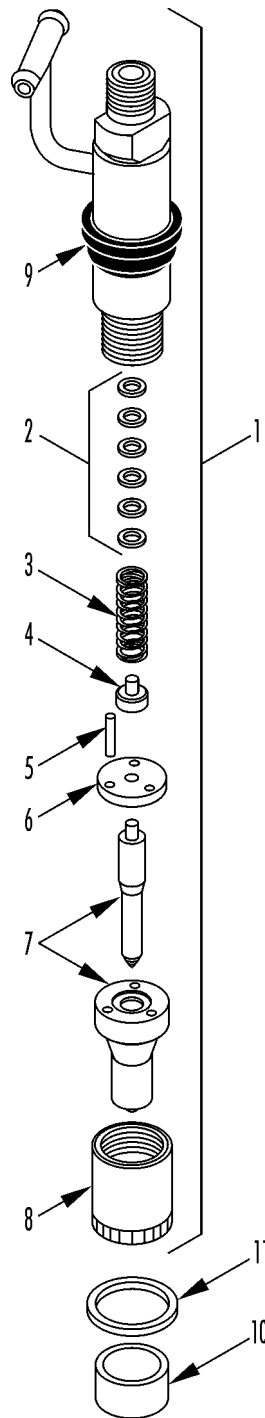 

 


REF	PART#	DESCRIPTION	QTY
	13-388	VALVE - fuel injection	4
1	11-6787	• HOLDER - nozzle	1
2	11-6108	• SHIM SET	1
3	11-6788	• SPRING - nozzle	1
4	11-6106	• RETAINER - nozzle spring	1
5	11-6790	• PIN	1
6	11-6789	• PLATE - stop	1
7	13-370	• NOZZLE	1
8	11-6786	• NUT - nozzle case	1
9	33-4174	• GASKET - nozzle	1
10	13-341	PROTECTOR - nozzle	4
11	11-6707	GASKET - copper (nozzle seat)	4

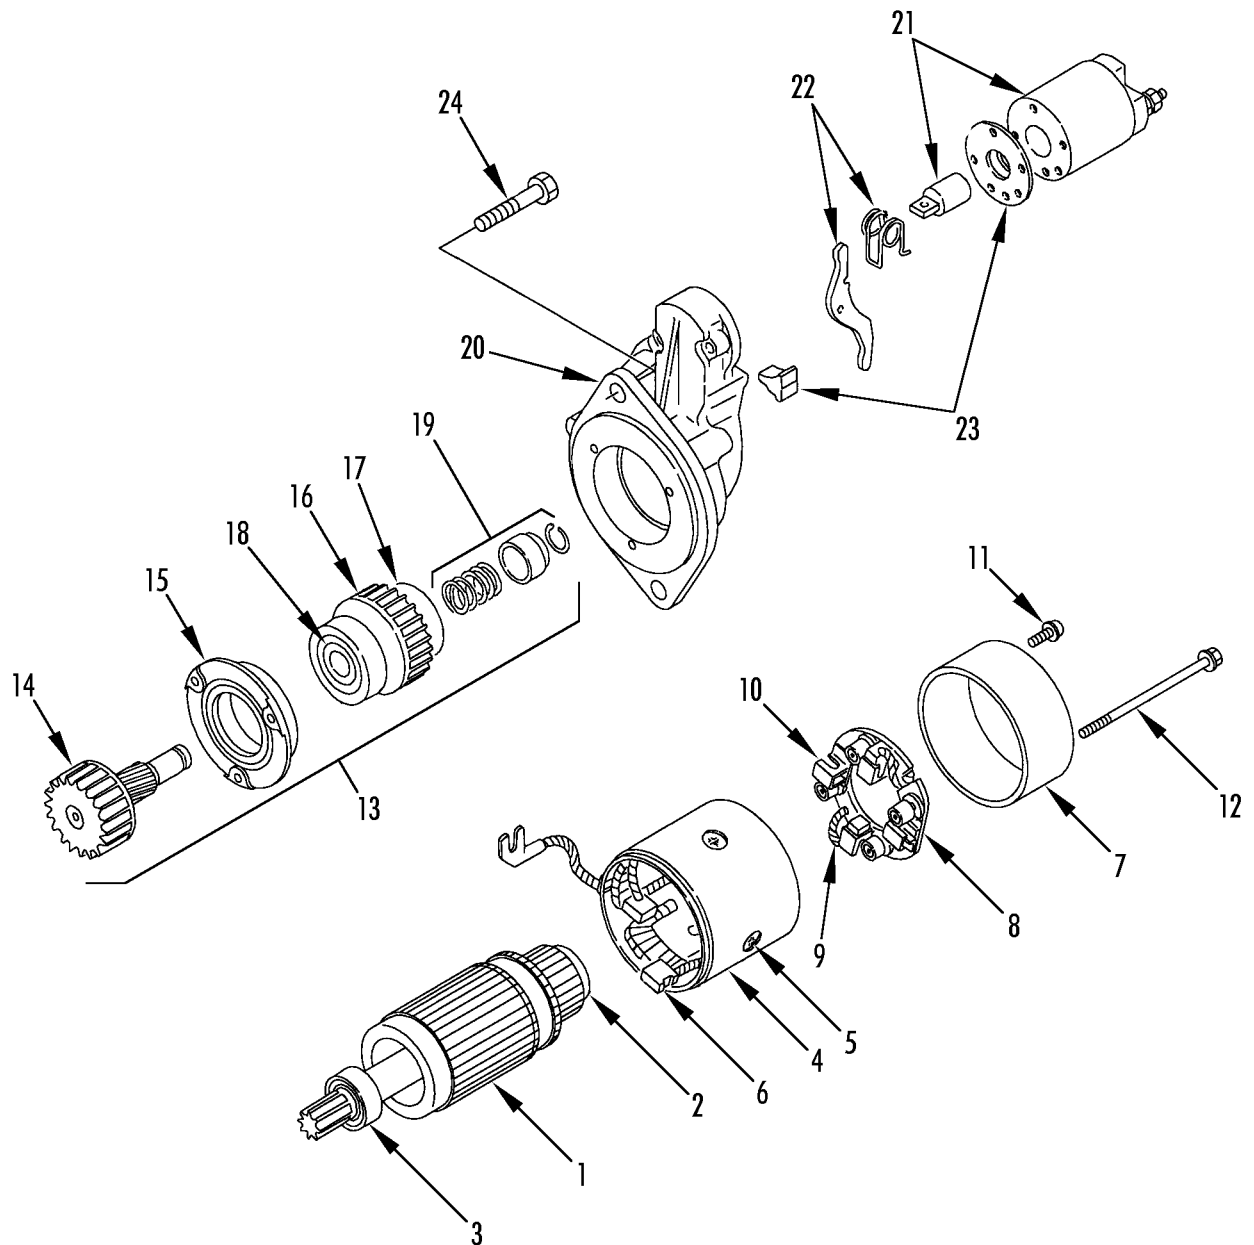 




REF	PART#	DESCRIPTION	QTY
	45-2177	STARTER (12V)	1
1	41-6508	• ARMATURE (12V)	1
2	77-2468	• BEARING	1
3	77-2469	• BEARING	1
4	41-6509	• YOKE - assembly	1
5	55-8894	•• SCREW - field coil	4
6	41-6510	•• BRUSH - positive (not for 24V)	2
7	41-6513	• COVER - rear	1
8	41-6511	• HOLDER - brush (not for 24V)	1
9	41-6512	•• SPRING - brush	4
10	41-6510	•• BRUSH (not for 24V)	2
11	55-8897	• SCREW - cover	2
12	51-1161	• BOLT - thru	2
13	41-6518	• PINION - assembly	1
14	41-6519	• SHAFT - pinion	1
15	77-2833	• RETAINER	1
16	41-6520	• CLUTCH - assembly	1
17	41-6521	•• BEARING - ball	1
18	77-2834	•• BEARING - ball	1
19	41-2156	• STOPPER - pinion	1
20	41-6514	• CASE - cover	1
21	41-6515	• SOLENOID (12V)	1
22	41-6516	• LEVER	1
23	41-6517	• COVER - dust	1
24	55-8898	SCREW - starter	2

 
NOTE: NOTE: See grid 212B9 for 24 volt starter.

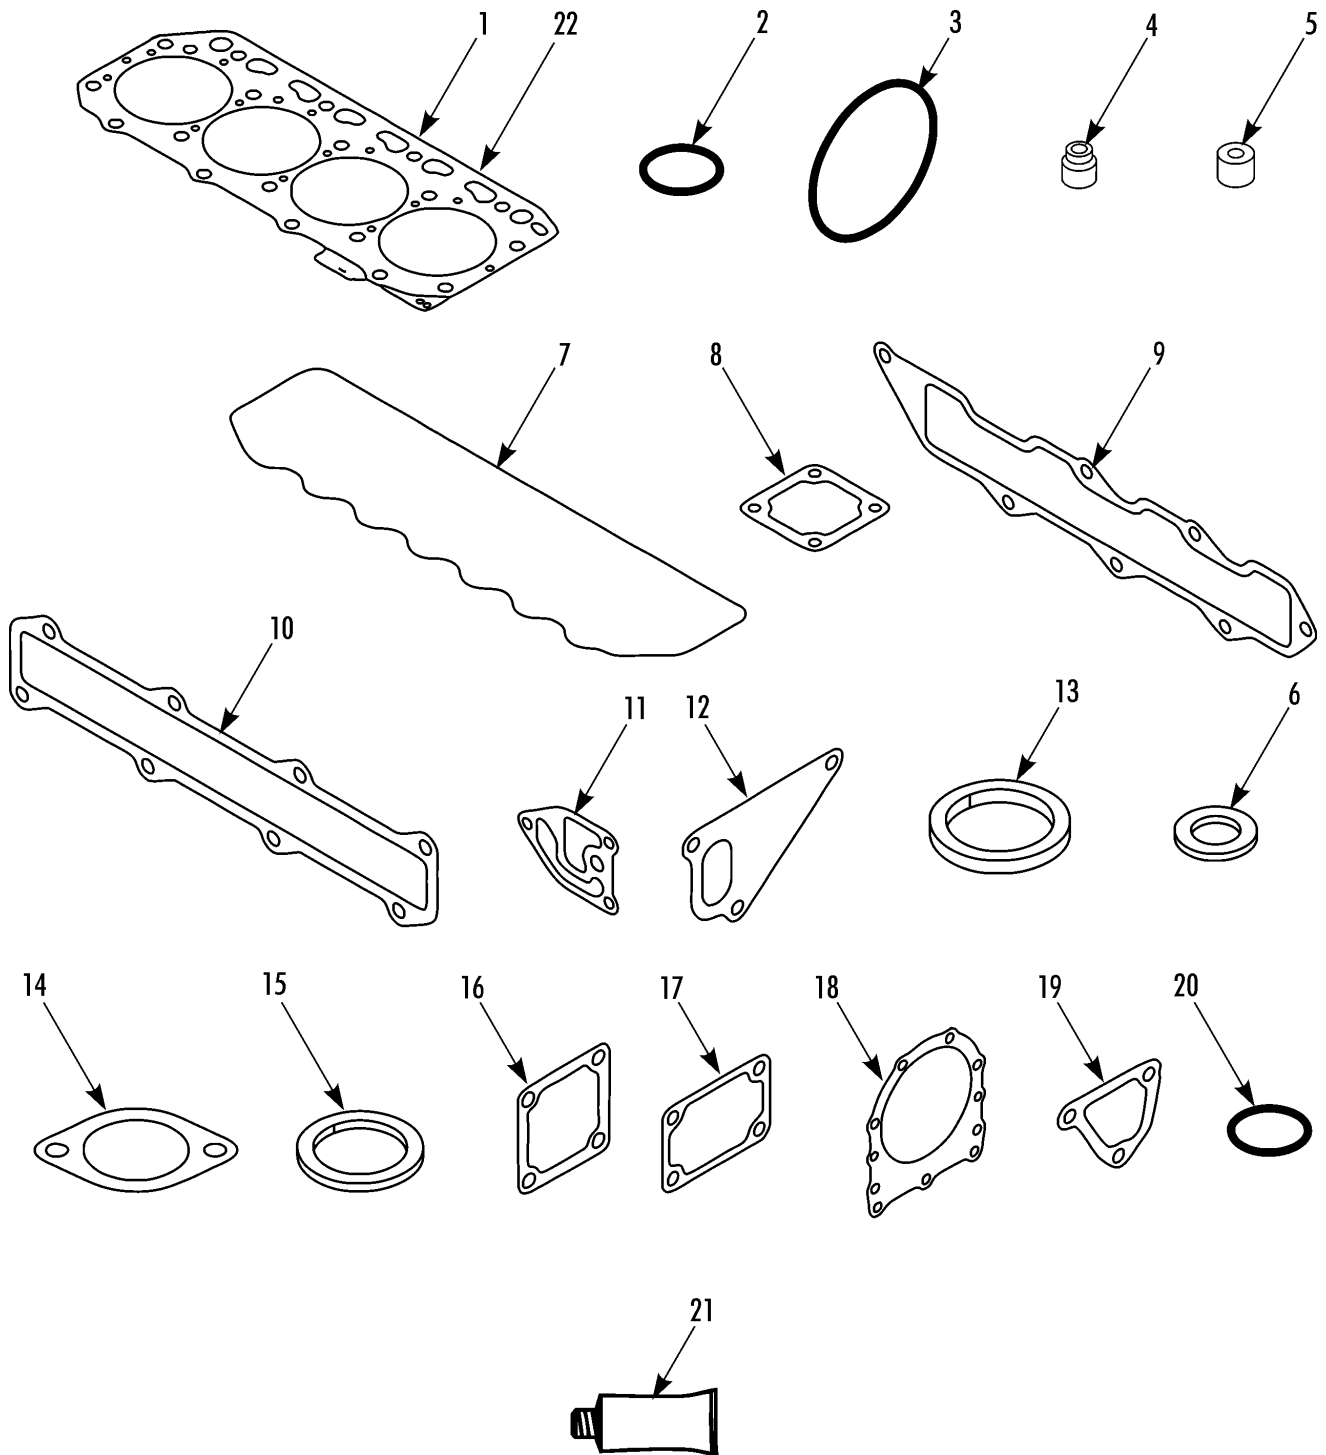




REF	PART#	DESCRIPTION	QTY
	30-291	KIT - gasket set	1
1	33-4122	• GASKET - cylinder head (2200 rpm engine & 2600 rpm engines built before 3/08)	1
2	33-3098	• GASKET	1
3	33-1953	• O-RING - fuel injection pump	1
4	11-8935	• SEAL - valve stem (exhaust)	4
	11-8934	• SEAL - valve stem (intake)	4
5	13-341	• PROTECTOR - nozzle	4
6	11-6707	• GASKET - copper (nozzle seat)	4
7	13-340	• GASKET - valve cover	1
8	33-2764	• GASKET	1
9	33-2936	• GASKET - intake manifold	1
10	33-2937	• GASKET - exhaust manifold	1
11	33-2931	• GASKET	1
12	33-3096	• GASKET - water pump	1
13	33-1745	• WASHER - sealing (16)	1
	33-3833	• WASHER - sealing (10)	2
	55-4622	• WASHER - sealing (8)	12
14	33-2767	• GASKET	1
15	33-2768	• GASKET	1
16	33-2765	• GASKET - air heater	1
17	33-2934	• GASKET - flange	1
18	33-2969	• GASKET - oil seal case	1
19	33-3097	• GASKET - thermostat case	1
20	33-3512	• O-RING (12.0)	3
	33-3821	• O-RING (16.0)	2
	33-4089	• O-RING (20.0)	1
	33-4090	• O-RING (31.5)	1
	33-1954	• O-RING (32.0)	3
	33-2762	• O-RING (50.0)	1
21	203-348	• GASKET - adhesive (RTV silicone)	A/R
22	33-4517	GASKET - cylinder head (2600 rpm engines built after 3/08)	1

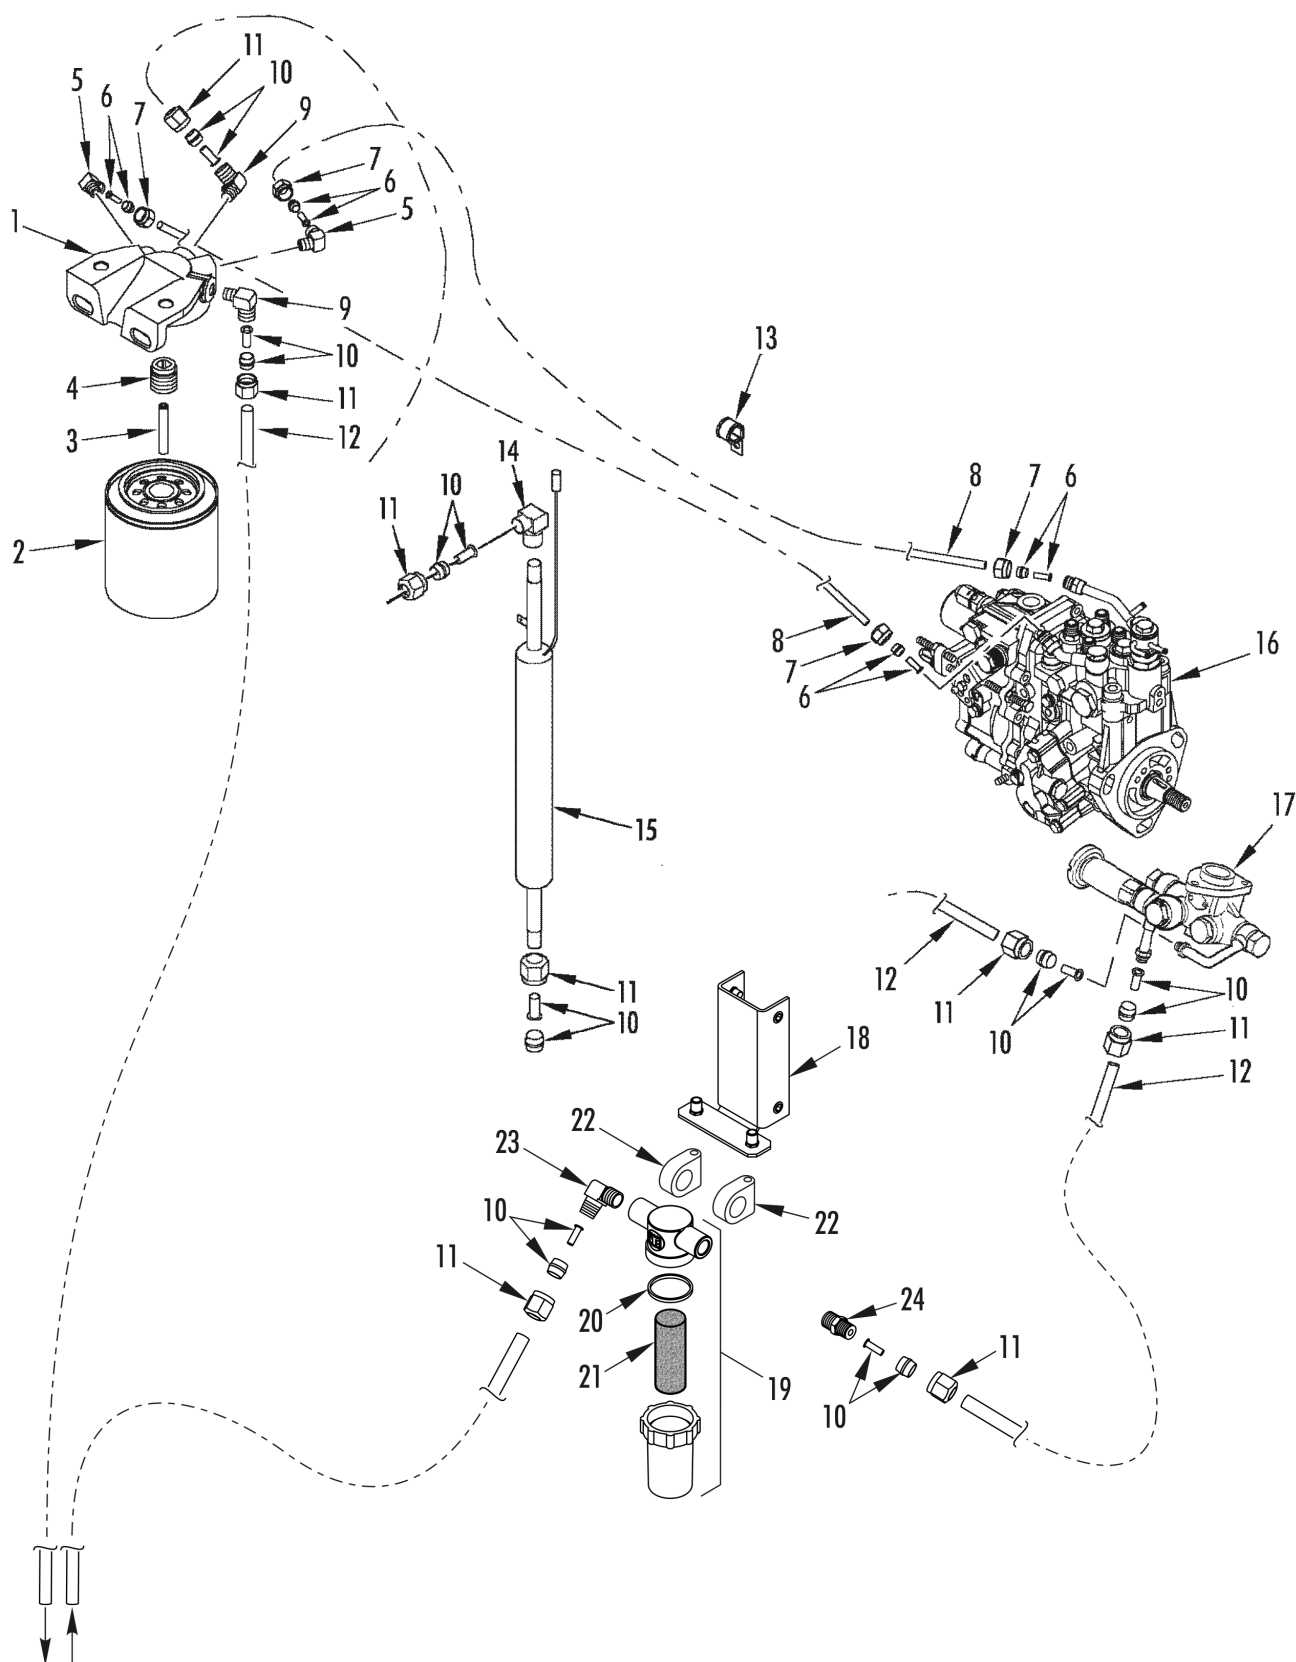 

 


REF	PART#	DESCRIPTION	QTY
1	11-9015	HEAD - fuel filter	1
	55-3490	SCREW - base	2
	55-4954	NUT - base	2
	55-2958	FLATWASHER	2
2	11-9342	FILTER - fuel (EMI 3000)	1
3	11-9016	SHAFT - water bleed	1
4	11-9017	SPUD - fuel filter	1
	203-393	SEALER - thread	A/R
5	11-5320	ELBOW (1/4)	2
6	10-243	KIT - sleeve & eyelet (1/4)	4
7	11-4841	NUT (1/4)	4
8	11-4367	HOSE (1/4 od x 35 ft lg)	A/R
9	11-4380	ELBOW - hose fitting (3/8)	2
10	10-242	KIT - sleeve & eyelet (3/8)	8
11	11-4941	NUT (3/8)	8
12	11-4372	HOSE (3/8 od x 35 ft lg)	A/R
13	55-4203	CLAMP - hose	2
	55-5022	SCREW - clamp	2
	55-2958	FLATWASHER	2
	55-2959	LOCKWASHER	2
14	55-9752	FITTING (3/8)	1
15	40-1016	HEATER - fuel	1
16	101-362	PUMP - injection (see 204G2)	1
17	11-7433	PUMP - fuel (see 142F8)	1
18	92-7710	BRACKET - fuel strainer	1
	55-3623	SCREW	4
	55-2001	FLATWASHER	4
	55-2964	LOCKWASHER	4
	55-8752	INSERT	4
19	13-972	STRAINER - fuel (complete)	1
20	33-4458	• GASKET - fuel strainer	1
21	13-973	• SCREEN - fuel strainer	1
22	91-372	CLAMP - tube	2
	55-3462	SCREW	2
	55-2086	FLATWASHER	2
	55-1800	LOCKWASHER	2
23	11-4959	ELBOW	1
24	11-5437	CONNECTOR	1

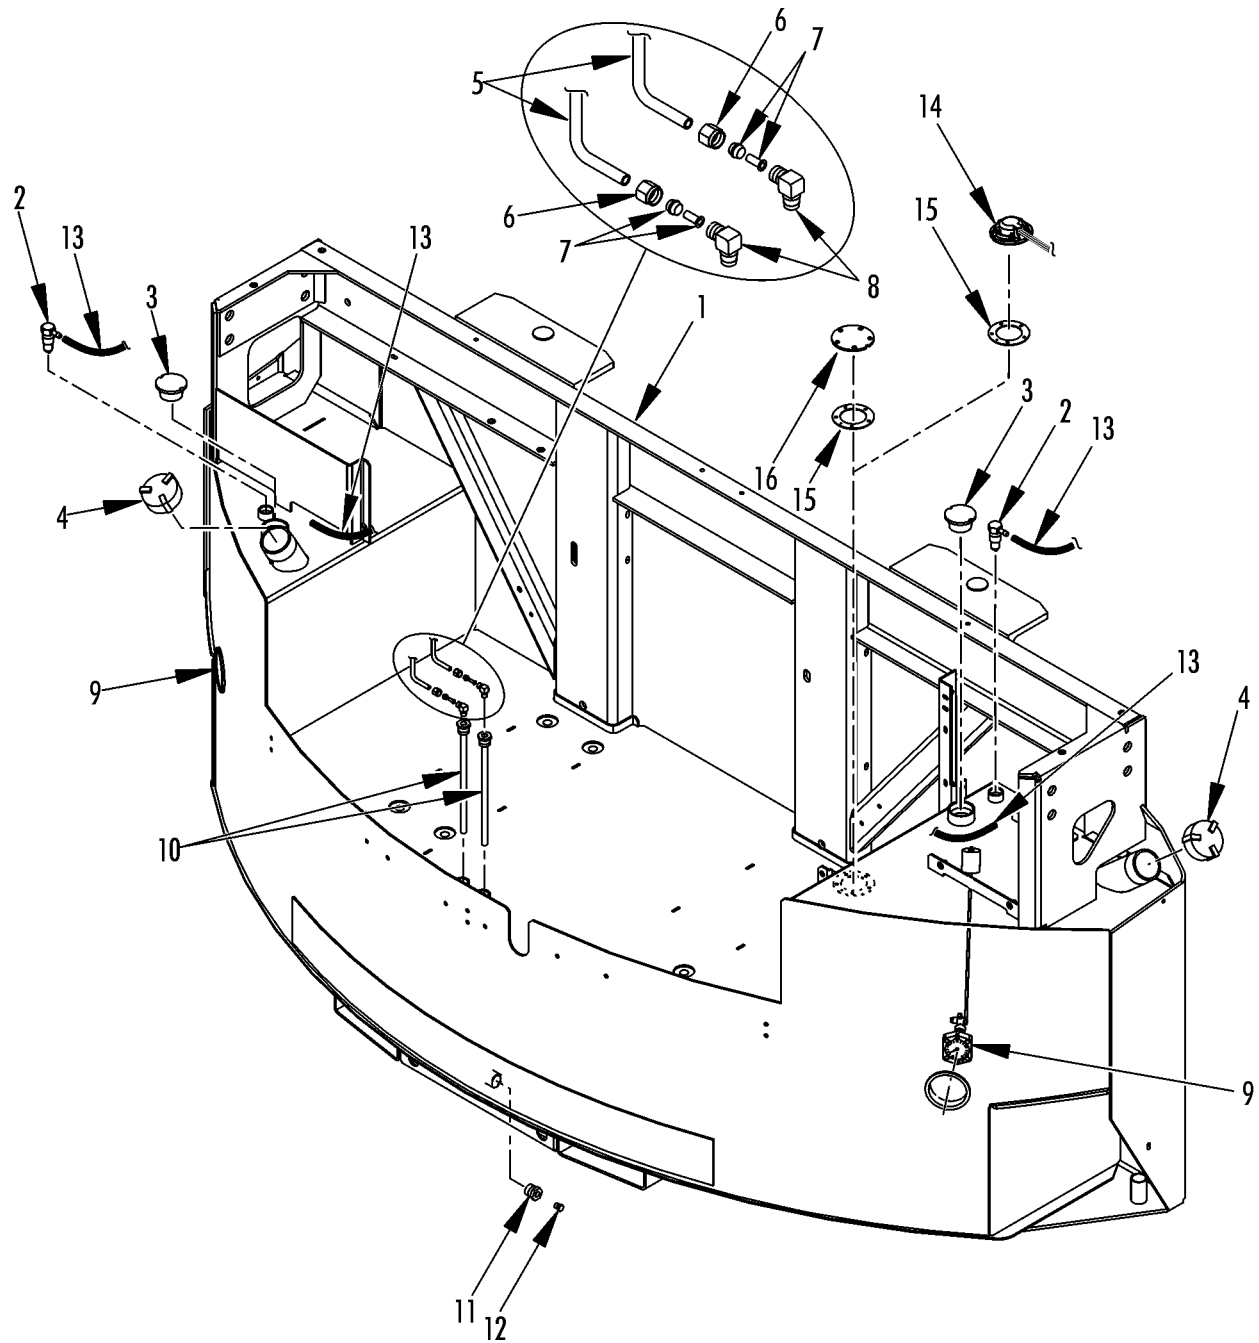 




REF	PART#	DESCRIPTION	QTY
1	NSS	TANK - fuel (see Structural Component grid)	1
2	55-5617	VENT	2
3	11-8719	PLUG - fuse	2
4	11-8048	CAP - fuel tank	2
	13-934	CAP - fuel tank (tamper evident)	2
	13-946	CAP - fuel tank	2
5	11-4372	HOSE (3/8 od x 35 ft lg)	A/R
6	11-4941	NUT - hose fitting (3/8)	2
7	10-242	KIT - sleeve & eyelet (3/8)	2
8	11-4380	ELBOW (3/8)	2
9	11-8718	GAUGE - fuel	2
	11-9594	• DIAL - gauge	1
10	11-8887	TUBE - fuel feed	2
11	55-2313	BALL - check	1
12	55-3364	PLUG - pipe	1
13	98-876	HOSE - vent (16.0 lg)	A/R
14	40-1129	SENSOR - fuel level	1
15	33-3878	GASKET - fuel sensor	1
16	92-7236	COVER - fuel sensor	1
	55-1510	SCREW - sensor/cover	5
	55-431	LOCKWASHER	5
	55-1511	FLATWASHER	5

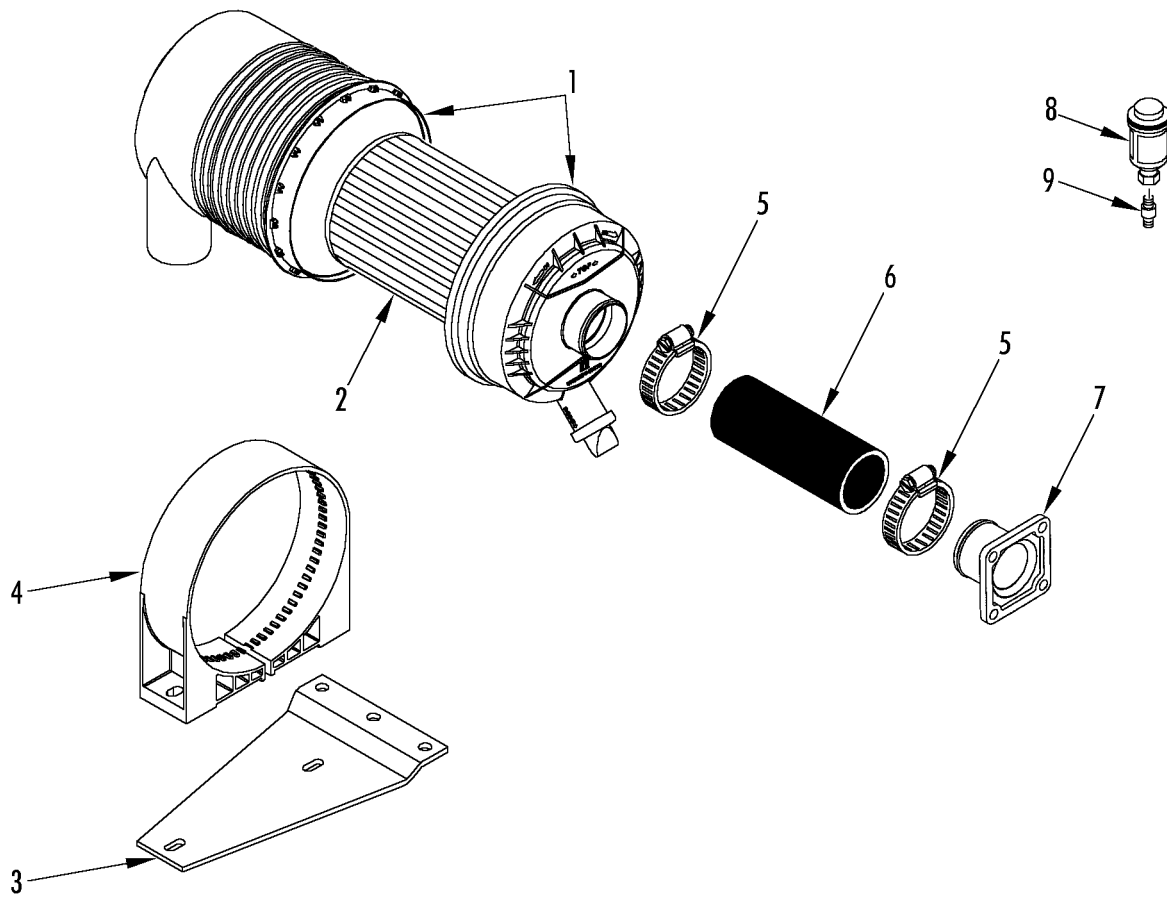 




REF	PART#	DESCRIPTION	QTY
1	11-9299	CLEANER - air	1
2	11-9300	• ELEMENT - air cleaner	1
	55-5022	SCREW - adapter	2
	55-2958	FLATWASHER	2
	55-2959	LOCKWASHER	2
3	92-3341	BRACKET - air cleaner	1
	92-5254	BRACKET - air cleaner (Maersk blue)	1
	55-3305	SCREW - bracket	2
	55-2958	FLATWASHER	2
	55-2959	LOCKWASHER	2
	203-400	SEALER - thread	A/R
4	92-861	CLAMP - air cleaner	1
	55-3490	SCREW - clamp	2
	55-2959	LOCKWASHER	2
	55-2958	FLATWASHER	2
	55-2114	NUT	2
5	55-9568	CLAMP - hose	2
6	13-657	HOSE - air cleaner	1
7	11-9266	INLET - intake manifold (see 204F7)	1
8	11-7757	INDICATOR - air restriction	1
9	11-7828	FITTING - indicator	1

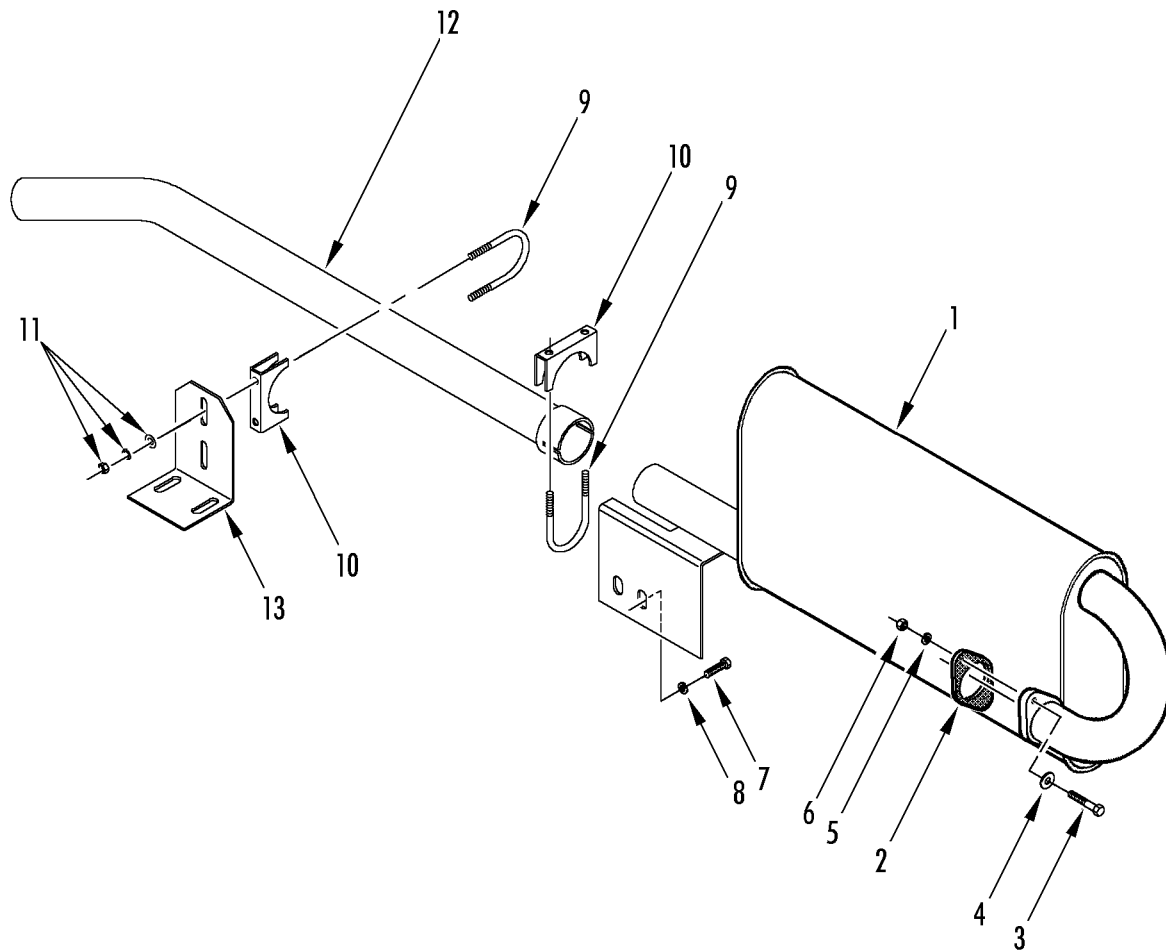 




REF	PART#	DESCRIPTION	QTY
1	12-800	MUFFLER	1
2	33-2314	GASKET - muffler	1
3	55-3089	SCREW - muffler	2
4	55-2958	FLATWASHER	4
5	55-2959	LOCKWASHER	2
6	55-2114	NUT	2
7	55-5022	SCREW - muffler	2
8	55-2958	LOCKWASHER	2
9	91-7234	U-BOLT	2
10	91-7233	SADDLE - u-bolt	2
11	55-2086	FLATWASHER	4
	55-1800	LOCKWASHER	4
	55-3472	LOCKNUT	4
12	11-9286	TUBE - exhaust	1
13	92-256	BRACKET - exhaust tube	1
	92-5265	BRACKET - exhaust tube (Maersk blue)	1
	55-2977	SCREW - bracket	2
	55-2086	FLATWASHER	4
	55-4953	LOCKNUT	2

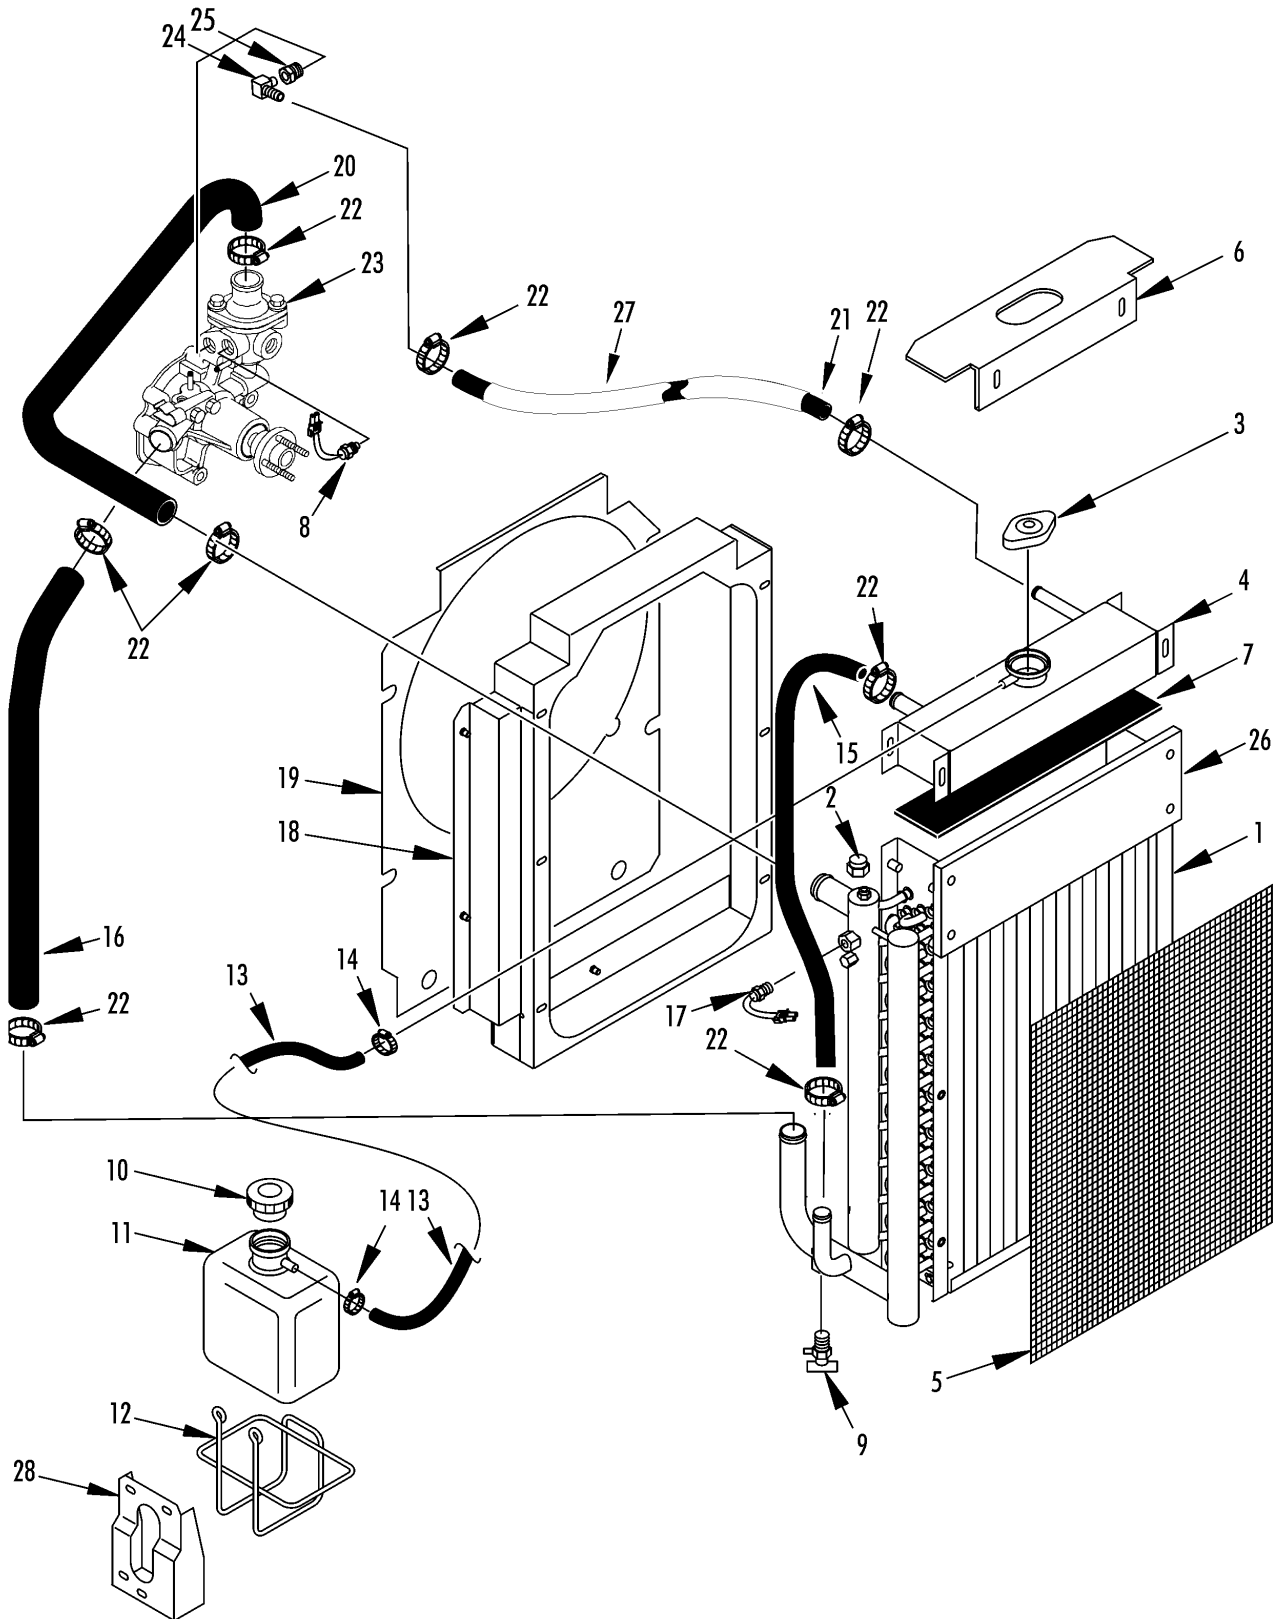 





REF	PART#	DESCRIPTION	QTY
1	12-799	RADIATOR	1
2	55-1983	• CAP - vent	1
3	11-8913	CAP - radiator	1
4	11-8888	TANK - expansion	1
	55-3021	SCREW - tank	4
	55-1800	LOCKWASHER	4
	55-2086	FLATWASHER	4
5	92-6417	SCREEN - radiator	1
6	92-5258	BRACKET - overflow tank	1
7	91-7782	PAD - radiator (top)	1
8	41-6539	SENSOR - water temperature	1
9	55-9011	COCK - drain (radiator)	1
10	99-8301	CAP & CHAIN - overflow tank (see 119E11)	1
11	11-4607	TANK - overflow	1
12	11-4693	HANGER - overflow tank	1
	55-1587	SCREW - hanger	2
	55-2086	FLATWASHER	2
	55-4953	NUT	2
13	98-771	HOSE - overflow (25 ft)	A/R
14	55-2796	CLAMP - hose	2
15	11-8891	HOSE - outlet	1
16	11-9525	HOSE - engine to radiator	1
17	41-1818	SENSOR - water level	1
18	98-5711	SHROUD - radiator	1
19	98-5723	ORIFICE - radiator	1
	55-2995	SCREW - orifice	6
	55-4740	FLATWASHER	6
20	11-9524	HOSE - radiator to engine (top)	1
21	12-538	HOSE - inlet (silicone)	A/R
22	55-5400	CLAMP - hose	8
23	13-509	PUMP - water (ELC compatible, see 204F0)	1
24	55-8653	ELBOW	1
25	55-2539	BUSHING	1
	203-400	SEALANT	1
26	92-6416	BRACKET - radiator (front)	1
27	13-950	SLEEVING - insulating	1
28	91-7217	BRACKET - overflow tank	1
	55-2977	SCREW	4
	55-2086	FLATWASHER	8
	55-4953	LOCKNUT	4

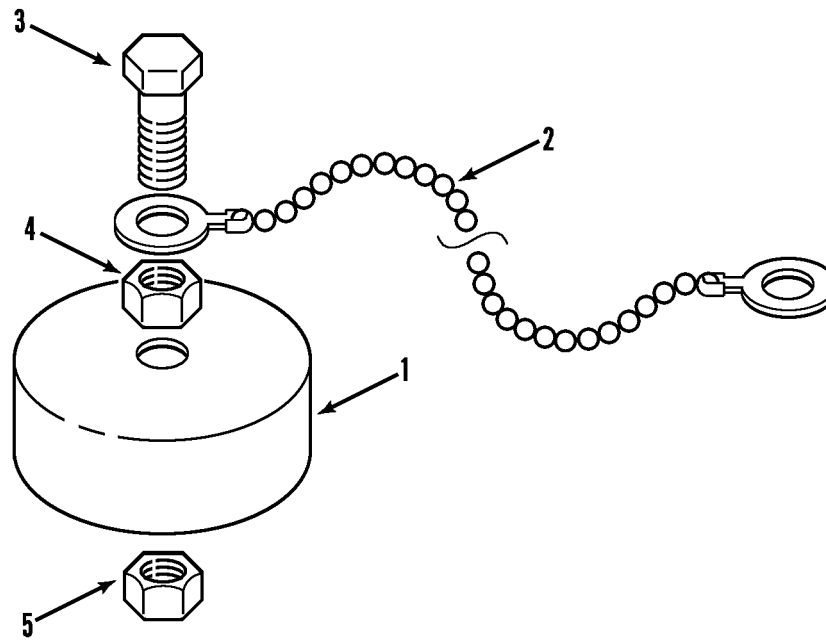 




REF	PART#	DESCRIPTION	QTY
1	99-8301	CAP & CHAIN - overflow tank	1
	11-4665	• CAP	1
2	99-3685	• CHAIN	1
3	55-2991	• SCREW - chain	1
4	55-2965	• NUT	1
5	55-4560	• NUT (hexstop)	1

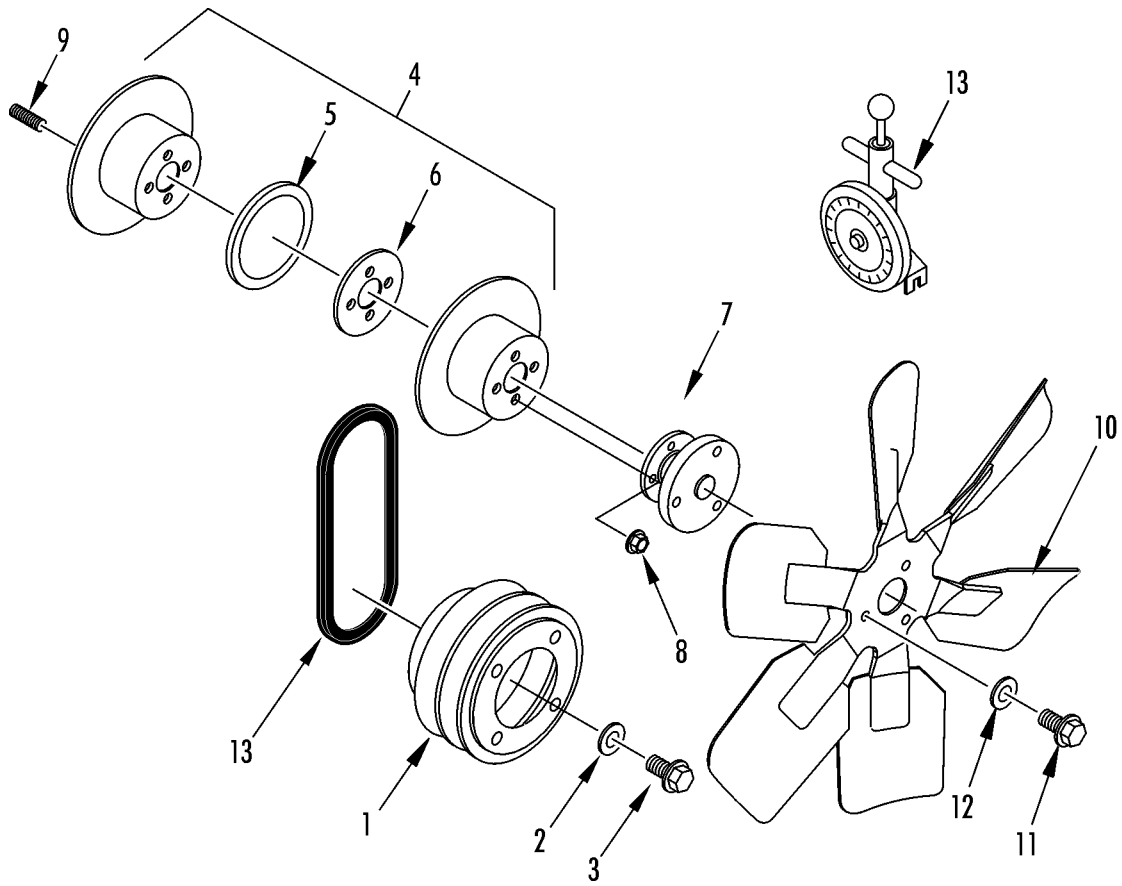 

 



REF	PART#	DESCRIPTION	QTY
1	13-353	PULLEY - crankshaft (see 204F6)	1
2	55-6249	WASHER	1
3	55-6250	SCREW - pulley	1
4	13-358	PULLEY - water pump (see 204F0)	1
5	77-1472	• SHIM - (1 mm)	A/R
	77-2752	• SHIM - (0.5 mm)	A/R
6	77-1428	• SPACER	1
7	90-331	KIT - fan spacer	1
8	55-5792	• NUT	4
9	55-9828	• STUD - fan spacer (water pump, 5 mm longer than std)	4
10	78-618	FAN - radiator	1
11	55-3834	SCREW - fan (CGCO & SGCO)	3
	55-6764	SCREW - fan (CGSM, SGSM, CGCM & SGCM)	3
12	55-2959	LOCKWASHER	3
13	78-1340	BELT - fan & water pump	1
14	204-427	GAUGE - belt tension	1

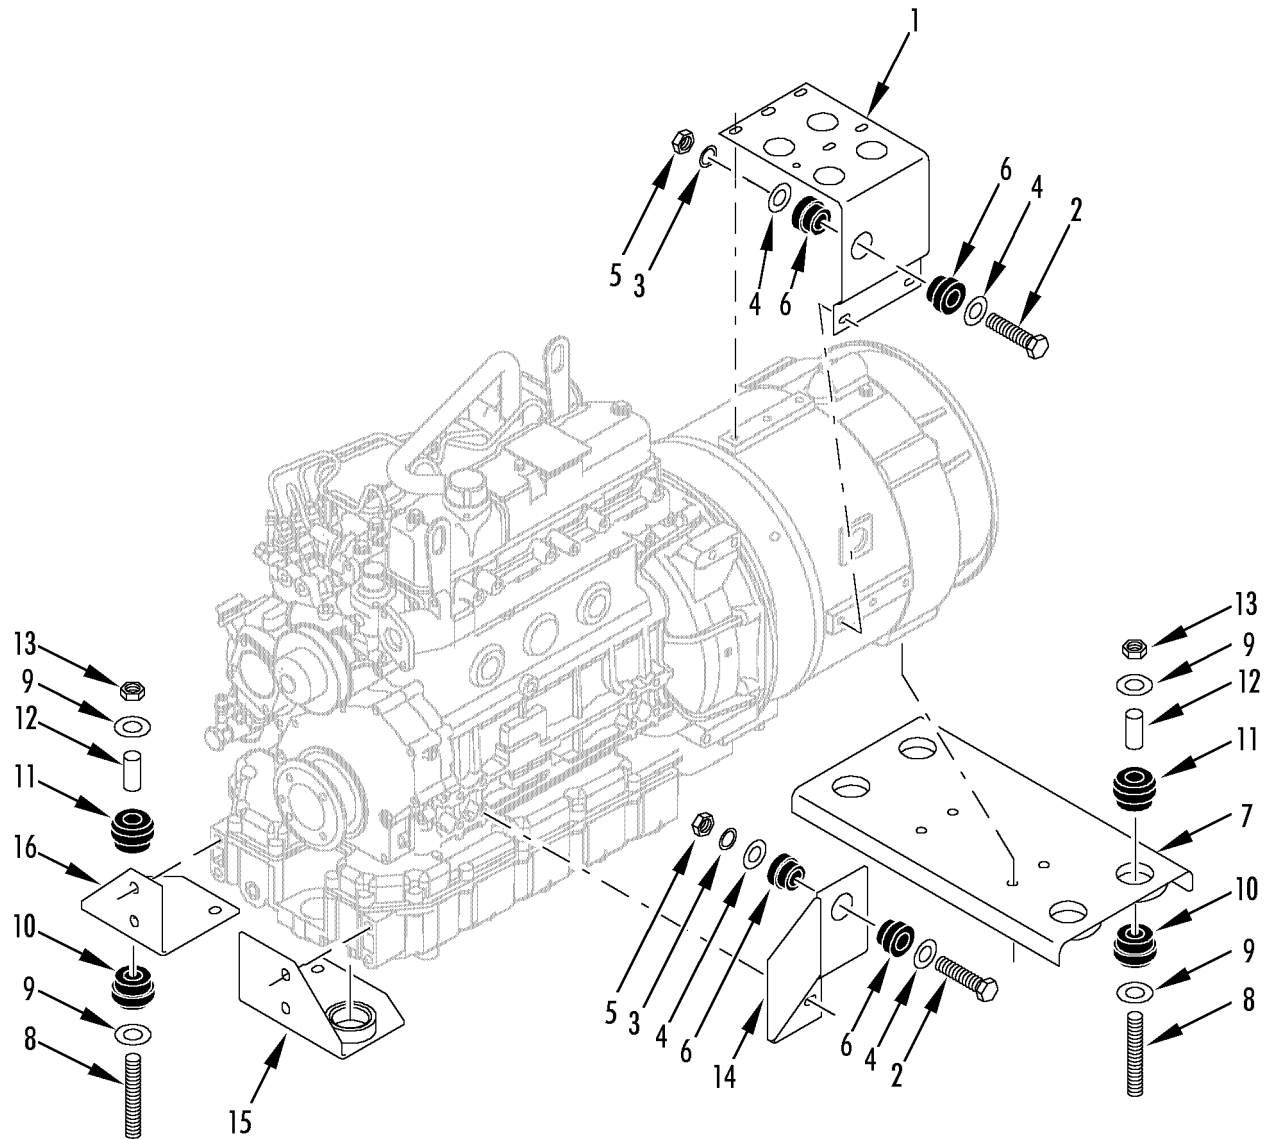 




REF	PART#	DESCRIPTION	QTY
1	92-226	BRACKET - generator (rear)	1
	92-5252	BRACKET - generator (rear, Maersk blue)	1
	55-2963	SCREW - bracket	4
	55-2958	FLATWASHER	4
	55-2959	LOCKWASHER	4
2	55-2557	SCREW - frame	2
3	55-2038	FLATWASHER	2
4	55-3595	WASHER - special	4
5	55-4952	NUT	2
6	99-3649	MOUNT - vibration	2
7	98-5826	BRACKET - generator (bottom)	1
	55-7412	SCREW - generator bracket	4
	55-8337	LOCKWASHER	4
	55-6999	FLATWASHER	4
8	55-6814	STUD - power pack	6
9	55-3512	WASHER - special	12
10	99-1433	MOUNT - vibration	6
11	99-1916	MOUNT - vibration	6
12	99-1642	SPACER	6
13	55-5205	NUT	6
14	92-225	BRACKET - engine	1
	92-5253	BRACKET - engine (Maersk blue)	1
15	91-5700	BRACKET - engine (rear)	1
	92-5249	BRACKET - engine (rear, Maersk blue)	1
16	91-5699	BRACKET - engine (front)	1
	92-5250	BRACKET - engine (front, Maersk blue)	1
	55-7730	SCREW - engine bracket	8
	55-7123	WASHER - belleville (3/8, ss)	8

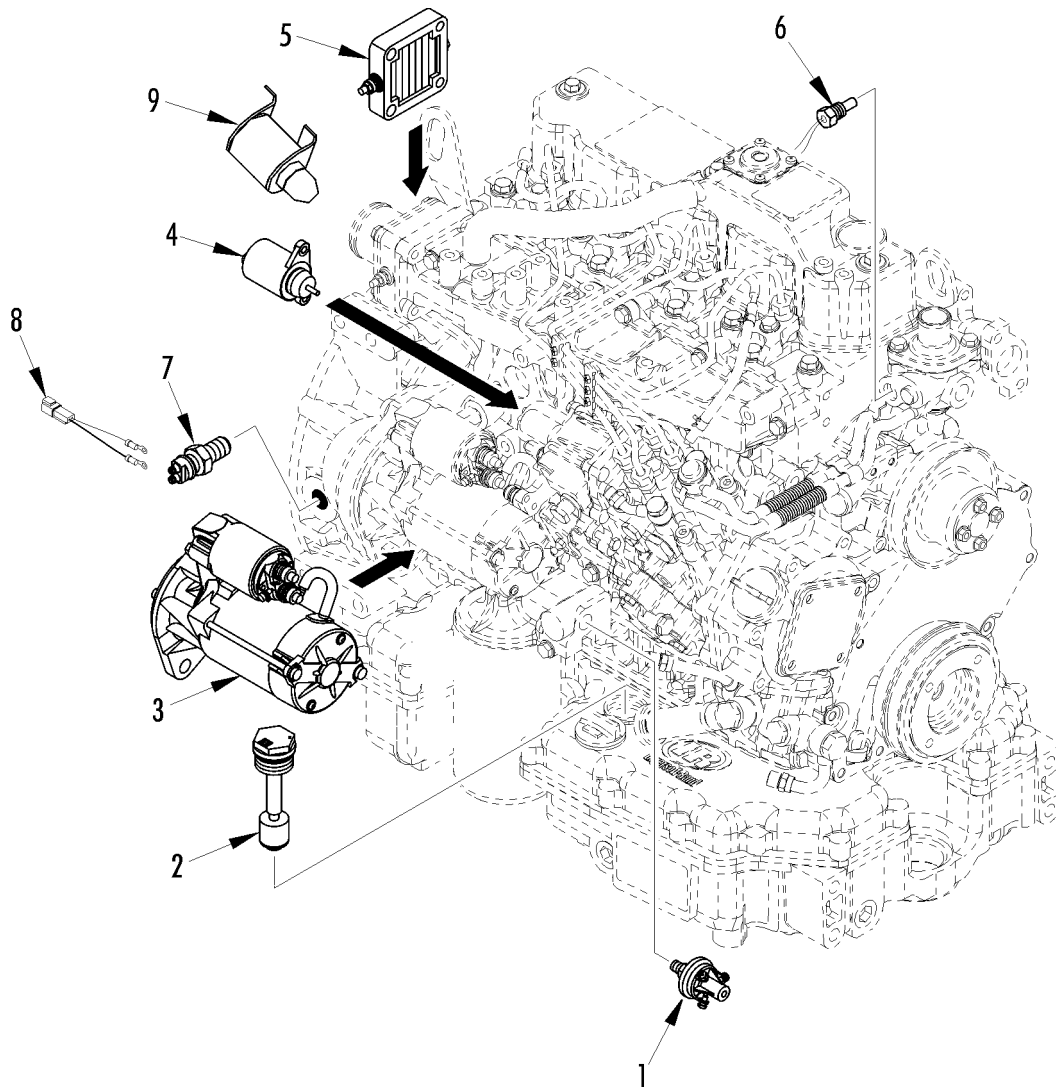 

 


REF	PART#	DESCRIPTION	QTY
1	41-8283	SWITCH - oil pressure	1
2	41-4470	SWITCH - oil level	1
	33-4160	• O-RING - switch	1
3	45-2177	STARTER (see 204G3)	1
4	42-100	SOLENOID - stop (see 204G2)	1
5	41-2147	HEATER - air (see 204F7)	1
6	41-6539	SENSOR - water temperature	1
7	44-9298	SENSOR - rpm	1
8	41-2704	HARNESS - sensor	1
9	44-9181	SOLENOID - speed	1

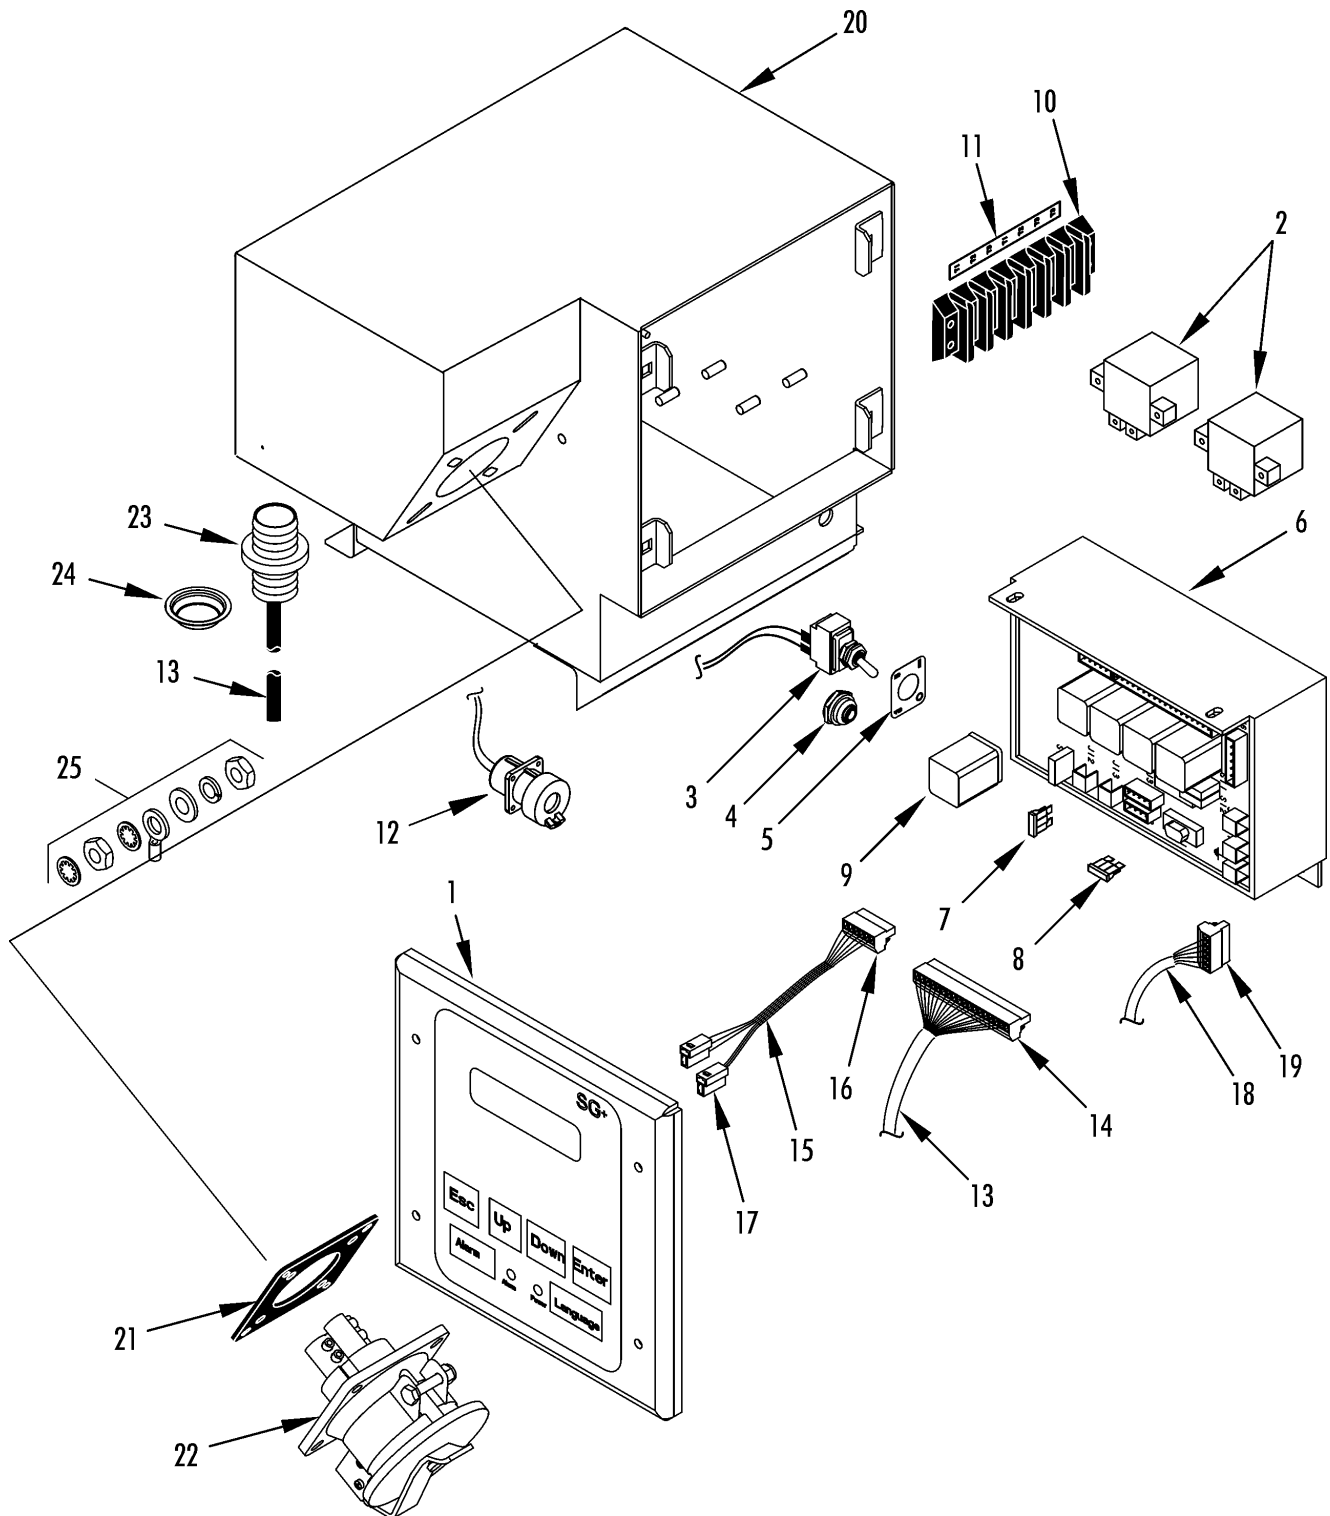 





REF	PART#	DESCRIPTION	QTY
1	41-7841	KEYPAD	1
	92-8090	DOOR (with nameplate)	1
	55-4526	NUT - captive	4
2	41-7836	RELAY - power	2
3	41-7835	HARNESS - switch	1
	44-1196	• SWITCH - on/off	1
4	44-739	BOOT - switch	1
5	99-7642	NAMEPLATE- on/off	1
6	45-2185	CONTROLLER -SG+ 3000	1
7	44-9758	• FUSE - (10 amp)	1
8	41-1771	• FUSE - (30 amp)	2
9	41-7904	• RELAY	5
	55-4953	NUT - controller	4
	55-2086	FLATWASHER	4
10	44-9282	BOARD TERMINAL (6 terminals)	1
11	91-860	MARKSTRIP	1
12	41-8064	HARNESS - download	1
	41-2406	CAP	1
13	41-7941	HARNESS - main	1
14	41-3608	• CONNECTOR - plug (18 pin)	1
15	41-7838	HARNESS - relay	1
16	504-843	• CONNECTOR - plug (6 pin)	1
17	44-5219	• CONNECTOR - relay	2
18	41-7839	HARNESS - exciter	1
19	41-7842	CONNECTOR - plug (5 pin)	1
20	98-7816	BOX - control	1
21	33-3168	GASKET - receptacle	1
22	41-3404	RECEPTACLE - 460 V	1
23	55-3539	FITTING - barb	1
	33-1056	O-RING	1
	55-2636	NUT - fitting	1
24	51-1648	PLUG - button	1
25	55-2965	NUT - ground	2
	55-2996	LOCKWASHER (int tooth)	2
	55-2964	LOCKWASHER	1
	55-2001	FLATWASHER	1

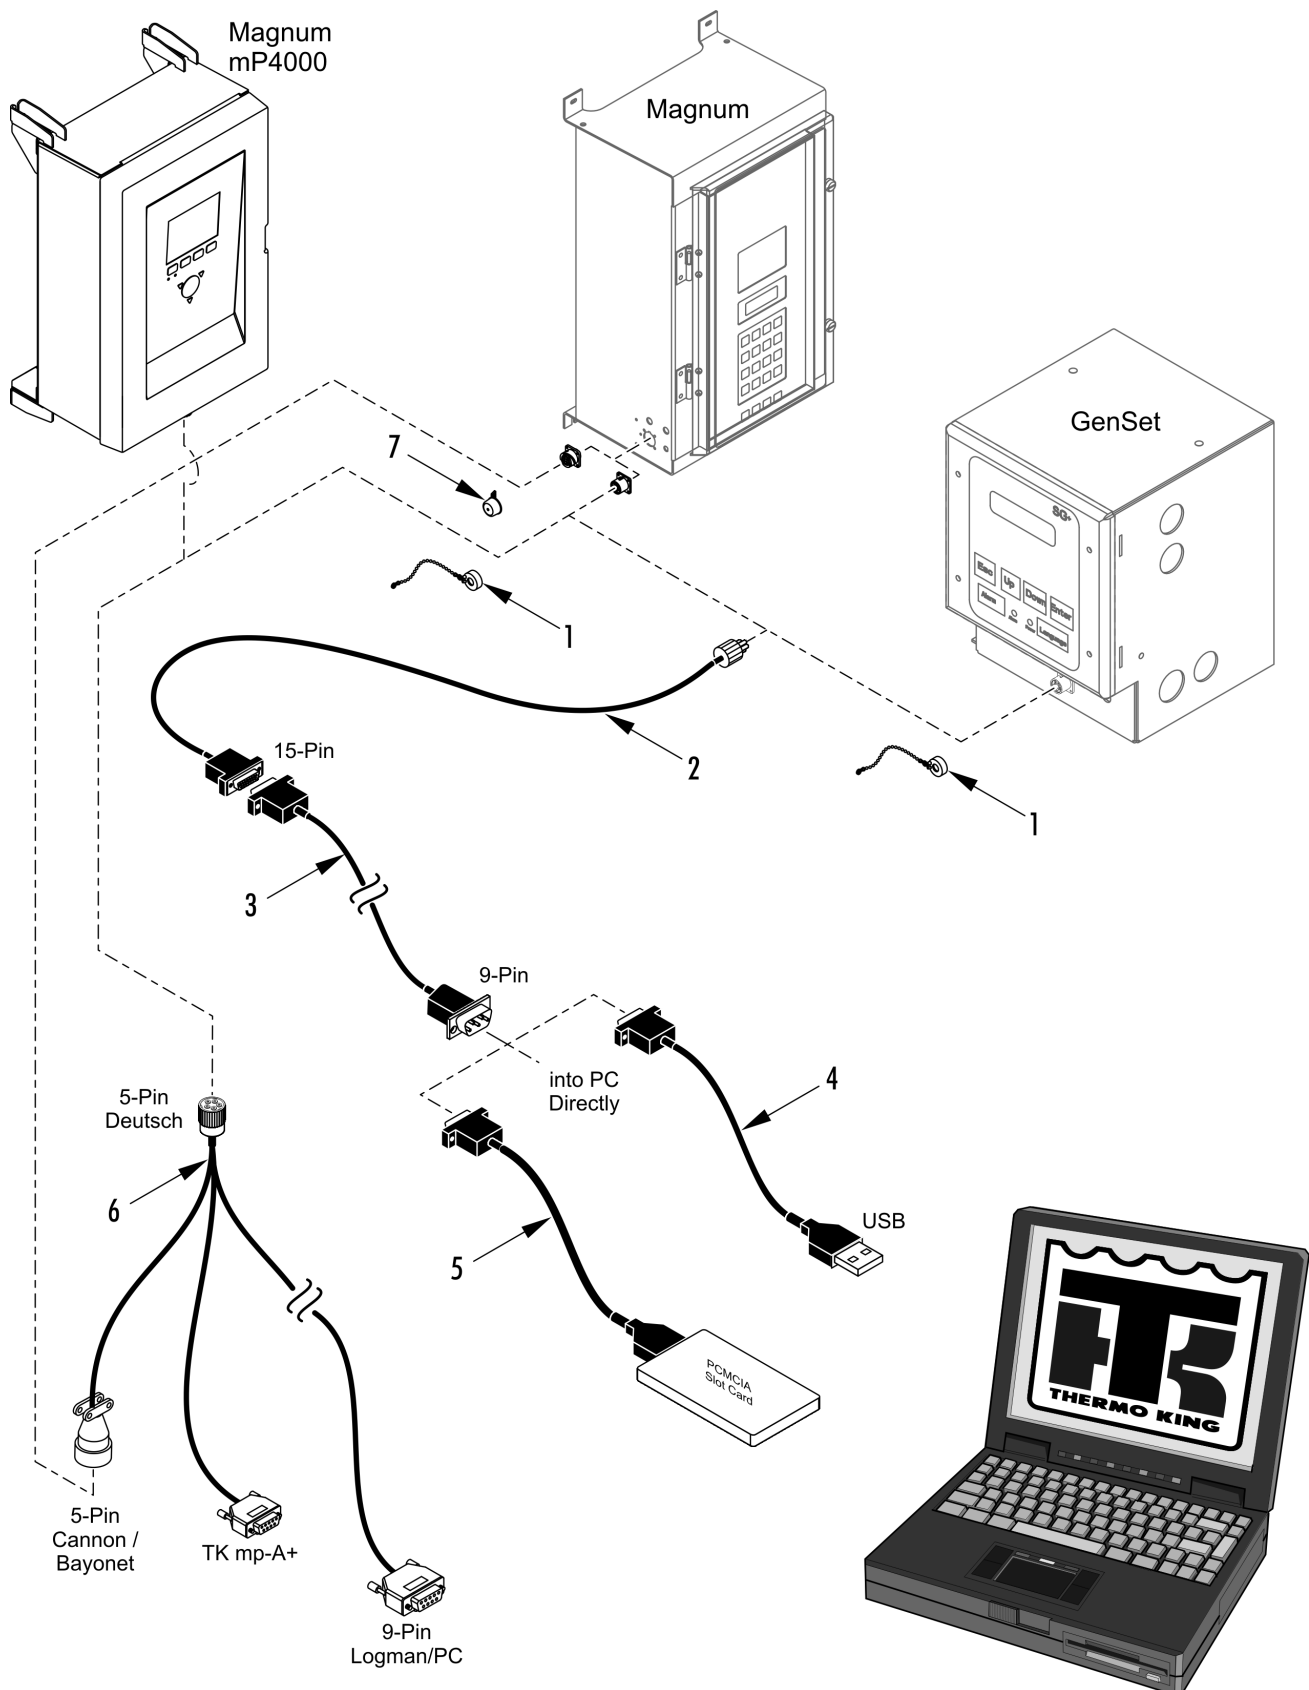 




REF	PART#	DESCRIPTION	QTY
1	41-2406	CAP - dust (5-pin Deutsch)	1
	99-3685	CHAIN - cap	1
2	204-918	CABLE - data (5-pin Deutsch to 15-pin D connectors)	1
	204-974	CABLE - data (5-pin Cannon bayonet to 15-pin D connectors)	1
	204-975	CABLE - data (5-pin Cannon threaded to 15-pin D)	1
3	44-9417	CABLE - data (15-pin D connector, 9-pin D PC, 20 ft)	1
	44-9418	CABLE - data (15-pin D connector, 9-pin D PC, 50 ft)	1
4	204-1109	ADAPTER - 9-pin D PC connector to USB	1
5	N/A	ADAPTER - 9-pin D PC to PC card (see service bulletin C061)	1
6	41-8065	CABLE - data download	1
7	41-3588	CAP - dust (5-pin Cannon)	1

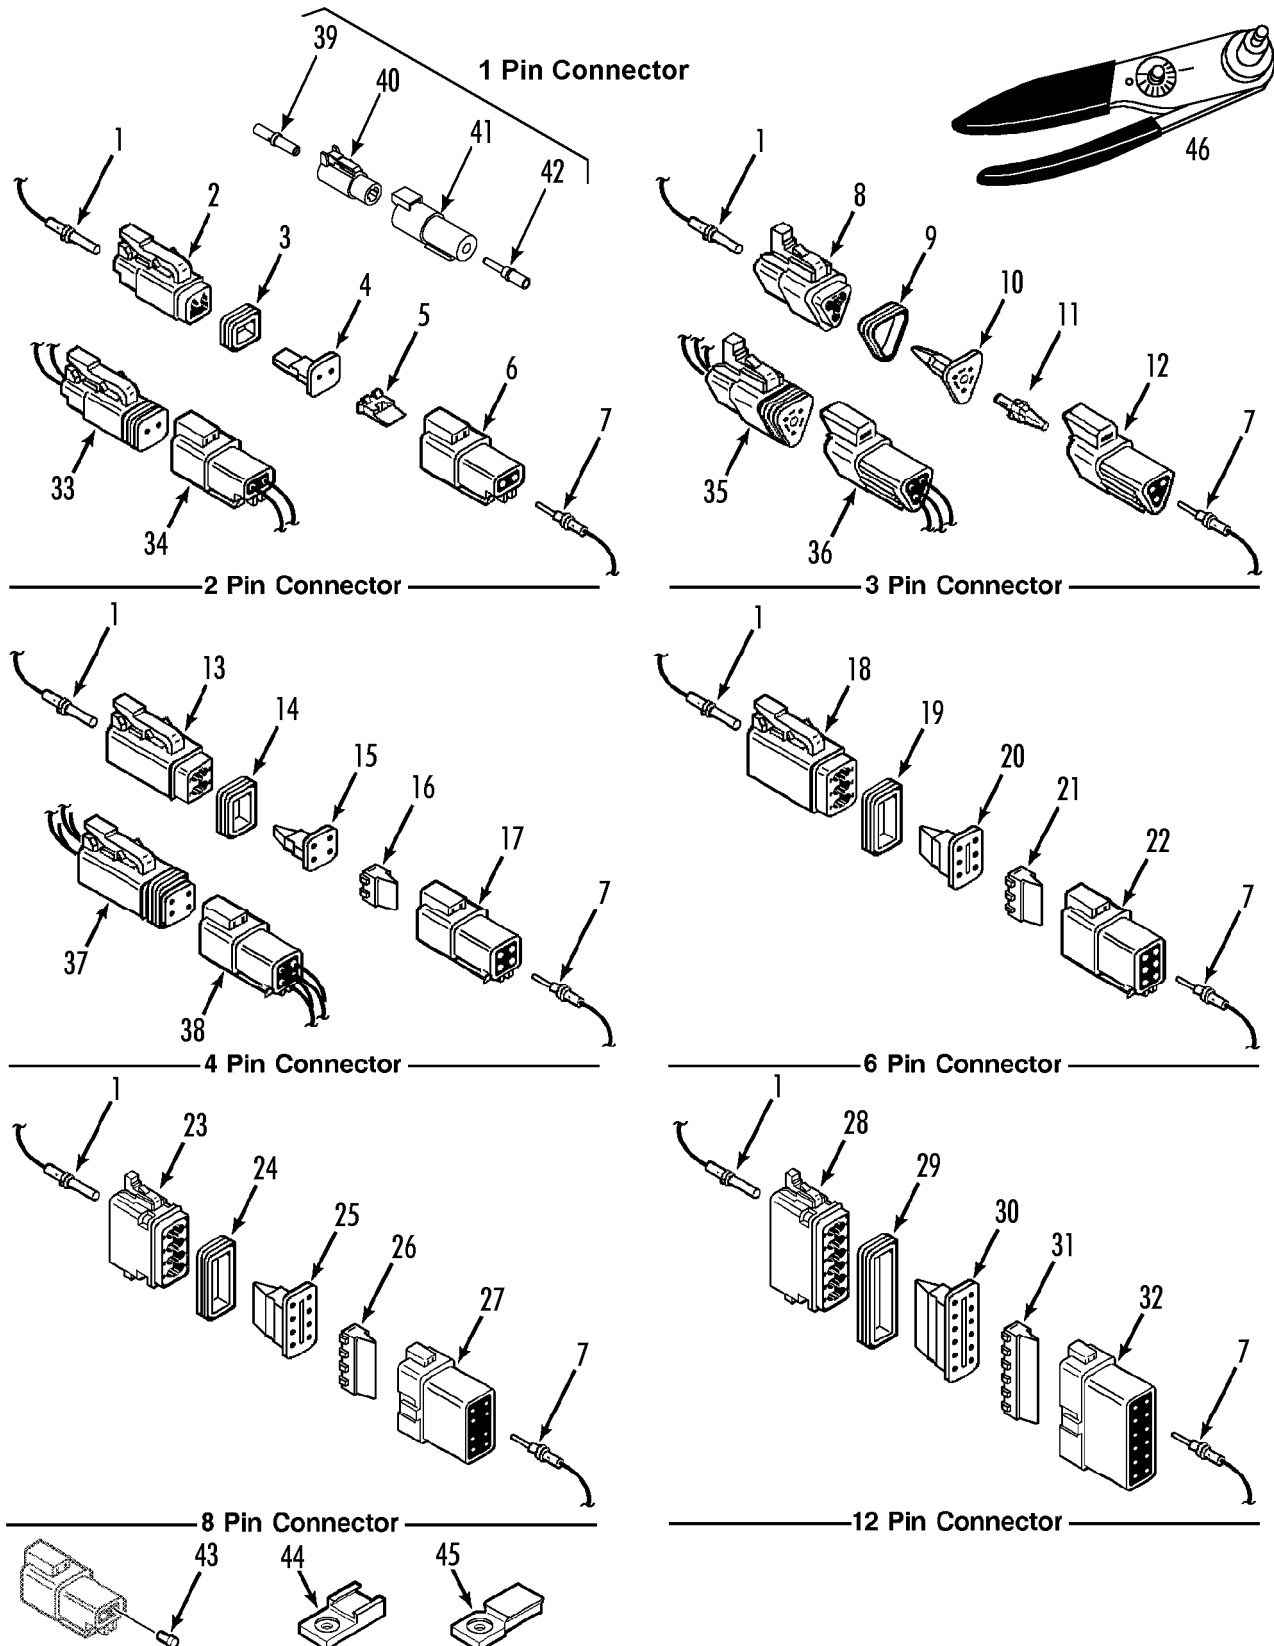 

 


REF	PART#	DESCRIPTION	QTY
1	44-9700	TERMINAL - socket (w/ 6 in wire lead)	2
	44-9587	TERMINAL - socket (without wire)	2
2	44-9585	PLUG (2 pin, w/ seal)	1
3	33-2392	SEAL	1
4	44-9586	WEDGE	1
5	44-9590	WEDGE	1
6	44-9589	RECEPTACLE (2 pin)	1
7	44-9701	TERMINAL - pin (w/ 6 in wire lead)	2
	44-9591	TERMINAL - pin (16-18 ga)	2
8	44-9631	CONNECTOR (3 pin, w/ seal)	1
9	33-2393	SEAL	1
10	44-9536	WEDGE	1
11	44-9545	WEDGE	1
12	44-9544	RECEPTACLE (3 pin)	1
13	44-8935	PLUG (4 pin, w/ seal)	1
14	33-2394	SEAL	1
15	44-8936	WEDGE	1
16	44-8918	WEDGE	1
17	44-8915	RECEPTACLE (4 pin)	1
18	44-8920	CONNECTOR (6 pin, w/ seal)	1
19	33-2395	SEAL	1
20	44-8921	WEDGE	1
21	44-8917	WEDGE	1
22	44-8914	RECEPTACLE (6 pin)	1
23	44-9903	PLUG (8 pin, w/ seal)	1
24	33-2396	SEAL	1
25	44-9902	WEDGE	1
26	44-9901	WEDGE	1
27	44-9900	RECEPTACLE (8 pin)	1
	41-2628	RECEPTACLE (8 pin, brown)	1
28	44-9600	PLUG (12 pin, w/ seal)	1
29	33-2397	SEAL	1
30	44-9601	WEDGE	1
31	44-9905	WEDGE	1
32	44-9904	RECEPTACLE (12 pin)	1
33	41-2323	PLUG - assembly (w/ 6 in wires)	1
34	41-2322	RECEPTACLE - assembly (w/ 6 in wires)	1
35	41-2325	PLUG - assembly (w/ 6 in wires)	1
36	41-2324	RECEPTACLE - assembly (w/ 6 in wires)	1
37	41-2327	PLUG - assembly (w/ 6 in wires)	1
38	41-2326	RECEPTACLE - assembly (w/ 6 in wires)	1
39	41-4524	SOCKET (8-10 ga)	1

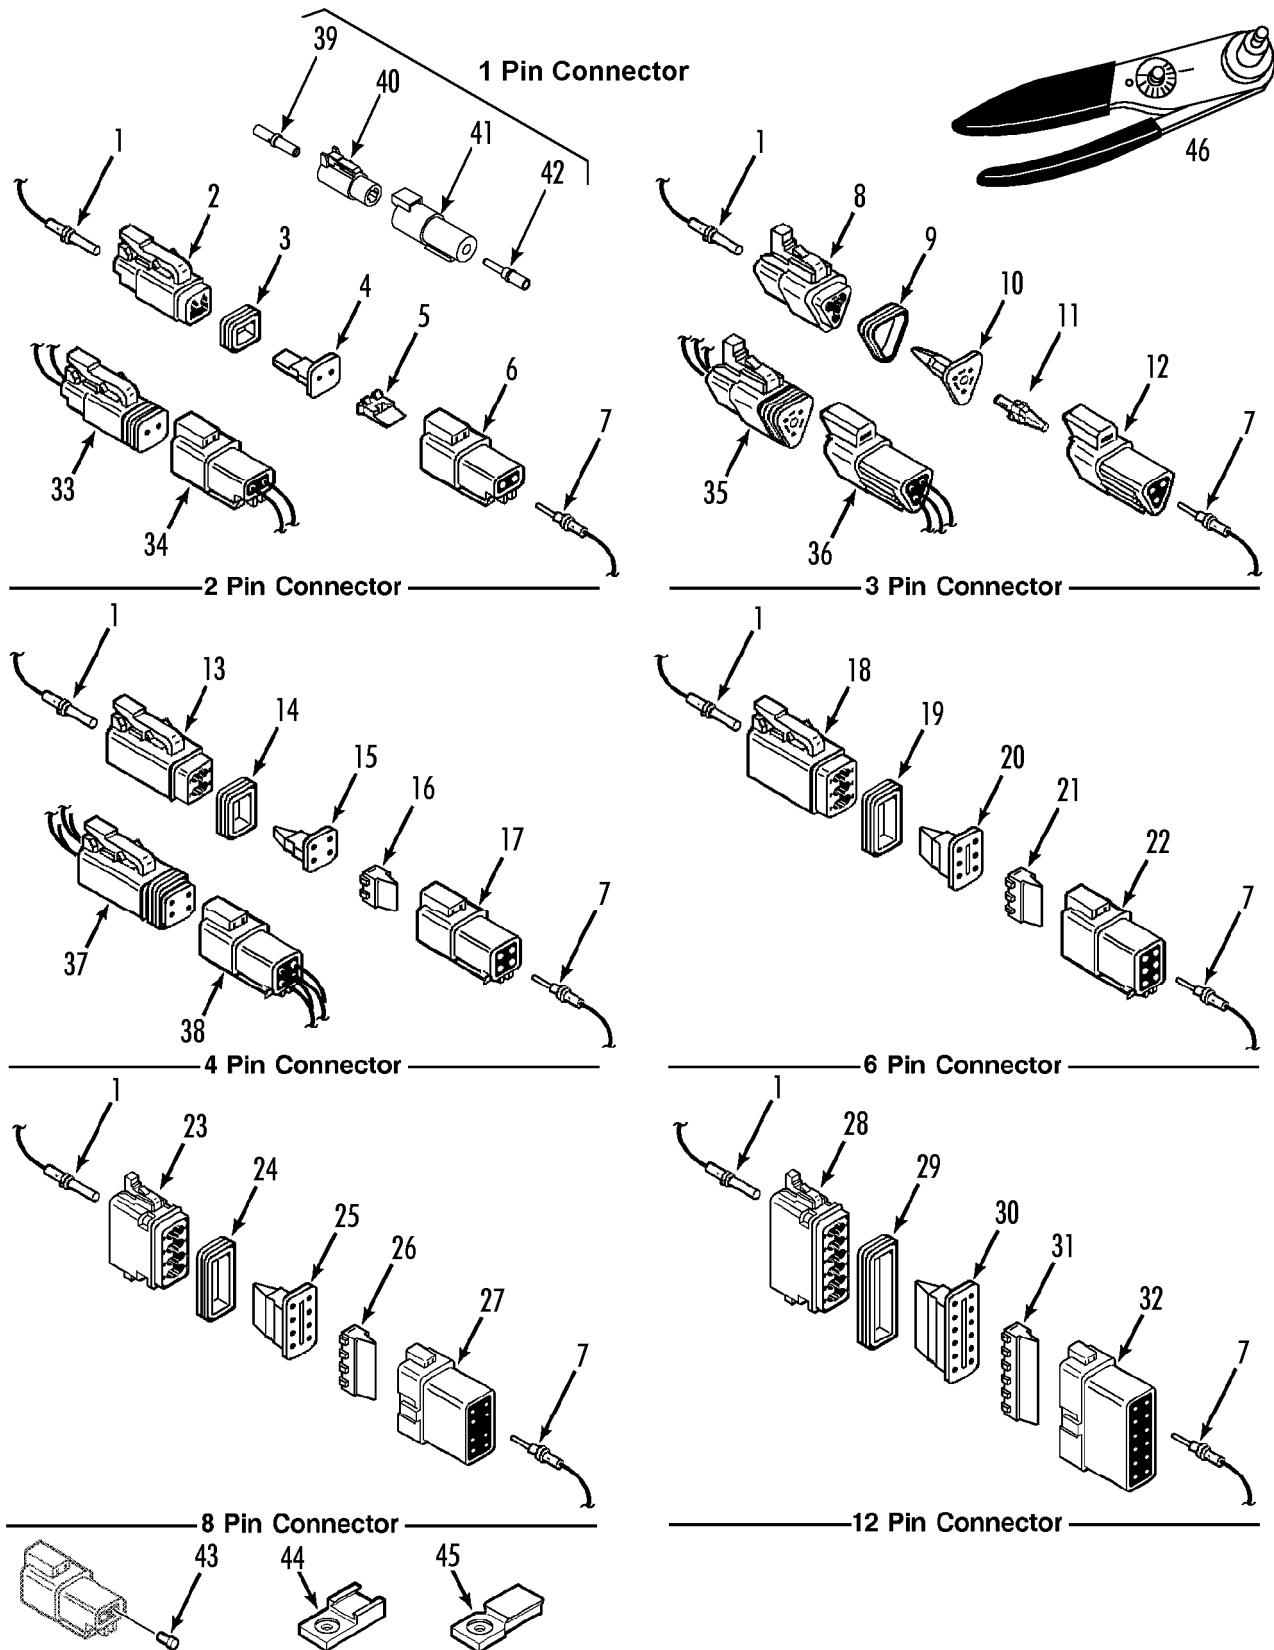 




REF	PART#	DESCRIPTION	QTY
40	41-3073	PLUG (1 terminal, 8-10 ga)	1
41	41-3069	CONNECTOR (1 terminal, 8-10 ga)	1
42	44-6850	PIN (8-10 ga)	1
43	44-9602	PIN - sealing	A/R
44	44-9906	TAB - mounting (for all connectors except the 8 pin connector)	A/R
45	44-9907	TAB - mounting (for 8 pin connector only)	A/R
46	204-703	KIT - crimper (w/ terminals)	1
	204-1038	• TOOL - crimper	1
	204-799	• TOOL - wedge remover	1

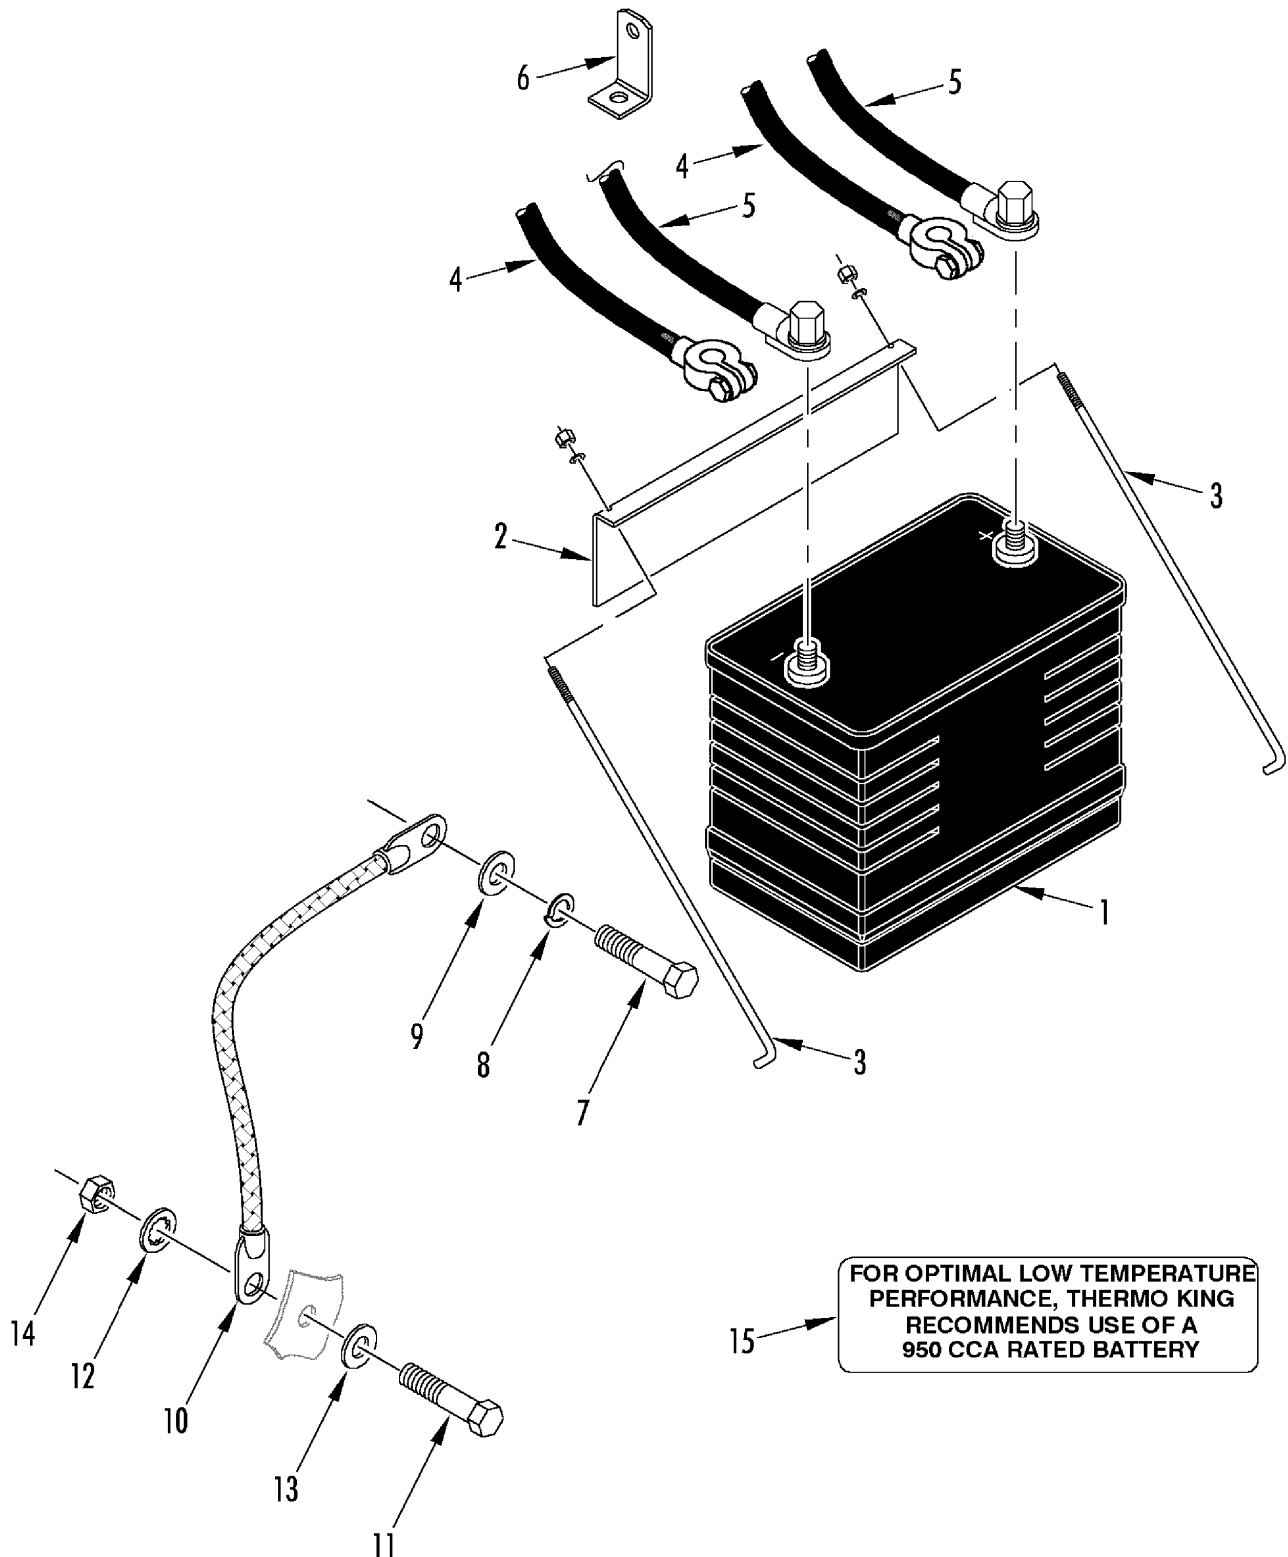 





REF	PART#	DESCRIPTION	QTY
1	203-733	BATTERY (950 CCA, threaded)	1
	203-732	BATTERY (950 CCA, posts)	1
2	92-269	STRAP - battery holddown	1
	92-5266	STRAP - battery holddown (Maersk blue)	1
3	91-4146	ROD - holddown	2
	55-4954	NUT - holddown	2
	55-2958	FLATWASHER	2
4	41-4240	CABLE - battery (negative & positive, post)	2
	55-4436	• NUT	2
5	41-1551	CABLE - battery (negative & positive, threaded)	2
	44-7051	BOOT	2
6	91-7530	BRACKET - battery cable	1
	92-5267	BRACKET - battery cable (Maersk blue)	1
	55-1587	SCREW - bracket	2
	55-2086	FLATWASHER	2
	55-4953	LOCKWASHER	2
	55-2240	CLAMP	4
7	55-5022	SCREW - strap to engine	1
8	55-2959	LOCKWASHER	2
9	55-2958	FLATWASHER	2
10	41-808	STRAP - ground (20 in lg)	1
11	55-1587	SCREW - strap to frame	1
12	55-2993	LOCKWASHER (internal tooth)	2
13	55-2086	FLATWASHER	2
14	55-4953	NUT	1
15	92-6531	NAMEPLATE - 950 CCA Battery	1

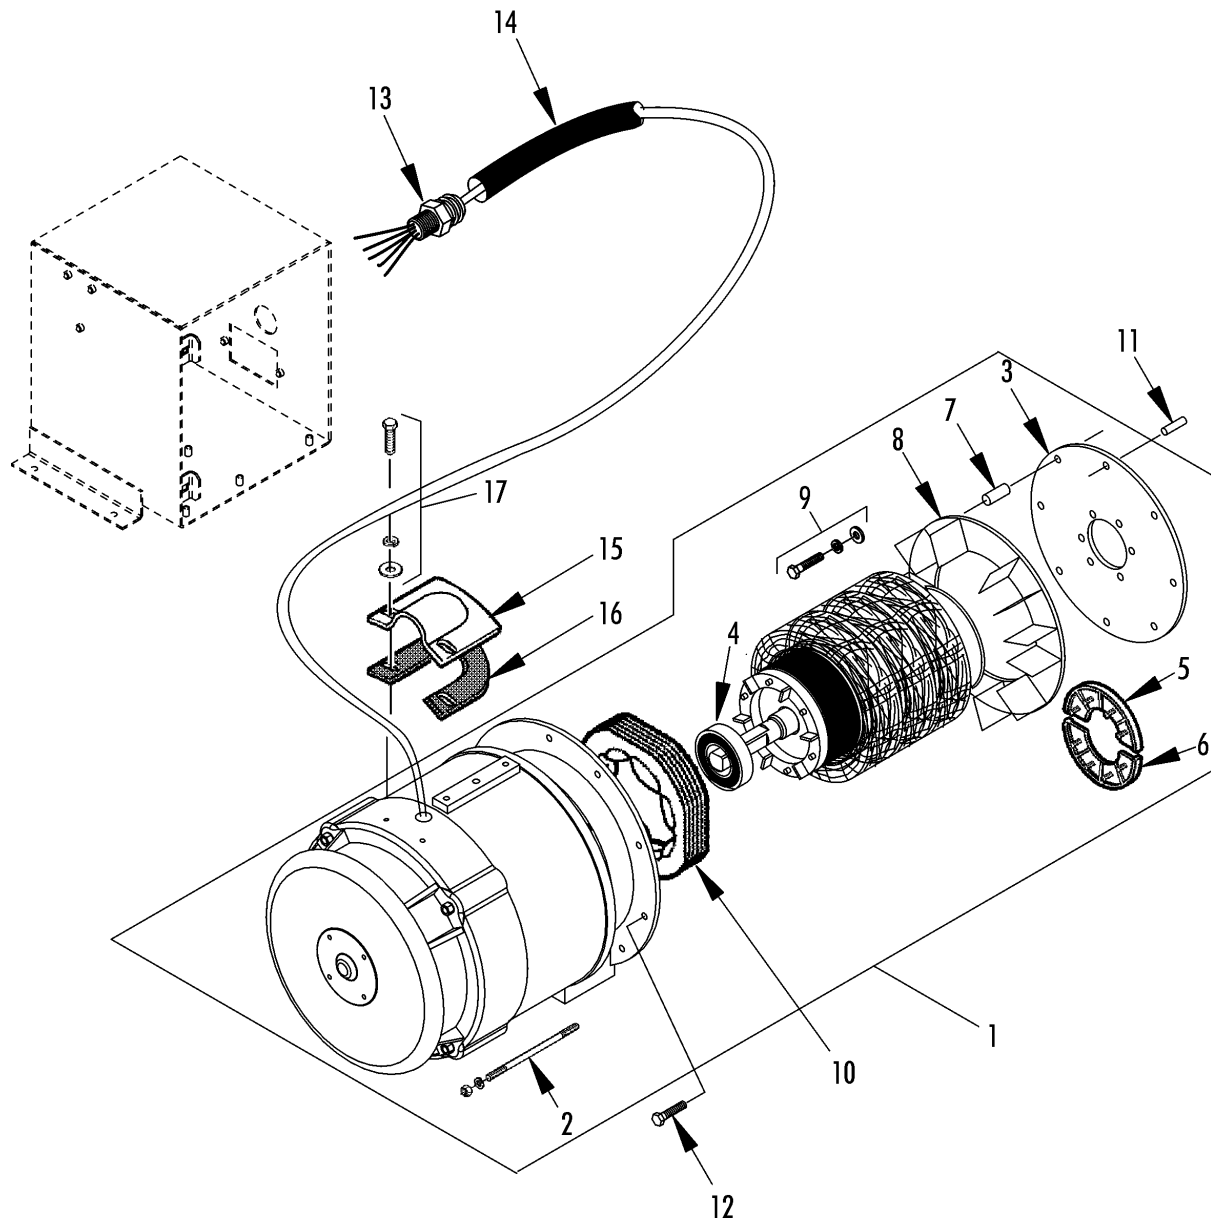 




REF	PART#	DESCRIPTION	QTY
1	404-153	ALTERNATOR	1
2	55-3985	• STUD - housing	4
	55-1800	• LOCKWASHER	4
	55-2640	• NUT	4
3	11-9482	• DISC - flex	1
4	77-2747	• BEARING	1
5	44-4678	• RECTIFIER - positive	1
6	44-4679	• RECTIFIER - negative	1
	55-664	• NUT - rectifier	6
	55-2964	• LOCKWASHER	6
	55-2001	• FLATWASHER	6
7	55-9820	• SPACER - fan	6
8	77-2654	• BLOWER	1
9	55-8137	• SCREW - fan	6
	55-7066	• LOCKWASHER	7
	55-6988	• FLATWASHER	6
10	45-2301	• EXCITER - stator (14 ohm)	1
11	55-9497	PIN - dowel	2
12	55-8137	SCREW - disc to flywheel	6
	55-7066	LOCKWASHER	6
	55-6988	FLATWASHER	6
13	55-3539	CONNECTOR - barb	1
	33-1056	O-RING	1
	55-2636	NUT	1
14	98-5035	HOSE - harness (cut to 26.0 inches)	A/R
15	91-3439	COVER - harness	1
16	33-1420	GASKET - cover	1
17	55-1587	SCREW - cover	2
	55-2086	FLATWASHER	2
	55-1800	LOCKWASHER	2

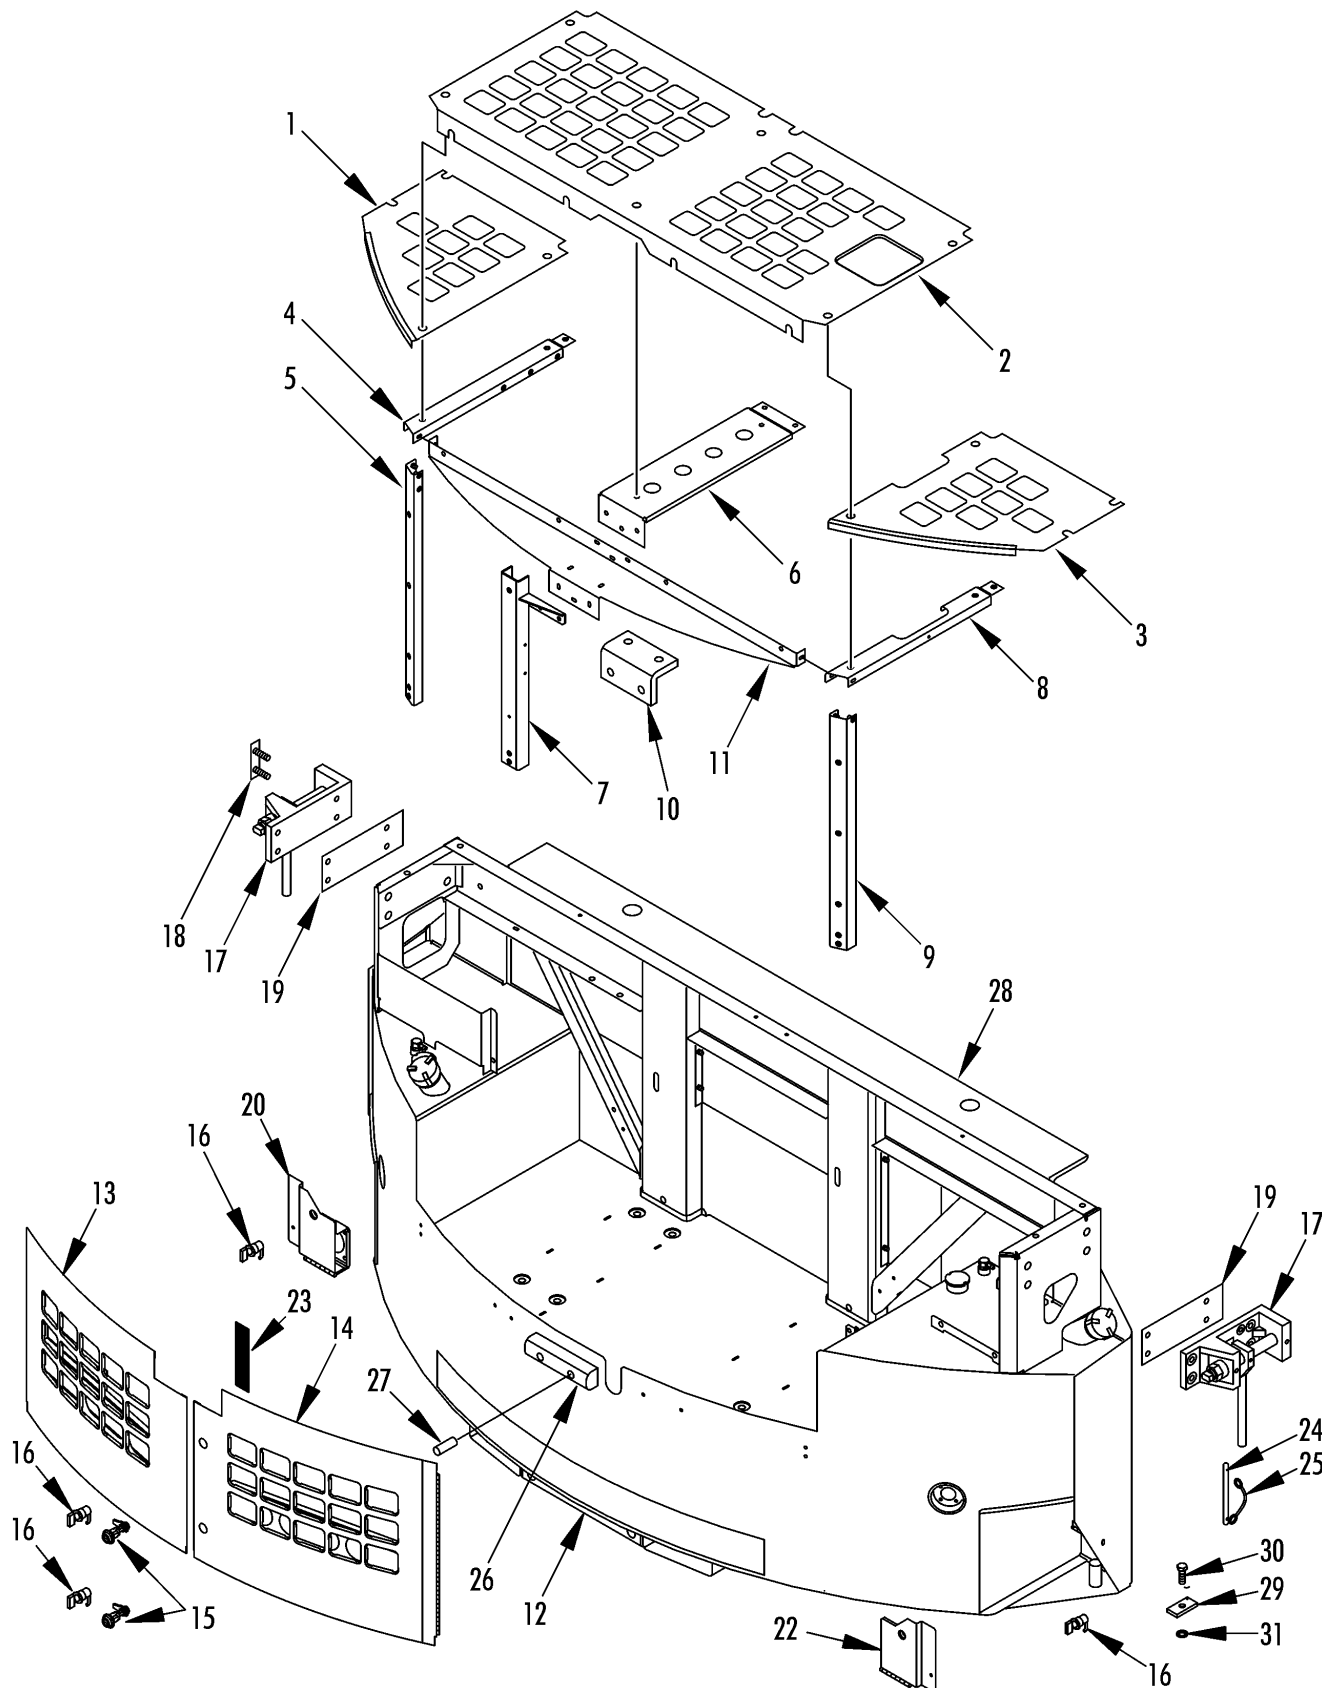 

 


REF	PART#	DESCRIPTION	QTY
1	98-7884	PANEL - top (curbside)	1
2	90-384	PANEL - top (center)	1
	55-2969	SCREW - panel	9
	55-2959	LOCKWASHER	9
3	98-7883	PANEL - top (roadside)	1
4	92-251	CHANNEL - top (curbside)	1
5	92-252	SUPPORT - right	1
	55-2977	SCREW - support	3
	55-2086	FLATWASHER	3
	55-1800	LOCKWASHER	3
6	92-249	CHANNEL - center	1
7	92-6715	SUPPORT - center	1
8	92-253	CHANNEL - top (roadside)	1
9	92-254	SUPPORT - vertical (roadside)	1
10	92-5117	BUMPER - bulkhead	1
	91-5315	SPACER - bumper	4
	55-3121	SCREW - bumper	4
	55-2086	FLATWASHER	4
	55-1800	LOCKWASHER	4
11	98-7980	SUPPORT - frame (top shelf)	1
12	98-7294	FRAME - fuel tank	1
13	98-7219	DOOR - curbside	1
14	98-7221	DOOR - roadside	1
15	92-260	LATCH - door	2
16	99-6599	LATCH - door	A/R
	91-5315	SPACER - door latch	4
	55-3003	SCREW - spacer	8
	55-3013	FLATWASHER	32
	55-3014	LOCKWASHER	8
	55-2999	NUT	8
	55-7527	SCREW - door	6
	55-7729	WASHER - belleville	6
17	91-3161	BRACKET - clip-on (left, see 105C8)	1
	91-3162	BRACKET - clip-on (right, see 105C8)	1
18	91-7227	BOLTSTRIP - bracket	4
	55-4767	FLATWASHER	8
	55-5418	NUT	4
19	91-2382	SPACER - bracket	2
20	92-266	COVER - retainer bolt, curbside (incl latch #16)	1
22	92-267	COVER - retainer bolt, roadside (incl latch #16)	1
23	99-6377	STRIP - bumper	6
24	91-7229	BAR - locking	2

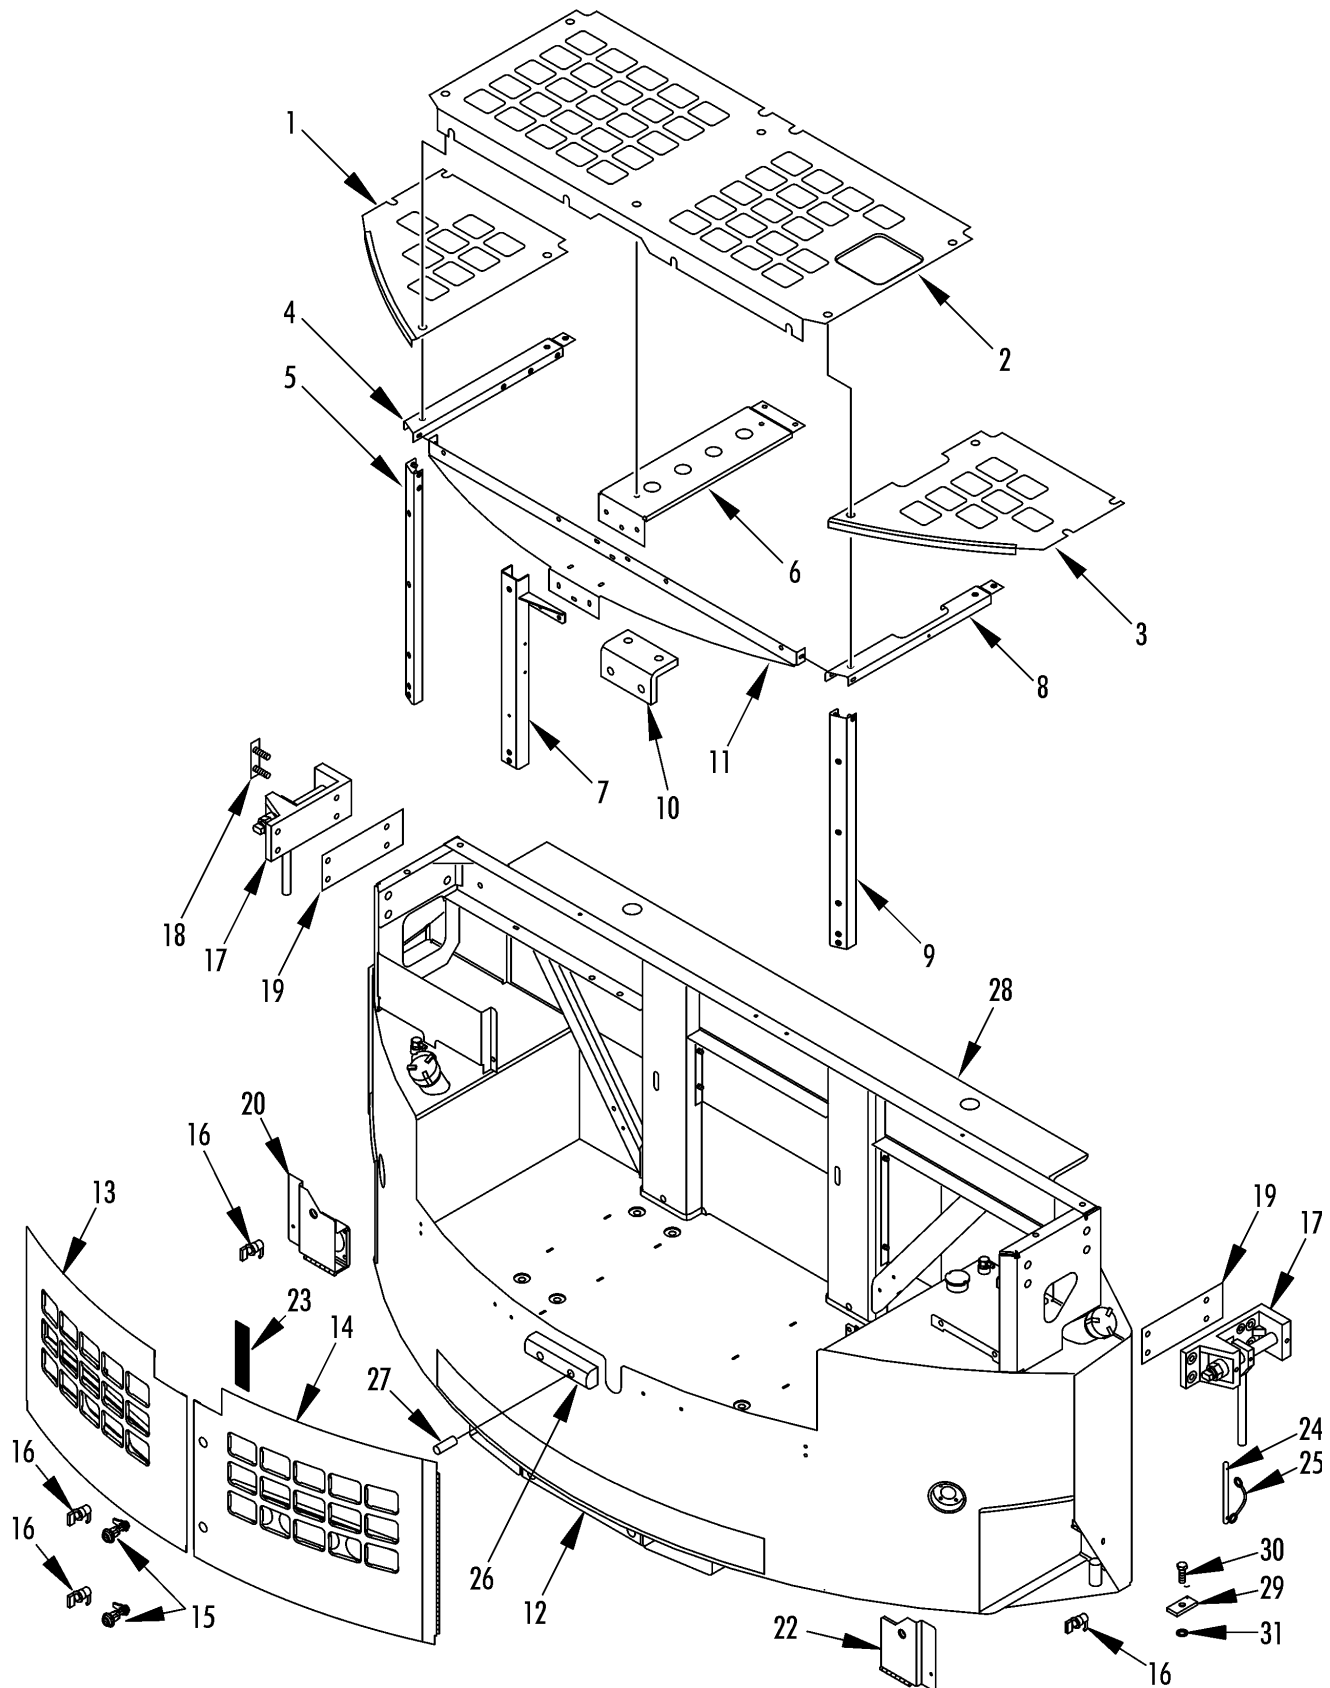 





REF	PART#	DESCRIPTION	QTY
25	91-7231	LANYARD	2
	91-6826	RING - key	4
	91-6825	COTTER - loop	4
26	92-5118	BUMPER - lower	2
27	92-265	SPACER - bumper	2
	55-3121	SCREW - bumper	2
	55-2086	FLATWASHER	2
	55-4953	NUT	2
28	11-9292	KIT - pin mount option	1
29	91-7228	WASHER - special	2
30	55-5941	SCREW - mounting	2
31	91-6824	FASTENER - push-on	2

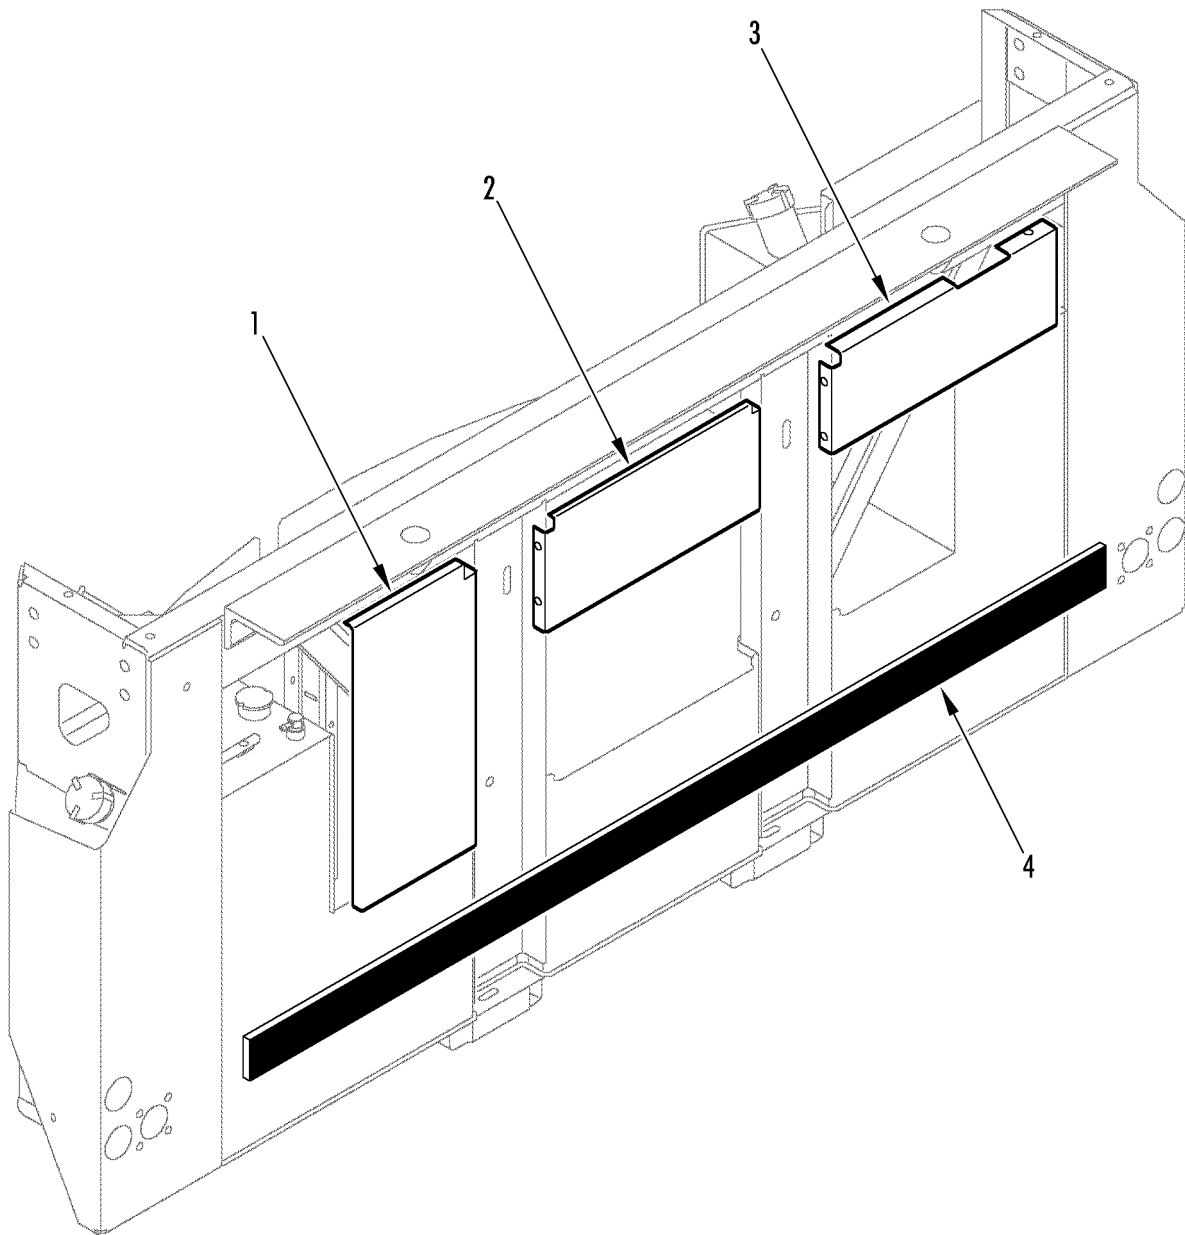 



REF	PART#	DESCRIPTION	QTY
1	92-6717	SHIELD - radiator fan	1
	92-6428	SHIELD - radiator fan (Maersk blue)	1
	55-8979	• INSERT	2
2	92-6716	SHIELD - muffler	1
	98-7227	SHIELD - muffler (Maersk blue)	1
	55-8979	• INSERT	4
3	92-6718	SHIELD - exhaust tube	1
	92-6420	SHIELD - exhaust tube (Maersk blue)	1
	55-8979	• INSERT	3
	55-1587	SCREW - shield	9
	55-1800	LOCKWASHER	9
4	91-6831	STRIP - foam	1

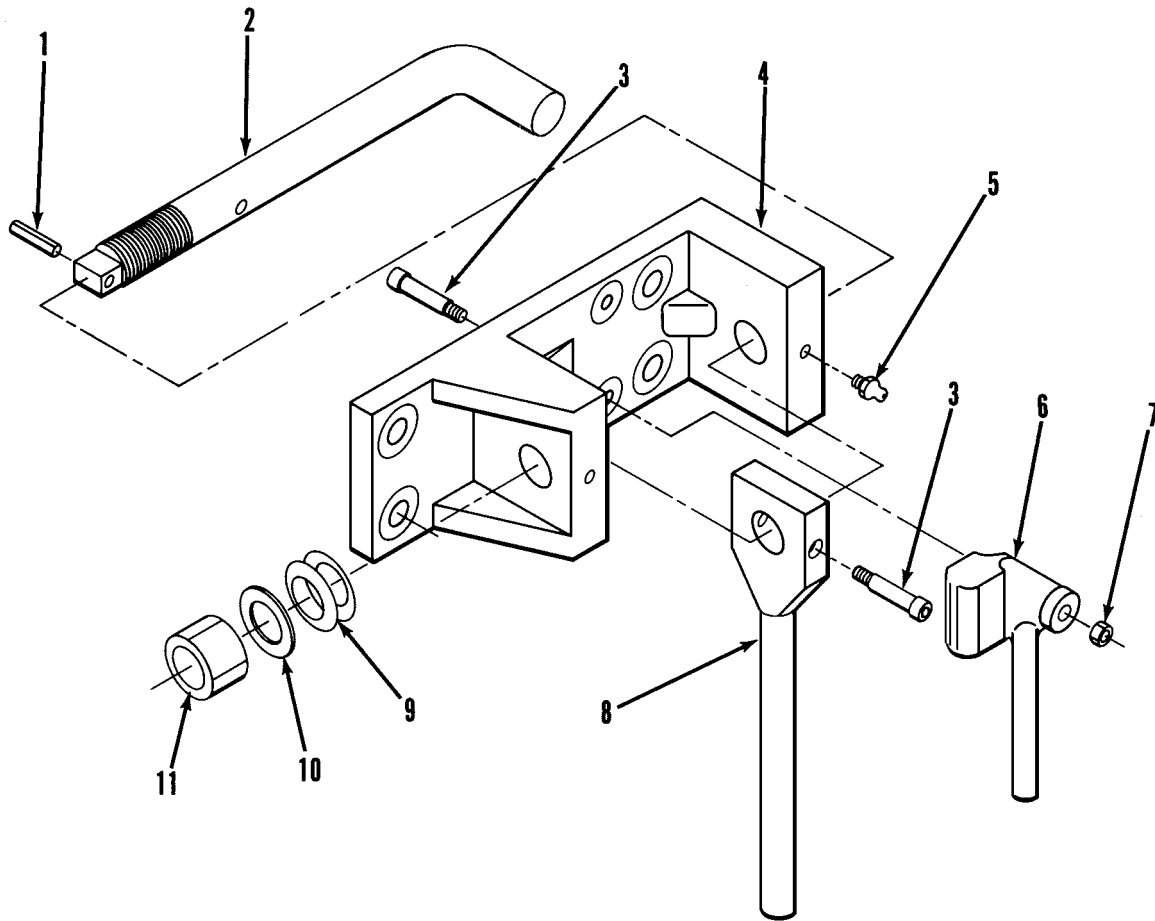 


 


REF	PART#	DESCRIPTION	QTY
	91-3161	BRACKET (lefthand)	1
	91-3162	BRACKET (righthand)	1
1	55-2925	• PIN - spring (slotted)	1
2	91-3160	• SHAFT - clamp	1
3	55-6030	• SCREW - shoulder	2
4	91-112	• BASE - clamp	1
5	55-4021	• FITTING - grease	2
	55-2155	• SCREW - set	2
6	91-114	• PAW - clamp	1
7	55-4118	• NUT	2
8	91-113	• HANDLE - clamp	1
9	55-6028	• WASHER - spring	2
10	55-6029	• WASHER - special	1
11	55-6027	• NUT	1



REF	PART#	DESCRIPTION	QTY
1	91-4511	NAMEPLATE - TK (CGCM & SGCM)	1
2	91-6284	NAMEPLATE - 15 kW	1
3	91-7171	NAMEPLATE - California Proposition	1
4	91-5703	POUCH - Service Information Records	1
	91-9447	SUPPORT - pouch	1
5	91-2384	NAMEPLATE - Caution Left	1
6	92-2504	NAMEPLATE - Clean Filter Screen	1
7	91-9918	NAMEPLATE - Thermo King (black letters)	1
	91-9919	NAMEPLATE - Thermo King (white letters)	1
8	91-2383	NAMEPLATE - Caution Right	1
9	99-9234	NAMEPLATE - Fan Universal	1
10	91-4512	NAMEPLATE - arrow	1
11	91-3423	NAMEPLATE - 460V	1
12	91-4148	NAMEPLATE - Installation Instructions (CGCO & SGCO)	1
	91-3425	NAMEPLATE - Installation Instructions (CGCM & SGCM)	1
13	91-338	NAMEPLATE - Document Holder	1
14	91-7012	NAMEPLATE - Radiator Fill	1
15	92-5115	NAMEPLATE - Smart Gen-Set Operating Instructions	1
	92-5116	NAMEPLATE - Smart Gen-Set Operating Instructions (Spanish)	1
16	92-1236	NAMEPLATE - Maintenance	1
17	99-3522	NAMEPLATE - Caution 460 Volts	1
18	92-4305	NAMEPLATE - IR logo	1
19	91-2389	NAMEPLATE - Diesel Fuel Only	1
20	99-3407	NAMEPLATE - Caution 230 Volts	1
21	91-8810	NAMEPLATE - CE	1
22	92-4977	NAMEPLATE - Warning, Ether	1
23	91-8684	NAMEPLATE - FHWA	1
24	92-5112	NAMEPLATE - Wiring/Schematic Diagram	1
25	92-3828	NAMEPLATE - Caution	1
26	92-5113	NAMEPLATE - Smart Gen-Set Menu List	1
	92-5114	NAMEPLATE - Smart Gen-Set Menu List (Spanish)	1
27	91-8699	NAMEPLATE - Operating Instructions (CGCM)	1
	91-9920	NAMEPLATE - Operating Instructions (CGSM)	1
28	99-9938	NAMEPLATE - Caution, Start/Stop	1
29	99-9939	NAMEPLATE - Caution, Start/Stop (multi-language)	1
30	91-9269	NAMEPLATE - Texaco	1
31	92-5271	NAMEPLATE - MAEG	2
32	92-6424	NAMEPLATE - Maersk	1

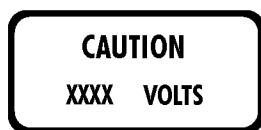 

1

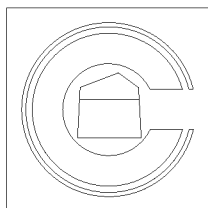 


2



5



 6



3



 
4



12



7

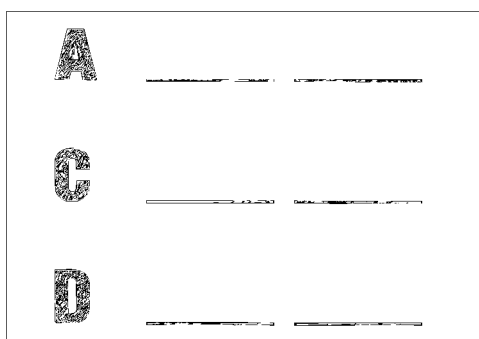

8



 
9



10

MAERSK

11



REF	PART#	DESCRIPTION	QTY
1	99-8030	NAMEPLATE - Caution, Volts	1
2	92-271	NAMEPLATE - Crowley	1
3	92-272	NAMEPLATE - Gen.Set ID	1
4	N/A	NAMEPLATE - Genstar Logo (supplied by customer)	1
5	92-274	NAMEPLATE - Property of Transamerica	1
6	92-275	NAMEPLATE - Instructions, Spanish	1
7	92-276	NAMEPLATE - Transamerica	1
8	92-6372	NAMEPLATE - ACD (Crowley)	1
9	92-6371	NAMEPLATE - weight (Yang Ming Line)	1
10	92-6370	NAMEPLATE - Hamburg Sud	1
11	92-6424	NAMEPLATE - Maersk	1
12	92-109	NAMEPLATE - Weight	1

INDEX NUMERICAL BY PART NUMBER

101-354	22, 28	11-8924	14	12-870	8
101-362	22, 24, 28, 30, 42	11-8927	10	12-925	30
101-379	6	11-8928	8	13-1063	16
10-242	42, 44	11-8929	8	13-1064	18
10-243	42	11-8932	8	13-1065	18
10-373	28	11-8933	10	13-1066	18
11-2854	34	11-8934	8, 40	13-1138	18
11-4367	42	11-8935	8, 40	13-126	10
11-4372	42, 44	11-8936	10	13-127	34
11-4380	42, 44	11-8942	10	13-128	34
11-4607	50	11-8944	20	13-310	28
11-4665	52	11-8945	22	13-318	6
11-4693	50	11-8947	18	13-319	12
11-4841	42	11-8950	18	13-321	12
11-4941	42, 44	11-8951	18	13-322	12
11-4959	42	11-8952	18	13-323	24
11-5082	12	11-8953	18	13-324	24
11-5091	12	11-8964	24	13-325	24
11-5103	8	11-8965	24	13-326	24
11-5320	42	11-8970	34	13-327	24
11-5437	42	11-8971	34	13-328	24
11-5499	6	11-8972	34	13-332	8
11-5911	16	11-8973	34	13-333	8
11-6031	14	11-8974	34	13-334	8
11-6106	36	11-8975	34	13-335	8
11-6108	36	11-8976	34	13-336	8
11-6109	28	11-8977	34	13-337	8
11-6125	30	11-8984	16	13-338	8
11-6555	6	11-8995	24	13-339	8
11-6567	8	11-8998	34	13-340	8, 40
11-6704	8	11-9015	42	13-341	8, 36, 40
11-6707	8, 36, 40	11-9016	42	13-342	8, 28
11-6717	22	11-9017	42	13-343	20
11-6719	18, 22	11-9182	24	13-344	8
11-6786	36	11-9256	26	13-345	22
11-6787	36	11-9261	22	13-346	22
11-6788	36	11-9266	20, 46	13-348	22
11-6789	36	11-9286	48	13-349	22
11-6790	36	11-9292	74	13-350	22
11-7433	34, 42	11-9299	46	13-351	18
11-7499	34	11-9300	46	13-352	18
11-7707	34	11-9338	16	13-353	18, 54
11-7757	46	11-9342	42	13-355	18
11-7828	46	11-9354	24	13-356	24, 28
11-8048	44	11-9446	28	13-357	24
11-8667	16	11-9447	24	13-358	26, 54
11-8671	8	11-9448	16	13-360	26
11-8675	26	11-9482	70	13-363	26
11-8680	34	11-9524	50	13-368	28
11-8681	34	11-9525	50	13-370	36
11-8682	34	11-9592	12, 18	13-371	28
11-8718	44	11-9594	44	13-385	26
11-8719	44	12-538	50	13-388	28, 36
11-8887	44	12-750	18	13-389	28
11-8888	50	12-799	50	13-391	28
11-8891	50	12-800	48	13-392	28
11-8913	50	12-867	14	13-393	28
11-8919	6	12-868	16	13-440	30
11-8923	16	12-869	16	13-442	30

INDEX NUMERICAL BY PART NUMBER

13-444	30	33-2392	64	41-2324	64
13-445	30	33-2393	64	41-2325	64
13-446	30	33-2394	64	41-2326	64
13-447	30	33-2395	64	41-2327	64
13-448	30	33-2396	64	41-2406	60, 62
13-449	30	33-2397	64	41-2628	64
13-450	30	33-2762	8, 40	41-2704	58
13-451	28	33-2764	20, 40	41-3069	66
13-455	18	33-2765	20, 40	41-3073	66
13-461	18	33-2767	26, 40	41-3404	60
13-509	26, 50	33-2768	26, 40	41-3588	62
13-511	30	33-2771	34	41-3608	60
13-514	26	33-2931	24, 40	41-4240	68
13-648	10	33-2934	10, 40	41-4470	16, 58
13-657	46	33-2936	20, 40	41-4524	64
13-659	8	33-2937	20, 40	41-6508	38
13-815	26	33-2940	34	41-6509	38
13-920	6	33-2941	34	41-6510	38
13-921	6	33-2942	34	41-6511	38
13-924	18	33-2969	14, 40	41-6512	38
13-925	18	33-2974	14	41-6513	38
13-926	6	33-3096	26, 40	41-6514	38
13-927	6	33-3097	26, 40	41-6515	38
13-928	6	33-3098	26, 40	41-6516	38
13-930	22	33-3168	60	41-6517	38
13-932	8	33-3512	8, 40	41-6518	38
13-934	44	33-3821	12, 40	41-6519	38
13-946	44	33-3833	24, 40	41-6520	38
13-950	50	33-3878	44	41-6521	38
13-972	42	33-4087	12	41-6539	50, 58
13-973	42	33-4088	12	41-7835	60
203-348	10, 12, 16, 40	33-4089	12, 24, 40	41-7836	60
203-393	42	33-4090	16, 40	41-7838	60
203-400	46, 50	33-4122	10, 40	41-7839	60
203-732	68	33-4160	16, 58	41-7841	60
203-733	68	33-4168	30	41-7842	60
204-1011	12	33-4169	30	41-7904	60
204-1038	66	33-4170	30	41-7941	60
204-1109	62	33-4171	30	41-8064	60
204-1848	28	33-4172	30	41-8065	62
204-427	54	33-4173	30	41-808	68
204-542	28	33-4174	36	41-8283	58
204-703	66	33-4190	30	42-100	30, 58
204-799	66	33-4192	30	44-1196	60
204-918	62	33-4193	30	44-4678	70
204-952	14	33-4458	42	44-4679	70
204-974	62	33-4515	10	44-5219	60
204-975	62	33-4517	40	44-6850	66
204-994	14	40-1016	42	44-7051	68
30-291	40	40-1129	44	44-739	60
30-295	26	404-153	70	44-8914	64
33-1056	60, 70	41-1551	68	44-8915	64
33-1420	70	41-1771	60	44-8917	64
33-1745	26, 40	41-1818	50	44-8918	64
33-1749	34	41-2147	20, 58	44-8920	64
33-1953	12, 40	41-2156	38	44-8921	64
33-1954	12, 40	41-2317	6	44-8935	64
33-2230	30	41-2322	64	44-8936	64
33-2314	48	41-2323	64	44-9181	58

INDEX NUMERICAL BY PART NUMBER

44-9282	60	51-607	26	55-4593	6
44-9298	58	51-612	32	55-4607	28
44-9417	62	55-1510	44	55-4622	12, 24, 40
44-9418	62	55-1511	44	55-4644	24
44-9536	64	55-1587	16, 50, 68, 70, 76	55-4668	18
44-9544	64	55-1800	42, 48, 50, 70, 72, 76	55-4676	30
44-9545	64	55-1819	28	55-4740	50
44-9585	64	55-1983	50	55-4750	34
44-9586	64	55-2001	42, 60, 70	55-4767	72
44-9587	64	55-2038	56	55-4952	56
44-9589	64	55-2086	16, 42, 48, 50, 60, 68, 70, 72, 74	55-4953	16, 48, 50, 60, 68, 74
44-9590	64			55-4954	42, 68
44-9591	64	55-2114	46, 48	55-5022	42, 46, 48, 68
44-9600	64	55-2155	78	55-5081	16
44-9601	64	55-2240	68	55-5205	56
44-9602	66	55-2313	44	55-5400	50
44-9631	64	55-2539	50	55-5418	72
44-9700	64	55-2557	56	55-5617	44
44-9701	64	55-2636	60, 70	55-5763	10, 20, 24
44-9758	60	55-2640	70	55-5772	22
44-9900	64	55-2796	50	55-5780	26
44-9901	64	55-2925	78	55-5792	24, 26, 54
44-9902	64	55-2958	42, 46, 48, 56, 68	55-5801	10, 22
44-9903	64	55-2959	42, 46, 48, 54, 56, 68, 72	55-5803	8
44-9904	64	55-2963	56	55-5809	12, 16, 24
44-9905	64	55-2964	42, 60, 70	55-5816	12, 14, 18
44-9906	66	55-2965	52, 60	55-5822	30
44-9907	66	55-2969	72	55-5846	30
45-2177	38, 58	55-2977	48, 50, 72	55-5941	74
45-2185	60	55-2991	52	55-6027	78
45-2301	70	55-2993	68	55-6028	78
504-843	60	55-2995	50	55-6029	78
51-1145	6	55-2996	60	55-6030	78
51-1146	12	55-2999	72	55-6176	6
51-1147	24	55-3003	72	55-6187	30
51-1149	14	55-3013	72	55-6188	20, 24, 26, 28
51-1150	16	55-3014	72	55-6191	8, 14, 20, 28
51-1151	8, 28	55-3021	50	55-6193	8
51-1152	20	55-3089	48	55-6229	6
51-1153	20	55-3121	72, 74	55-6230	30
51-1154	22, 30	55-3305	46	55-6234	12
51-1155	22, 30	55-3364	44	55-6236	12
51-1156	24	55-3462	42	55-6237	12, 16
51-1157	24	55-3472	48	55-6245	8
51-1158	24	55-3490	42, 46	55-6246	8, 16
51-1159	24	55-3512	56	55-6248	26
51-1161	38	55-3539	60, 70	55-6249	18, 54
51-1162	14	55-3595	56	55-6250	18, 54
51-1205	30	55-3623	42	55-6367	12, 34
51-1206	30	55-3744	16	55-6537	14
51-1207	30	55-3834	54	55-664	70
51-1269	32	55-3985	70	55-6764	54
51-1648	60	55-4021	78	55-6814	56
51-2009	22	55-4118	78	55-6988	70
51-588	26	55-4203	42	55-6999	56
51-592	24	55-431	44	55-7066	70
51-593	24	55-4436	68	55-7123	56
51-594	12, 20	55-4526	60	55-7412	56
51-598	8	55-4560	52	55-7527	72

INDEX NUMERICAL BY PART NUMBER

55-7729	72	91-2382	72	92-260	72
55-7730	56	91-2383	80	92-265	74
55-7802	32	91-2384	80	92-266	72
55-8137	70	91-2389	80	92-267	72
55-8337	56	91-3160	78	92-269	68
55-8437	16	91-3161	72, 78	92-271	82
55-8441	10, 12, 24, 26	91-3162	72, 78	92-272	82
55-8442	8	91-338	80	92-274	82
55-8448	30	91-3423	80	92-275	82
55-8620	30	91-3425	80	92-276	82
55-8626	28	91-3439	70	92-3341	46
55-8653	50	91-3542	8	92-3828	80
55-8717	20	91-372	42	92-4305	80
55-8752	42	91-4146	68	92-4977	80
55-8852	6	91-4148	80	92-5112	80
55-8853	10	91-4511	80	92-5113	80
55-8854	12	91-4512	80	92-5114	80
55-8855	14	91-4823	16	92-5115	80
55-8856	14	91-5315	72	92-5116	80
55-8858	10	91-5699	56	92-5117	72
55-8859	8	91-5700	56	92-5118	74
55-8860	8	91-5703	80	92-5249	56
55-8864	18	91-6284	80	92-5250	56
55-8865	18	91-6824	74	92-5252	56
55-8868	24	91-6825	74	92-5253	56
55-8869	24	91-6826	74	92-5254	46
55-8871	34	91-6831	76	92-5258	50
55-8872	34	91-7012	80	92-5265	48
55-8894	38	91-7171	80	92-5266	68
55-8897	38	91-7191	16	92-5267	68
55-8898	38	91-7217	50	92-5271	80
55-8979	76	91-7227	72	92-6370	82
55-9011	50	91-7228	74	92-6371	82
55-9167	16	91-7229	72	92-6372	82
55-9222	22	91-7231	74	92-6416	50
55-9223	22	91-7233	48	92-6417	50
55-9497	70	91-7234	48	92-6420	76
55-9568	46	91-7530	68	92-6424	80, 82
55-9752	42	91-7782	50	92-6428	76
55-9820	70	91-860	60	92-6531	68
55-9828	54	91-8684	80	92-6715	72
77-1427	26	91-8699	80	92-6716	76
77-1428	26, 54	91-8810	80	92-6717	76
77-1472	54	91-9269	80	92-6718	76
77-2468	38	91-9447	80	92-7236	44
77-2469	38	91-9918	80	92-7710	42
77-2654	70	91-9919	80	92-8090	60
77-2747	70	91-9920	80	92-861	46
77-2752	26, 54	92-109	82	98-5035	70
77-2833	38	92-1236	80	98-5711	50
77-2834	38	92-225	56	98-5723	50
78-1340	54	92-226	56	98-5826	56
78-618	54	92-249	72	98-7219	72
813-509	26	92-2504	80	98-7221	72
90-331	54	92-251	72	98-7227	76
90-384	72	92-252	72	98-7294	72
91-112	78	92-253	72	98-771	50
91-113	78	92-254	72	98-7816	60
91-114	78	92-256	48	98-7883	72

INDEX NUMERICAL BY PART NUMBER

98-7884	72
98-7980	72
98-876	44
99-1433	56
99-1642	56
99-1916	56
99-3407	80
99-3522	80
99-3649	56
99-3685	52, 62
99-6377	72
99-6599	72
99-7642	60
99-8030	82
99-8301	50, 52
99-9234	80
99-9938	80
99-9939	80

INDEX ALPHABETICAL BY DESCRIPTION

A

ADAPTER - 9-pin D PC connector to USB **62**
ADAPTER - 9-pin D PC to PC card **62**
ADAPTER - compression tester **28**
ALTERNATOR **70**
ARM - rocker **8**
ARMATURE **38**

B

BAFFLE - breather **8**
BALL **24**
BALL - check **44**
BAR - locking **72**
BASE - clamp **78**
BATTERY **68**
BEARING **38, 70**
BEARING - ball **38**
BEARING - connecting rod **18**
BEARING - main **6**
BEARING - thrust **6, 22**
BELT - fan & water pump **54**
BLOCK - cylinder **6**
BLOWER **70**
BOARD TERMINAL **60**
BOLT - bearing cap **6**
BOLT - connecting rod **18**
BOLT - eye **24, 30, 34**
BOLT - flywheel **18**
BOLT - plate **22**
BOLT - thru **38**
BOLT - v-pulley **18**
BOLTSTRIP - bracket **72**
BOOT **68**
BOOT - switch **60**
BOX - control **60**
BRACKET **78**
BRACKET - air cleaner **46**
BRACKET - battery cable **68**
BRACKET - clip **16**
BRACKET - clip-on **72**
BRACKET - engine **56**
BRACKET - exhaust tube **48**
BRACKET - filter **24**
BRACKET - fuel strainer **42**
BRACKET - generator **56**
BRACKET - overflow tank **50**
BRACKET - radiator **50**
BRUSH **38**
BRUSH - positive **38**
BUMPER - bulkhead **72**
BUMPER - lower **74**
BUSHING **50**
BUSHING - camshaft **6**
BUSHING - idler gear **22**
BUSHING - piston pin **18**

C

CABLE - battery **68**

CABLE - data **62**
CABLE - data download **62**
CAM - feed pump **22**
CAMSHAFT **22**
CAP **16, 52, 60**
CAP - bearing **6**
CAP - dust **62**
CAP - fuel tank **44**
CAP - hose **16**
CAP - oil fill **12**
CAP - radiator **50**
CAP - valve **10**
CAP - vent **50**
CAP & CHAIN - overflow tank **50, 52**
CASE - cover **38**
CASE - gear **12**
CASE - oil seal **14**
CHAIN **52**
CHAIN - cap **62**
CHANNEL - center **72**
CHANNEL - top **72**
CIRCLIP **18**
CLAMP **68**
CLAMP - air cleaner **46**
CLAMP - hose **8, 26, 42, 46, 50**
CLAMP - tube **42**
CLEANER - air **46**
CLIP - hose **16**
CLUTCH - assembly **38**
COCK - drain **26, 50**
CONNECTOR **42, 64, 66**
CONNECTOR - barb **70**
CONNECTOR - plug **60**
CONNECTOR - relay **60**
CONTROLLER -SG+ 3000 **60**
COTTER - loop **74**
COVER **12**
COVER - breather **8**
COVER - dust **38**
COVER - fuel sensor **44**
COVER - gear case **12**
COVER - governor **30**
COVER - harness **70**
COVER - oil pump **24**
COVER - rear **38**
COVER - retainer bolt, curbside **72**
COVER - retainer bolt, roadside **72**
COVER - sound shield **12**
COVER - thermostat **26**
COVER - valve **8**
CRANKSHAFT **18**

D

DIAL - gauge **44**
DIPSTICK **16**
DISC - flex **70**
DOOR **60**
DOOR - curbside **72**
DOOR - roadside **72**

E

ELBOW **42, 44, 50**
ELBOW - hose **16**
ELBOW - hose fitting **42**
ELEMENT - air cleaner **46**
ENGINE **6**
EXCITER - stator **70**

F

FAN - radiator **54**
FASTENER - push-on **74**
FILTER - fuel **42**
FILTER - oil **24**
FITTING **42**
FITTING - barb **60**
FITTING - grease **78**
FITTING - indicator **46**
FITTING - oil drain **16**
FITTING - oil drain w/cap **16**
FITTING - oil inlet **24**
FLANGE **10, 22**
FLATWASHER **16, 28, 42, 44, 46, 48, 50, 56, 60, 68, 70, 72, 74**
FLYWHEEL **18**
FRAME - fuel tank **72**
FUSE - **60**

G

GASKET **26, 34, 40**
GASKET - adhesive **12, 16, 40**
GASKET - air heater **20, 40**
GASKET - copper **8, 36, 40**
GASKET - cover **12, 30, 70**
GASKET - cylinder head **10, 40**
GASKET - exhaust manifold **20, 40**
GASKET - flange **10, 40**
GASKET - fuel sensor **44**
GASKET - fuel strainer **42**
GASKET - inlet **20**
GASKET - intake manifold **20, 40**
GASKET - joint **26**
GASKET - liquid **10**
GASKET - muffler **48**
GASKET - nozzle **36**
GASKET - oil filter bracket **24**
GASKET - oil seal case **14, 40**
GASKET - receptacle **60**
GASKET - thermostat case **40**
GASKET - valve cover **8, 40**
GASKET - water pump **26, 40**
GASKET SET **26**
GAUGE - belt tension **54**
GAUGE - fuel **44**
GEAR **22**
GEAR - camshaft **22**
GEAR - crankshaft **18**
GEAR - injection pump **22**
GEAR - ring **18**
GUIDE - valve **8**

INDEX ALPHABETICAL BY DESCRIPTION

H

HANDLE - clamp **78**
 HANGER - overflow tank **50**
 HARNESS - download **60**
 HARNESS - exciter **60**
 HARNESS - main **60**
 HARNESS - relay **60**
 HARNESS - sensor **58**
 HARNESS - switch **60**
 HEAD - cylinder **8**
 HEAD - fuel filter **42**
 HEATER - air **20, 58**
 HEATER - frost plug **6**
 HEATER - fuel **42**
 HOLDER - brush **38**
 HOLDER - nozzle **36**
 HOSE **42, 44**
 HOSE - air cleaner **46**
 HOSE - drain **26**
 HOSE - engine to radiator **50**
 HOSE - harness **70**
 HOSE - inj pump to water pump **26**
 HOSE - inlet **50**
 HOSE - oil drain **16**
 HOSE - outlet **50**
 HOSE - overflow **50**
 HOSE - radiator to engine **50**
 HOSE - vent **44**
 HOSE & CLAMPS **28**
 HOUSING - flywheel **14**

I

INDICATOR - air restriction **46**
 INLET - intake manifold **20, 46**
 INSERT **42, 76**

J

JOINT - banjo **30, 34**
 JOINT - pump **26**

K

KEEPER - valve **10**
 KEY - gear **18, 22**
 KEYPAD **60**
 KIT - crimper **66**
 KIT - fan spacer **54**
 KIT - fuel return **28**
 KIT - gasket set **40**
 KIT - pin mount option **74**
 KIT - sleeve & eyelet **42, 44**
 KNOB - valve cover **8**

L

LANYARD **74**
 LATCH - door **72**
 LEVER **38**
 LEVER - control **30**
 LIFTER **30**
 LIFTER - engine **10**

LINER - service **6**
 LOCKNUT **48, 50**
 LOCKWASHER **30, 42, 44, 46, 48, 50, 54, 56, 60, 68, 70, 72, 76**

M

MANIFOLD - exhaust **20**
 MANIFOLD - intake **20**
 MARKSTRIP **60**
 MOUNT - vibration **56**
 MUFFLER **48**

N

NAMEPLATE - 15 kW **80**
 NAMEPLATE - 460V **80**
 NAMEPLATE - 950 CCA Battery **68**
 NAMEPLATE - ACD **82**
 NAMEPLATE - arrow **80**
 NAMEPLATE - California Proposition **80**
 NAMEPLATE - Caution **80**
 NAMEPLATE - Caution 230 Volts **80**
 NAMEPLATE - Caution 460 Volts **80**
 NAMEPLATE - Caution Left **80**
 NAMEPLATE - Caution Right **80**
 NAMEPLATE - Caution, Start/Stop **80**
 NAMEPLATE - Caution, Volts **82**
 NAMEPLATE - CE **80**
 NAMEPLATE - Clean Filter Screen **80**
 NAMEPLATE - Crowley **82**
 NAMEPLATE - Diesel Fuel Only **80**
 NAMEPLATE - Document Holder **80**
 NAMEPLATE - Fan Universal **80**
 NAMEPLATE - FHWA **80**
 NAMEPLATE - Genstar Logo **82**
 NAMEPLATE - Gen.Set ID **82**
 NAMEPLATE - Hamburg Sud **82**
 NAMEPLATE - Installation Instructions **80**
 NAMEPLATE - Instructions, Spanish **82**
 NAMEPLATE - IR logo **80**
 NAMEPLATE - MAEG **80**
 NAMEPLATE - Maersk **80, 82**
 NAMEPLATE - Maintenance **80**
 NAMEPLATE - Operating Instructions **80**
 NAMEPLATE - Property of Transamerica **82**
 NAMEPLATE - Radiator Fill **80**
 NAMEPLATE - Smart Gen-Set Menu List **80**
 NAMEPLATE - Smart Gen-Set Operating Instructions **80**
 NAMEPLATE - Texaco **80**
 NAMEPLATE - Thermo King **80**
 NAMEPLATE - TK **80**
 NAMEPLATE - Transamerica **82**
 NAMEPLATE - Warning, Ether **80**

NAMEPLATE - Weight **82**
 NAMEPLATE - weight **82**
 NAMEPLATE - Wiring/Schematic Diagram **80**
 NAMEPLATE- on/off **60**
 NOZZLE **36**
 NOZZLE - injection **28**
 NUT **8, 12, 16, 20, 22, 24, 26, 30, 34, 42, 46, 48, 50, 52, 54, 56, 68, 70, 72, 74, 78**
 NUT - ball joint **30**
 NUT - base **42**
 NUT - captive **60**
 NUT - controller **60**
 NUT - fitting **60**
 NUT - ground **60**
 NUT - holddown **68**
 NUT - hose fitting **44**
 NUT - lever **30**
 NUT - nozzle case **36**
 NUT - rectifier **70**

O

ORIFICE **24**
 ORIFICE - radiator **50**
 O-RING **8, 34, 40, 60, 70**
 O-RING - cap **12**
 O-RING - cover **8**
 O-RING - dipstick **16**
 O-RING - fuel injection pump **40**
 O-RING - gear case **12**
 O-RING - injection pump **12**
 O-RING - inner **30**
 O-RING - joint **26**
 O-RING - lifter **30**
 O-RING - pipe **24**
 O-RING - plug **30**
 O-RING - pump **30**
 O-RING - solenoid **30**
 O-RING - stopper & eye bolt **30**
 O-RING - switch **16, 58**

P

PAD - radiator **50**
 PANEL - top **72**
 PAW - clamp **78**
 PIN **36, 66**
 PIN - dowel **12, 14, 18, 70**
 PIN - piston **18**
 PIN - sealing **66**
 PIN - snap **34**
 PIN - spring **8, 18, 78**
 PINION - assembly **38**
 PIPE - breather **8**
 PIPE - fuel injection **28**
 PIPE - oil **24**
 PIPE - oil pickup **24**
 PISTON **18, 34**
 PLATE - baffle **8**

INDEX ALPHABETICAL BY DESCRIPTION

PLATE - stop **36**
PLUG **6, 10, 20, 24, 26, 30, 64, 66**
PLUG - access hole **14**
PLUG - assembly **64**
PLUG - button **60**
PLUG - drain **16**
PLUG - frost **6, 8**
PLUG - fuse **44**
PLUG - pipe **6, 44**
POUCH - Service Information Records **80**
PROTECTOR - nozzle **8, 36, 40**
PULLEY - crankshaft **18, 54**
PULLEY - water pump **26, 54**
PUMP **34**
PUMP - feed **30**
PUMP - fuel **34, 42**
PUMP - fuel injection **22, 24, 28, 30**
PUMP - injection **42**
PUMP - water **26, 50**

R

RADIATOR **50**
RECEPTACLE **64**
RECEPTACLE - 460 V **60**
RECEPTACLE - assembly **64**
RECTIFIER - negative **70**
RECTIFIER - positive **70**
RELAY **60**
RELAY - power **60**
RETAINER **34, 38**
RETAINER - nozzle **8, 28**
RETAINER - nozzle spring **36**
RETAINER - shaft **30**
RETAINER - spring **10**
RETAINER - tube **28**
RETAINER - valve **34**
RING - key **74**
RING SET **18**
ROD - connecting **18**
ROD - holddown **68**
ROD - push **22**
ROTOR - inner **24**
ROTOR - outer **24**

S

SADDLE - u-bolt **48**
SCREEN **34**
SCREEN - fuel strainer **42**
SCREEN - radiator **50**
SCREW **42, 50**
SCREW - adapter **46**
SCREW - base **42**
SCREW - bracket **24, 46, 48, 56, 68**
SCREW - bumper **72, 74**
SCREW - cam **22**
SCREW - case **12, 14**
SCREW - chain **52**
SCREW - clamp **42, 46**

SCREW - clip **16**
SCREW - cover **8, 12, 38, 70**
SCREW - cylinder head **10**
SCREW - disc to flywheel **70**
SCREW - door **72**
SCREW - engine bracket **56**
SCREW - exhaust manifold **20**
SCREW - fan **54, 70**
SCREW - field coil **38**
SCREW - flange **10**
SCREW - frame **56**
SCREW - gear **22**
SCREW - generator bracket **56**
SCREW - hanger **50**
SCREW - housing **14**
SCREW - idler limit **32**
SCREW - inlet **20**
SCREW - intake manifold **20**
SCREW - joint **26**
SCREW - lifter **10, 30**
SCREW - mounting **74**
SCREW - muffler **48**
SCREW - nozzle retainer **8**
SCREW - oil base **16**
SCREW - oil pump **24**
SCREW - orifice **50**
SCREW - panel **72**
SCREW - pipe **24**
SCREW - plug **14**
SCREW - pulley **54**
SCREW - pump **26, 30, 32**
SCREW - retainer **28, 30**
SCREW - sensor/cover **44**
SCREW - set **78**
SCREW - shield **76**
SCREW - shoulder **78**
SCREW - solenoid **30**
SCREW - spacer **72**
SCREW - starter **38**
SCREW - strap to engine **68**
SCREW - strap to frame **68**
SCREW - support **8, 28, 72**
SCREW - tank **50**
SCREW - thermostat **26**
SCREW - valve adjust **8**
SEAL **64**
SEAL - copper **28**
SEAL - oil **12, 14**
SEAL - valve stem **8, 40**
SEAL - washer **24**
SEALANT **50**
SEALER - thread **42, 46**
SEAT - valve **10**
SENSOR - fuel level **44**
SENSOR - rpm **58**
SENSOR - water level **50**
SENSOR - water temperature **50, 58**
SHAFT - clamp **78**
SHAFT - idler gear **22**

SHAFT - pinion **38**
SHAFT - rocker arm **8**
SHAFT - water bleed **42**
SHIELD - exhaust tube **76**
SHIELD - muffler **76**
SHIELD - radiator fan **76**
SHIM **26**
SHIM - **54**
SHIM SET **36**
SHROUD - radiator **50**
SLEEVE - insulating **50**
SOCKET **64**
SOLENOID **38**
SOLENOID - speed **58**
SOLENOID - stop **30, 58**
SPACER **6, 26, 54, 56**
SPACER - bracket **72**
SPACER - bumper **72, 74**
SPACER - door latch **72**
SPACER - fan **70**
SPEEDI SLEEVE - front seal **12, 18**
SPRING **8, 24, 34**
SPRING - brush **38**
SPRING - lever **30**
SPRING - nozzle **36**
SPRING - piston **34**
SPRING - valve **8**
SPUD - fuel filter **42**
STARTER **38, 58**
STOPPER **30**
STOPPER - pinion **38**
STRAINER - fuel **42**
STRAP - battery holddown **68**
STRAP - ground **68**
STRIP - bumper **72**
STRIP - foam **76**
STUD - exhaust manifold **20**
STUD - fan spacer **54**
STUD - fuel pump **12, 34**
STUD - housing **70**
STUD - injection pump **12**
STUD - power pack **56**
STUD - valve cover **8**
SUMP - oil **16**
SUPPORT - center **72**
SUPPORT - frame **72**
SUPPORT - pouch **80**
SUPPORT - pump **28**
SUPPORT - right **72**
SUPPORT - rocker arm **8**
SUPPORT - vertical **72**
SWITCH - oil level **16, 58**
SWITCH - oil pressure **58**
SWITCH - on/off **60**

T

TAB - mounting **66**
TANK - expansion **50**
TANK - fuel **44**

TANK - overflow **50**
TAPPET **22, 34**
TERMINAL - pin **64**
TERMINAL - socket **64**
TESTER - compression **28**
THERMOSTAT **26**
TOOL - crimper **66**
TOOL - injection pump gear remover
12
TOOL - seal installer **14**
TOOL - seal remover **14**
TOOL - wedge remover **66**
TUBE - exhaust **48**
TUBE - fuel feed **44**
TUBE - sponge **8**

U

U-BOLT **48**

V

VALVE **28, 34**
VALVE - check **24**
VALVE - exhaust **8**
VALVE - fuel injection **36**
VALVE - intake **8**
VALVE - oil drain **16**
VENT **44**

W

WASHER **8, 18, 22, 28, 54**
WASHER - belleville **56, 72**
WASHER - sealing **12, 24, 26, 30, 40**
WASHER - special **56, 74, 78**
WASHER - spring **78**
WEDGE **64**

Y

YOKE - assembly **38**



Ingersoll Rand's Climate Solutions sector delivers energy-efficient HVACR solutions for customers globally. Its world class brands include Hussmann, a manufacturer of refrigeration and food merchandising solutions, Thermo King, the leader in transport temperature control and Trane, a provider of energy efficient heating, ventilating and air conditioning systems, building and contracting services, parts support and advanced controls for commercial buildings and homes.

Distributed by:

Thermo King Corporate

314 West 90th Street
Minneapolis, MN 55420
Direct (952) 887-2200